

Home Audio System

CB Operating Instructions



©2013 Sony Corporation Printed in China

CMT-SBT100/SBT100B

http://www.sony.net/



WARNING

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.


The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

Excessive sound pressure from earphones and headphones can cause hearing loss.

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 meters.

CAUTION

The use of optical instruments with this product will increase eye hazard.

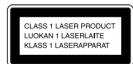

This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior of the unit.

For customers in Australia

This equipment should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

For customers in Europe

Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Belgium, bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

Herby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For details, please access the following URL: <http://www.compliance.sony.de/>

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Music discs encoded with copyright protection technologies

This product is designed to play discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

License and Trademark Notice

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

The BLUETOOTH® word mark and logos are registered trademarks owned by BLUETOOTH SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Android is a trademark of Google Inc.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

The system names and product names indicated in this manual are generally the trademarks or registered trademarks of the manufacturer. ™ and ® marks are omitted in this manual.

For customers in Europe and Australia



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Europe Only




Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.


Location of Controls

Unit (Front)

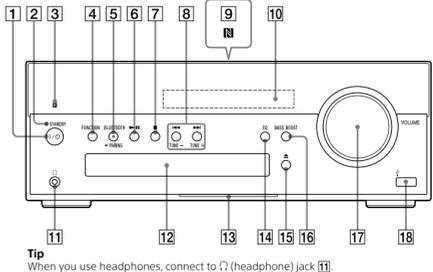

Tip
When you use headphones, connect to (headphone) jack 11.


Remote

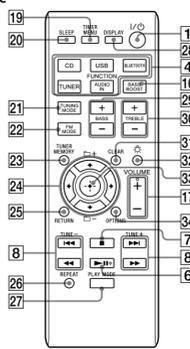

This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

To use the remote


Slide and remove the battery compartment lid, and insert the two supplied R6 (size AA) batteries, side first, matching the polarities shown below.

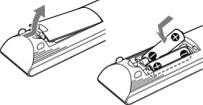

Notes on using the remote

- With normal use, the batteries should last for about 6 months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

Getting Started

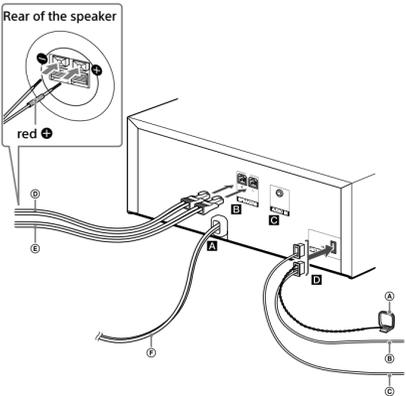

A Power input (AC IN)

After all equipments are connected, connect the power cord (E) to the wall outlet.

B Speakers (left/right) connectors

Firmly connect the right speaker cord (C) to R, and the left speaker cord (D) to L.

C AUDIO IN (external input) jack

Connect optional external equipment with an audio connecting cable (not supplied).

D Antennas

- AM loop antenna (supplied) (CMT-SBT100 only)
- FM lead antenna (supplied) (CMT-SBT100 only)
- DAB/FM lead antenna (supplied) (CMT-SBT100B only)

Find a location and an orientation that provide good reception, and then fix the antennas to a stable surface (window, wall, etc.). Keep the antennas away from the unit, power cord and other AV components to avoid picking noise.

Secure the end of the FM lead antenna with adhesive tape.

To prepare the AM loop antenna




Rewind an antenna cord wound around the antenna and raise the antenna stand.

Stand the antenna and secure it to the sit until it clicks.

Operations

Playing a CD-DA/MP3 disc

- Press CD FUNCTION (4) on the remote or press FUNCTION (4) on the unit repeatedly until "CD" appears in the display (10).
- Press the (open/close) button (15) to open the disc tray (12).
- Load a disc with the label side facing up.

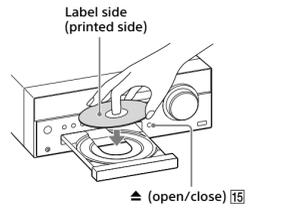

- Press the (open/close) button (15) to close the disc tray (12).
- Press (play/pause) button (6). Playback starts.

Notes


- If you cannot remove the disc, and "LOCKED" appears in the display (10), contact your nearest Sony dealer.
- Do not load a disc with non-standard shapes (e.g., heart, square, star). Doing this may cause irreparable damage to the system.
- Do not use a disc with tape, stickers or paste on it as this may cause malfunction.
- When you remove a disc, do not touch the surface of the disc.

Other operations

| To | Do the following: |
|---------------------------------|--|
| Pause playback | Press (play/pause) (6). To resume play, press the button again. |
| Stop playback | Press (stop) (7). |
| Select a track or file | Press (left/right) (8). |
| Find a point in a track or file | Hold down (left/right) (8) (or (left/right) (8) on the unit) during playback, and release the button at the desired point. |
| Select Repeat Play | Press REPEAT (28) repeatedly until (all tracks of files) or (single track or file) appears. |
| Select a folder on an MP3 disc | Press (open/close) (15) repeatedly. |
| Remove a disc | Press (open/close) (15) on the unit. |

To change the play mode

Press PLAY MODE (27) repeatedly while the player is stopped. You can select Normal Play mode (no indication or "FLDR" appears), Shuffle Play mode ("SHUF" or "FLDR SHUF" appears), or Program Play mode ("PGM" appears).

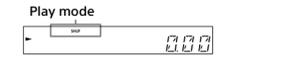

* When "FLDR" or "FLDR SHUF" appears, all the files in the selected folder on the MP3 disc will be played. When playing a CD-DA disc, the system performs the same operation as Normal Play (no indication) or Shuffle Play ("SHUF").

When "PUSH STOP" appears

You cannot change the play mode during playback. Stop playback then change the play mode.

Note on the play mode

If the power cord is disconnected when the system is on, the play mode returns to Normal Play.

Notes on Repeat Play

- Indicates that all tracks or files will be repeated until you stop playback.
- Indicates that a single track or file will be repeated until you stop playback.
- If the power cord is disconnected when the system is on, Repeat Play is cancelled.

Notes on Shuffle Play mode

- When Shuffle Play mode is set to "SHUF", the system shuffle-plays all tracks or files on the disc. When Shuffle Play mode is set to "FLDR SHUF", the system shuffle-plays all tracks or files in selected folder.
- When you turn off the system, the selected Shuffle Play mode ("SHUF" or "FLDR SHUF") is cleared and the play mode returns to Normal or FLDR Play mode.

Notes on saving MP3 discs

- Do not save unnecessary folders or files on a disc that has MP3 files.
- Folders that have no MP3 files are not recognized on the system.
- The system can only play MP3 files that have a file extension of ".mp3".
- Even when file name has the ".mp3" file extension, if it is not an audio MP3 file, playing this file may generate a loud noise, which could cause damage of the system.
- The maximum number of MP3 folders and files compatible with this system is:
 - 999+ folders (including the root folder)
 - 999 files
 - 250 files in a single folder
 - 8 folder levels (in the tree structure of files)
- Compatibility with all MP3 encoding/writing software, CD-/RW drive and recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

Attaching speaker pads

Attach the supplied speaker pads to the bottom of the speakers to prevent slipping.


* This manual explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

- Press and hold FUNCTION (4) and press I/O (1) on the unit.
- "STEP 9K" or "STEP 10K" appears in the display (10). When you change the interval, all the AM preset stations are erased.

Running the DAB Automatic Scan manually (CMT-SBT100B only)

Before you can tune in DAB/DAB+ stations, you must perform a DAB Initial Scan. When you have moved to another area, also perform the DAB Initial Scan manually to update the DAB/DAB+ service information.

- Press TUNER FUNCTION (4) on the remote or press FUNCTION (4) on the unit repeatedly until "DAB" appears in the display (10).
- Press OPTIONS (34) to display the setting menu.
- Press +/- (24) repeatedly to select "INITIAL," then press (33).
- Press the desired track or file number. Press (left/right) (8) repeatedly until the desired track or file number appears.

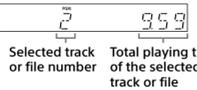

- Press (33).
"...-" appears when the total playing time exceeds 100 minutes for an CD-DA or when you program an MP3 files.

- Repeat steps 3 through 5 to program additional tracks or files, up to a total of 25 tracks or files.

- Press (6).
Your program of tracks or files starts playback. The programmed files or tracks remain available until you remove the disc from the disc tray (12) or unplug the power cord. To play the same program again, press (6).

To cancel Program Play

Press PLAY MODE (27) repeatedly until "PGM" disappears while the player is stopped.

To delete the last track or file of the program

- If the disc is ejected after programming, all the programmed tracks or files are deleted.
- If the power cord is disconnected when the system is on, the programmed tracks or files are deleted.


Listening to the radio

Tuning in a radio station

- Press TUNER FUNCTION (4) on the remote or press FUNCTION (4) on the unit repeatedly until "TUNER FM" or "TUNER AM" appears (CMT-SBT100), or "DAB" or "TUNER FM" appears (CMT-SBT100B) in the display.
- Perform tuning.



For automatic scanning
Press TUNING MODE (21) repeatedly until "AUTO" appears, and then press TUNE +/- (8). Scanning stops automatically when a station is tuned in, and "STEREO" (for stereo programs only) appears in the display (10).

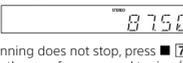

If the scanning does not stop, press (7) to stop scanning, then perform manual tuning (below). When you tune in a station that provides RDS services, information such as the service name or station name is provided by broadcasts.

For manual tuning

Press TUNING MODE (21) repeatedly until "MANUAL" appears, and then press TUNE +/- (8) repeatedly to tune in the desired station.

Notes on DAB/DAB+ stations (CMT-SBT100B only)

- Before tuning in DAB/DAB+ stations, make sure that the DAB Initial Scan has been performed.
- When you tune in a station that provides RDS services, information such as the service name or station name is provided by broadcasts.
- When tuning in a DAB/DAB+ station, it may take a few seconds before you hear any sound.
- Primary service is automatically received when secondary service ends.
- This tuner does not support data services.

Tip

To reduce static noise on a weak FM stereo station, press FM MODE (22) repeatedly until "MONO" appears to turn off stereo reception.

To change the AM tuning interval (except for European and Russian models)

The default setting for AM tuning interval is 9 kHz (or 10 kHz for some areas). Use the buttons on the unit to perform this operation.

- Press FUNCTION (4) on the unit repeatedly to select the AM station.
- Press I/O (1) to turn off the system.

Press and hold FUNCTION (4) and press I/O (1) on the unit.

"STEP 9K" or "STEP 10K" appears in the display (10). When you change the interval, all the AM preset stations are erased.

Creating your own program (Program Play)

- Press CD FUNCTION (4) on the remote or press FUNCTION (4) on the unit repeatedly until "CD" appears in the display (10).
- Press PLAY MODE (27) repeatedly until "PGM" appears while the player is stopped.
- Select a folder (MP3 disc only). Press (open/close) (15) repeatedly to select the desired folder. If you want to program all files in the folder, press (33).
- Select the desired track or file number. Press (left/right) (8) repeatedly until the desired track or file number appears.


- Press +/- (24) repeatedly to select "INITIAL," then press (33).
- Press (33).
Scanning begins. The scanning progress is indicated by asterisks (*****). Depending on the DAB/DAB+ services available in your area, scanning may take a few minutes. When scanning is complete, a list of available services is created.

Notes

- If your country or region does not support DAB/DAB+ broadcast, "NO SERV" appears.
- When USB cable connection is necessary, connect the USB cable supplied with the USB device to be connected. For details on connection, refer to the operation manual of the USB device.
- If the power cord is disconnected when the system is on, Repeat Play is cancelled.

Presetting radio stations

- Tune in the desired station.
- Press TUNER MEMORY (23).

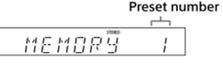

- Press TUNE +/- (8) repeatedly to select a preset number. If another station is already assigned to the selected preset number, the station is replaced by the new station.

- Press (33) to register the station. "COMPLETE" appears in the display (10).

- Repeat steps 1 through 4 to register other stations. You can preset up to 20 FM and 10 AM stations (CMT-SBT100 only), or 20 DAB/DAB+ and 20 FM stations (CMT-SBT100B only).

To tune in to a preset radio station

Press TUNING MODE (21) repeatedly until "PRESET" appears in the display (10), and then press TUNE +/- (8) to select the preset number with which the desired station is registered.

Playing a file on a USB device

You can play audio files stored on a USB device by connecting a USB memory or USB device to the system. The playable audio format is MP3/WMA/AAC*.

Check the websites below for the information about compatible USB devices. For customers in Europe and Russia: <http://support.sony-europe.com/> For customers in Latin America: <http://www.sony-latin.com/index.crp> For customers in other countries/regions: <http://www.sony-asia.com/support>

- Files with DRM (Digital Rights Management) copyright protection or files downloaded from an online music store cannot be played on this system. If you try to play one of these files, the system plays the next unprotected audio file.

- Press USB FUNCTION (4) on the remote or press FUNCTION (4) on the unit repeatedly until "USB" appears in the display (10).

- Connect the USB device directly or via the USB cable supplied with the USB device to the USB port (18) on the unit.

- Press (6) (6) to start playback.

| To | Do the following: |
|------------------------|---|
| Pause playback | Press (play/pause) (6). To resume play, press the button again. |
| Stop playback | Press (stop) (7). To resume play, press (play/pause) (6). To cancel resume play, press (stop) (7) again*. |
| Select a folder | Press (open/close) (15) repeatedly. |
| Select a file | Press (left/right) (8). |
| Find a point in a file | Hold down (left/right) (8) on the unit) during playback, and release the button at the desired point. |
| Select Repeat Play | Press REPEAT (28) repeatedly until (all audio files) or (single audio file) appears. |

* When playing a VBR MP3/WMA file, the system may resume playback from a different point.

* When resume play is canceled, the display returns to the number of folders.

To change the play mode

Press PLAY MODE (27) repeatedly while the player is stopped. You can select Normal Play mode (no indication or "FLDR" appears*), or Shuffle Play mode ("SHUF" or "FLDR SHUF" appears**).

- When no indication is selected, the system plays all files on the USB device. When "SHUF" is selected, the system plays all files in the selected folder on the USB device.
- When "SHUF" is selected, the system shuffle-plays all audio files on the USB device. When "FLDR SHUF" is selected, the system shuffle-plays all audio files in the selected folder.

Note on the play mode

If the power cord is disconnected when the system is on, the play mode returns to Normal Play.

Notes on Repeat Play

- Indicates that all files will be repeated until you stop playback.
- Indicates that a single file will be repeated until you stop playback.
- If the power cord is disconnected when the system is on, Repeat Play is cancelled.

Note on Shuffle Play mode

When you turn off the system, the selected Shuffle Play mode ("SHUF" or "FLDR SHUF") is cleared and the play mode returns to Normal Play mode (no indication or "FLDR").

Notes

- The playback order for the system may differ from the playback order of the connected digital music player.
- Be sure to turn off the system before removing the USB device. Removing the USB device while the system is turned on may corrupt the data on the USB device.
- When USB cable connection is necessary, connect the USB cable supplied with the USB device to be connected. For details on connection, refer to the operation manual of the USB device.
- It may take time before "READING" appears after connecting, depending on the type of USB device connected.
- Do not connect the USB device through a USB hub.
- When the USB device is connected, the system reads all the files on the USB device. If there are many folders or files on the USB device, it may take a long time to finish reading the USB device.
- With some connected USB devices, it may take a long time to transmit signals from the system or to finish reading the USB device.
- Compatibility with all encoding/writing software cannot be guaranteed. If audio files on the USB device were originally encoded with incompatible software, those files may produce noise or may malfunction.
- The maximum number of folders and files on the USB device compatible with this system is:
 - 1,000+ folders (including the root folder)
 - 3,000 files
 - 250 files in a single folder
 - 8 folder levels (in the tree structure of files)
- This includes folders that have no playable audio file and empty folders. The number of folders that the system can recognize may be less than actual number of folders, depending on the folder structure.

- The system does not necessarily support all the functions provided in a connected USB device.
- Folders that have no audio files are not recognized.
- The audio formats that you can listen to with this system are as follows:
 - MP3: file extension ".mp3"

5 Touch your smartphone to the unit. 2 Touch your smartphone to the N-Mark on the unit and maintain contact until the smartphone vibrates.



Complete the connection with your smartphone, following the instructions on the screen.

Refer to the user’s guide of your smartphone for the part of your smartphone used as touch contact.

- To disconnect the established connection, touch your smartphone to the N-Mark on the unit.
- When you touch an NFC-compliant smartphone to the unit while another BLUETOOTH device is connected with this system, the BLUETOOTH device is disconnected and the system is connected with the smartphone.
- If you touch the smartphone connected with this system to another NFC-compliant BLUETOOTH headset or speaker, the smartphone is disconnected from the system and connected with the touched BLUETOOTH device.

Tip You can perform a pairing operation or attempt to make a BLUETOOTH connection with another BLUETOOTH device while the BLUETOOTH connection is established with one BLUETOOTH device. The currently established BLUETOOTH connection is cancelled when BLUETOOTH connection with another device is successfully established.

To erase the pairing registration information

1 Press BLUETOOTH FUNCTION on the remote or press FUNCTION on the unit repeatedly until “BLUETOOTH” appears in the display .

When the system is connected with a BLUETOOTH device, the device name set for the connected BLUETOOTH device appears in the display of the system. Press BLUETOOTH on the unit to cancel the connection with that BLUETOOTH device then display “BLUETOOTH.”

2 Press OPTIONS to display the setting menu.

3 Press repeatedly to select “DEL LINK,” then press .

4 Press repeatedly to select “OK,” then press . “COMPLETE” appears and all the pairing information is erased.

Note If you have erased the pairing information, you cannot make a BLUETOOTH connection unless pairing is performed again. To connect with a BLUETOOTH device again, you must enter the passkey on the BLUETOOTH device.

Connecting by one-touch action (NFC)

NFC enables data communication by just touching your device to a specified location. Compatible smartphones are those equipped with the NFC function (compatible operating system: Android version 2.3.3 or later with the exception of Android 3.x).

Check the website below for information on compatible devices.

For customers in Europe and Russia: **http://support.sony-europe.com/**

For customers in Latin America:

http://www.sony-latin.com/index.crp

For customers in other countries/regions: **http://www.sony-asia.com/support**

Preparation on your smartphone (Android)
An NFC-compliant application must be installed on your smartphone. If not installed, you can download “NFC Easy Connect” from Google Play.

- In some countries and regions, NFC-compliant application may not be downloaded.
- For some smartphones, this function may be available without downloading “NFC Easy Connect.” In this case, the operation and specifications of the smartphone may be different from the description in this manual.

1 Install the application.

If you access using 2D Code

Read the following 2D Code to access.



2 Set your smartphone to enable the NFC function.

For details, refer to the user’s guide supplied with your smartphone.

About the “NFC Easy Connect” application

This is a free application especially used for Android. Search the internet for detailed information on “NFC Easy Connect” and download the application.

- In some countries and regions, NFC-compliant application may not be downloaded.

Making a connection with your smartphone by one-touch action
Just touch your smartphone to the system. The system is turned on automatically, and pairing and BLUETOOTH connection are established.

1 Start the “NFC Easy Connect” application on your smartphone.

Check that the application display appears.

4 Start playback on the connected component.

Adjust the volume on the connected component during playback.

5 Press VOLUME +/- on the remote or turn the VOLUME dial on the unit left or right to adjust the volume.

Note

The system may enter Standby mode automatically if the volume level of the connected component is too low. Adjust the component’s volume accordingly.

Setting the Automatic Standby function

With the Automatic Standby function, the system enters Standby mode automatically in about 15 minutes when there is no operation or audio signal output. “AUTO STBY” appears in the display for 2 minutes before the system enters Standby mode. By default, the Automatic Standby function is turned on. You can turn off the function using the option menu.

1 Press OPTIONS to display the setting menu.
2 Press repeatedly to select “AUTO STBY,” then press .
3 Press repeatedly to select “ON” or “OFF,” then press .

Notes

- The Automatic Standby function is invalid for the tuner function (FM/AM/DAB), even when you have enabled it.
- The system may not enter Standby mode automatically in the following cases:
 - while an audio signal is being detected
 - during playback of audio tracks or files
 - while the preset Sleep Timer or Play Timer is in process
 - The system counts down the time (15 minutes) again until it enters Standby mode, even when Automatic Standby function is enabled when a USB device is connected or when a button on the remote or unit is pressed.
- AM is available for CMT-SBT100 only, or DAB is for CMT-SBT100B only.

Setting the BLUETOOTH Standby mode

You can enable/disable BLUETOOTH Standby mode. When BLUETOOTH Standby mode is enabled, the system enters Wait mode for BLUETOOTH connection even when the system is turned off. If the system receives a playback command from the connected BLUETOOTH device, it turns on and music is played back. The BLUETOOTH Standby mode is disabled by default.

1 Press OPTIONS to display the setting menu.
2 Press repeatedly to select “BT STBY,” then press .
3 Press repeatedly to select “ON” or “OFF,” then press .

4 Press I/O (power) to turn off the system.

When “BT STBY” is set to “ON,” the system turns on and you can listen to music by activating BLUETOOTH on the connected component.

Note “BT STBY” does not appear in the setting menu, if the BLUETOOTH device is not registered on this system.

Setting the wireless signal ON/OFF

When the unit is turned on, you can control a BLUETOOTH signal. The default setting is ON.

1 Turn on the unit.
2 If flashes in the display window, press and hold BASS BOOST and BLUETOOTH of the unit.
3 After “RF OFF” (wireless signal is off) or “RF ON” (wireless signal is on) appears, release the button.

Tips

- When this setting is set to OFF, the BLUETOOTH function is not available.
- When this setting is OFF, the unit can be turned on using the one-touch action (NFC) from a smartphone/tablet.
- When this setting is OFF, the BLUETOOTH Standby mode cannot be set.
- When the BLUETOOTH Standby mode is ON, the BLUETOOTH Standby mode turns OFF when this setting is turned OFF.
- When this setting is OFF, the unit and BLUETOOTH device cannot be paired.
- The setting is saved even if you turn off the system.

Adjusting the sound

Setting the bass boost

Press BASS BOOST repeatedly to select “ON” or “OFF.”

Adjusting the bass and treble

Press BASS +/- to adjust bass or TREBLE +/- to adjust treble.

Or, press EQ on the unit repeatedly to select “BASS” or “TREBLE,” and adjust the selected item using TUNE +/- .

Tip

This system is equipped with the DSEE function to reproduce clear treble despite degradation caused by compression. The DSEE function is usually activated automatically by recognizing the sound source, but it may not be activated depending on the function in use.

Changing the display

| To | Do the following: |
|---|---|
| View information on the display ¹⁾ | Press DISPLAY repeatedly when the system is on. |
| Display clock | Press DISPLAY repeatedly when the system is off. ²⁾ The clock appears for about 8 seconds. |

¹⁾ You can view the information described below during playback of a CD-DA/MP3 disc.

²⁾ The information does not appear in BLUETOOTH mode.

CD-DA disc

—remaining playing time of a track during playback
—total remaining playing time

MP3 disc

— track or file name
— artist name
— album name

Notes on the display information

- Characters that cannot be displayed appear as “.”.
- The following are not displayed:
 - remaining playing time or total playing time for an MP3 disc
 - remaining playing time for an MP3 file
 - The following are not displayed correctly:
 - elapsed playing time of an MP3 file encoded using VBR (Variable Bit Rate).
 - folder and file names that do not follow either the ISO9660 Level 1/Level 2 or Joliet in the expansion format.
 - The following are displayed:
 - total playing time for a CD-DA disc (except when PGM mode is selected and the player is stopped)
 - remaining playing time for a track of CD-DA disc
 - remaining playing time for a CD-DA disc (only when Normal Play mode is selected during playback)
 - ID3 tag information for MP3 files. ID3 version 2 tag information display has priority when both ID3 version 1 and version 2 tags are used for a single MP3 file.
 - up to 64 characters for an ID3 tag, where characters allowed are uppercase letters (A to Z), numbers (0 to 9), and symbols [“\$” “!” “* “+ “- “/ “< > @” \ “_ “ | “] “? “ ^ “]

Notes on the DAB/DAB+ display information (CMT-SBT100B only)
The following is also displayed;

- up to 8 characters of service name; up to 128 characters of DLS (Dynamic Label Segment) and up to 16 characters of ensemble label.
- a value between 0 and 100 indicating the signal quality is displayed.

Using the timers

The system offers Sleep Timer and Play Timer. The Sleep Timer has priority over the Play Timer.

Setting the Sleep Timer

The system is turned off automatically after the time set for the Sleep Timer is elapsed.

The Sleep Timer works even if the clock is not set.

1 Press SLEEP repeatedly to specify the time.

- Select “30MIN” to turn off the system after 30 minutes.
- To cancel the Sleep Timer, select “OFF.”

Setting the Play Timer

You can listen to a CD-DA or MP3 disc or radio every day at a preset time. Make sure you have set the clock before setting the timer.

1 Prepare the sound source, and turn the VOLUME dial on the unit left or right or press VOLUME +/- on the remote to adjust the volume.

The available sound sources are: CD, USB, and TUNER (FM, AM or DAB)* FUNCTION. To start from a specific CD track, audio file or radio station, create your own program.

- * FM or AM for CMT-SBT100, or FM or DAB for CMT-SBT100B.

2 Press TIMER MENU .

3 Press repeatedly to select “PLAY SET,” then press .

The start time flashes in the display.

4 Set the time to start operation. Press repeatedly to set the hour, then press .

The minute indication flashes. Use the procedure above to set the minutes. When the start time is set, the system goes to the stop time setting.

5 Use the same procedure as in step 4 to set the time to stop the operation.

If “TIME NG” flashes in the display

The start time and the stop time are set to the same time. Change the stop time.

6 Select the sound source.

Press repeatedly until the desired sound source appears, then press . For the available sound sources, see step 1.

After the sound source selection is finished, the confirmation display for the Play Timer appears.

7 Press I/O (power) to turn off the system.

•When the Play Timer is set, the system automatically turns on about 15 seconds (for FM, AM or DAB*) or about 90 seconds (for a CD-DA disc or USB device) before the preset time.

- The Play Timer does not work if the system is on at the preset time. Be careful not to operate the system until it is turned on and starts playing with the timer.
- * AM is available for CMT-SBT100 only, or DAB is for CMT-SBT100B only.

To check the setting

1 Press TIMER MENU .
2 Press repeatedly to select “TIMER SEL,” and then press .
3 Press repeatedly to select “PLAY SEL,” and then press . The timer setting appears in the display.

To cancel the timer

Repeat the same procedure as “To check the setting” until “OFF” appears in step 3, and then press .

To change the setting

Start over from step 1.

Notes

- When the sound source for a Play Timer is set to a radio station that you set using Automatic Scanning (AUTO) or Manual Tuning (MANUAL) and you change the radio frequency or band after setting the timer, the radio station setting for the timer will also be changed.
- When the sound source for a Play Timer is set to a radio station tuned from a preset radio station (preset number 1 to 20), and if you change the frequency of the radio station or band after setting the timer, the radio station setting for the timer will not change. The radio station tuning for the timer is fixed at what you set for it.

Tip

The Play Timer setting remains as long as the setting is not cancelled manually.

Troubleshooting

1 Make sure the power cord is firmly connected.
2 Find your problem in the checklist below, and take the indicated corrective action.

If the issue persists, contact your nearest Sony dealer.

If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following item.

- Is the speaker cord shorted out? After the STANDBY indicator stops flashing, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

The system does not turn on.

•Is the power cord plugged in correctly?

The system has entered Standby mode unexpectedly.

- This is not a malfunction. The system enters Standby mode automatically in about 15 minutes when there is no operation or audio signal output. See “Setting the Automatic Standby function.”
- There are many folders or files on the USB device.
- The file structure is extremely complex.
- Not enough free space in the memory.
- The internal memory is fragmented.

The clock setting or the Play Timer operation has been cancelled unexpectedly.

- If about a minute elapses with no operation, the clock setting or Play Timer setting is cancelled automatically. Perform the operation again from the beginning.

There is no sound.

- Make sure the speaker cords are connected correctly.
- Check the supplied speakers are used.
- Turn the VOLUME dial on the unit clockwise or press VOLUME + on the remote to turn up the volume.
- Make sure the headphones are disconnected from the headphone jack.
- Make sure an external component is connected correctly to the AUDIO IN jack and set the function to AUDIO IN.
- The specified station may have temporarily stopped broadcast.
- The balance of left and right sound is false. Check the left and right speakers are connected correctly.
- Put the speakers symmetrically.
- Connect the supplied speakers.

Severe hum or noise occurs.

- Move the system away from sources of noise.
- Connect the system to a different wall outlet.
- Use of an AC power tap with a noise filter (not supplied) is recommended.

The remote does not function.

- Remove any obstacles between the remote and the remote sensor on the unit, and position the unit away from fluorescent lights.
- Point the remote at the remote sensor on the unit.
- Move the remote closer to the system.

The USB device cannot be charged.

- Make sure the USB device is connected securely.
- Charging cannot be made when the power of the system is off.
- The USB device may not be supported by this system. Check the information on the websites about compatible USB devices.

Tuner

Severe hum or noise occurs (“STEREO” flashes in the display window), or broadcasts cannot be received.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).
- Oscillation of the speakers may be the cause of sound skips, depending on the volume level. Move the speakers away from the unit or change the location of the speakers.

Play does not start from the first track or file.

Return to normal play by pressing PLAY MODE repeatedly in stop mode until both “PGM” and “SHUF” in the display disappear.

Starting playback takes more time than usual.

- The following discs can increase the time it takes to start playback:
 - a disc recorded with a complicated tree structure.
 - a disc recorded in multi-session format.
 - a disc that has many folders.

USB device

An unsupported USB device is connected.

- If you connect an unsupported USB device, the following problems may occur. Check the information on the websites about compatible USB devices with URLs listed under “Playing a file on a USB device.”
 - The USB device is not recognized.
 - File or folder names are not displayed on this system.
 - Playback is not possible.
 - The sound skips.
 - There is noise.
 - A distorted sound is output.

There is no sound.

- The USB device is not connected correctly. Turn off the system, and then reconnect the USB device.

There is noise, skipping, or distorted sound.

- An unsupported USB device is connected. Connect a supported USB device.
- Turn off the system, then reconnect the USB device and turn on the system.
- The music data itself contains noise, or the sound is distorted. Noise may have been entered when creating music data due to the conditions of the computer. In this case, delete the file and send the music data again.
- The bit rate used when encoding the files was low. Send files encoded with higher bit rates to the USB device.

“READING” is displayed for an extended time, or it takes a long time before playback starts.

- The reading process may take a long time in the following cases.

- There are many folders or files on the USB device.
- The file structure is extremely complex.
- Not enough free space in the memory.
- The internal memory is fragmented.

The file or folder name (album name) is not displayed correctly.

- Send the music data to the USB device again, as the data stored in the USB device may have been corrupted.
- The character code that can be displayed by this system are as follows:
 - Upper cases (A to Z).
 - Numbers (0 to 9).
 - Symbols (< > +, [,] @ \ _).
 - Other characters appear as “.”.

The USB device is not recognized.

- Turn off the system and reconnect the USB device, then turn on the system.
- Check the information on the websites about compatible USB devices with URLs listed under “Playing a file on a USB device.”
- The USB device does not work properly. Refer to the operating manual supplied with the USB device for how to deal with this problem.

Play does not start.

- Turn off the system and reconnect the USB device, then turn on the system.
- Check the information on the websites about compatible USB devices with URLs listed under “Playing a file on a USB device.”

Play does not start from the first track.

- Set the play mode to Normal Play mode.

Precautions

Discs that this system CAN play

- Audio CD-DA discs
- CD-R/CD-RW (audio data of CD-DA tracks and MP3 files)

Do not use a CD-R/CD-RW disc with no data stored. Doing so may damage the disc.

Discs that this system CANNOT play

- CD-ROM
- CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/Level 2, Joliet
- CD-R/CD-RW recorded in multi-session format and not closed the session
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW that have scratches or are dirty, or CD-R/CD-RW recorded with an incompatible recording device
- CD-R/CD-RW which is finalized incorrectly
- Discs containing files other than MPEG 1 Audio Layer-3 (MP3) files
- Discs of non-standard shape (for example, heart, square, star)
- Discs that have adhesive tape, paper, or sticker attached to them
- Rental or used discs with attached seals where the glue extends beyond the seal
- Discs that have labels printed using ink that feels tacky when touched

Notes on CD-DA discs

- Before playing, wipe the disc with a cleaning cloth from the center out to the edge.
- Do not clean discs with solvents, such as benzine, thinner, or commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.

On safety

- Completely disconnect the power cord (mains lead) from the wall outlet (mains) if it is not going to be used for an extended period of time. When unplugging the system, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again.
- The AC power cord can be changed only by a qualified service facility.

On placement

- Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the system on surfaces that have been specially treated (for example, with wax, oil, polish)