



Use the headphones as of a high density enclosure, forcing them against your ears may result in eardrum damage. Inserting the headphones against your ears may produce a diaphragm click sound. This is not a malfunction.

Others
You can use the unit as wired headphones, use the supplied headphone cable only. Make sure that the headphone cable is properly inserted.

Do not place this unit in a place exposed to humidity, dust, soot or steam, or in a car or place subject to direct sunlight. The use of the unit in these conditions would be dangerous if you are unable to hear ambient sound, such as railroad crossings, horns, sirens, or a vehicle approaching from behind.

Do not put weight or pressure on this unit as it may cause the unit to deform during long storage. Do not subject the unit to excessive shock. Clean the unit with a soft dry cloth. Do not use the unit in water. The unit is not waterproof. Remember to follow the precautions below. Be careful not to drop the unit into a sink or other container. Do not use the unit in humid locations or bad weather, such as in the rain or snow. Do not get the unit wet. Do not touch the unit with your hands, or put the unit in a damp article of clothing, the unit may get wet and this may cause a malfunction of the unit.

If you experience a problem with your unit, stop using the unit immediately.

If the car pads may deteriorate due to longterm storage or use.

If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Reference Guide	 GB
Guide de référence	 FR
Guía de referencia	 ES
Referenzanleitung	 DE
Referentiegids	 NL
Guida di riferimento	 IT
Felhasználói útmutató	 HU
Przewodnik	 PL

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	
<div> <div></div> <div>Optional replacement car pads can be ordered from your nearest Sony dealer.</div> </div>	

<div> <div></div> <div>Made for iPod iPhone DIGITAL NO</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>1 4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

If the problem persists even after the resetting operation above, initialize the unit as follows.

Disconnect the micro-USB cable from the micro-USB port, turn off the unit, then hold down the **○** and **■** buttons simultaneously for about 10 seconds.

Press the **○** button 4 times, and the unit is reset to the factory settings. All pairing information is deleted.

After the unit is reset, reconnect to your iPhone or computer. In this case, delete the pairing information of the unit from the iPhone or computer, and then pair them again.

What is noise cancelling?
The noise cancelling circuit actually reduces outside noise with multi-microphones and a noise cancelling system. Noise cancelling is not a function of the noise cancelling system.

Depending on how you wear the unit, the noise cancelling function may not be effective. In these cases, take off the unit and put it on again.

When the noise cancelling function is not effective, noise in the low frequency band primarily (although noise is reduced, it is not cancelled completely).

When you use the unit in a train or a car, noise may occur depending on sound conditions.

Mobile phones may cause interference and noise. Should this occur, locate the unit further away from the mobile phone.

Do not cover the microphone (the unit **○**) with your hands. The noise cancelling function (noise canceling) may occur, it may not work properly, or a beeping sound (microphone) may occur. In these cases, take your hands off of the microphone of the unit. (Fig. **○**)

On wearing the unit
Because the headphones are of a high density enclosure, forcing them against your ears may result in eardrum damage.

Inserting the headphones against your ears may produce a diaphragm click sound. This is not a malfunction.

Others
You can use the unit as wired headphones, use the supplied headphone cable only. Make sure that the headphone cable is properly inserted.

Do not place this unit in a place exposed to humidity, dust, soot or steam, or in a car or place subject to direct sunlight. The use of the unit in these conditions would be dangerous if you are unable to hear ambient sound, such as railroad crossings, horns, sirens, or a vehicle approaching from behind.

Do not put weight or pressure on this unit as it may cause the unit to deform during long storage. Do not subject the unit to excessive shock. Clean the unit with a soft dry cloth. Do not use the unit in water. The unit is not waterproof. Remember to follow the precautions below.

Be careful not to drop the unit into a sink or other container. Do not use the unit in humid locations or bad weather, such as in the rain or snow. Do not get the unit wet. Do not touch the unit with your hands, or put the unit in a damp article of clothing, the unit may get wet and this may cause a malfunction of the unit.

If you experience a problem with your unit, stop using the unit immediately.

If the car pads may deteriorate due to longterm storage or use.

If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	
<div> <div></div> <div>Optional replacement car pads can be ordered from your nearest Sony dealer.</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

<div> <div></div> <div>WH-CH700N</div> </div>	<div> <div></div> <div>Bluetooth®</div> </div>
<div> <div></div> <div>4 7 2 9 8 2 0 4 1 (1)</div> </div>	

--

