

ECO
FUNCTION

Eco mode can be used for most floor coverings, Hard floor or Carpet but it is suggested NOT to be used when using the the hose and accessories for above floor cleaning.

Simply activate Eco mode after switching on to reduce the power and extend the battery life.

ON

ECO
MODE
LOW
POWER

4

Above Floor Cleaning

OFF

ON

DO NOT
USE CARPET
MODE WHEN
USING THE
HOSE/TOOLS

OFF

5

Bin Empty

OFF

6

Filter Cleaning

OFF

7

Safety Protection System

OFF

OFF

OFF

BORN INNOVATIVE

APPLY MANUAL LABEL
HERE

User Manual

Please read the 'Instructions for Safe Use and Fittings' before using your product.

www.hoover.co.uk

1

Contents & Assembly

2

The Battery

3

Using Your cleaner

4

Above Floor Cleaning

5

Emptying Your Bin

6

Filter Cleaning

7

Safety Protection System

HOOVER

Part No. 48026536

