

# Installation

### WHERE TO PUT YOUR DRYER

The dryer should be placed where air can freely circulate around it preferably near a window that can be opened to reduce the possibility of condensation occurring while the dryer is in use.

**If the dryer is enclosed or fitted under a work surface a gap of at least 50 mm (2") must be allowed above the top for the full width of the dryer and at least 25 mm (1") either side. This allows air to enter into the rear air inlet. The dryer must never be run in a cupboard with a closed door.**


### ELECTRICAL CONNECTIONS

The socket must be grounded. The power supply cord should be checked periodically and, if required, replaced by a cord specially prepared for this dryer.

### FLUFF FILTER

You must clean the fluff filter after **EVERY** drying cycle.

To remove the filter

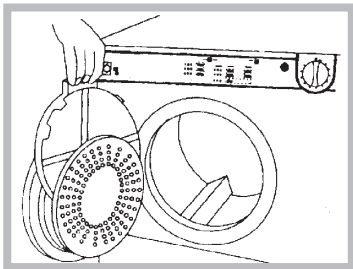

**Step 1** - Open the door of your dryer, remove the filter.

**Step 2** - Clean any fluff deposits from the filter mesh, and refit the filter.

**Step 3** - Make sure the filter is pushed fully home - **NEVER** run the dryer without the filter in position.

**! Failure to clean the filter after EVERY drying cycle will affect the drying performance of your machine.**

# Laundry

### MAX LOAD SIZE

Do not load more than maximum capacity. These numbers refer to dry weight:

Natural fibres: 4kg max

Synthetic fibre: 2kg max

### WASH CARE LABELS

Look at the labels on your garments, especially when tumble drying for the first time. The following symbols are the most common:



May be tumble dried

The dryer must never be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the dryer door.



This symbol reminds you to read this booklet.

### VENTILATION

When the dryer is in use there has to be adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

The vent tube should not exceed 2.4 metres in length. The tube should be kept clear of the air intake vent and kinks or 'U' bends must be avoided as these will obstruct the tube and trap condensation.



Do **NOT** tumble dry



Tumble dry at high heat setting



Tumble dry at low heat setting


### ITEMS NOT SUITABLE FOR TUMBLE DRYING

- Articles that contain rubber or rubber-like materials or plastic film, any flammable articles or objects that contain flammable substances.
- Glass fibres.
- Items which have been dry cleaned.
- Large bulky items (quilts, sleeping bags, etc). These expand when drying and prevent airflow through the dryer.

# Warnings

! This appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be followed carefully.

## GENERAL SAFETY

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This tumble dryer has been designed for home, and not professional, use.
- Do not touch the appliance while barefoot or with wet hands or feet.
- Unplug the machine by pulling on the plug, not the cord.
- After using the dryer, turn it off and unplug it. Keep the door closed to make sure that children do not use it as a toy.
- Children should be supervised to ensure that they do not play with the dryer.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away from the appliance unless continuously supervised.
- The appliance must be installed correctly and have proper ventilation. The air intake at the front of the dryer should never be obstructed (see Installation).
- Never direct the vent tube outlet towards the air intake at the back of the machine
- Never allow the tumble dryer to recycle exhaust air.
- Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base.
- Check to see if the dryer is empty before loading it.
-  The back of the dryer could become very hot. Never touch it while in use.
- Do not use the dryer unless the filter is securely in place (see Maintenance)
- Do not overload the dryer (see Laundry for maximum loads).
- Do not load items that are dripping wet.
- Carefully check all instructions on clothing labels (see Laundry).
- Do not tumble dry large, very bulky items.
- Do not tumble dry acrylic fibres at high temperatures.
- Complete each programme with its cool tumble phase.

- Do not turn off the dryer when there are still warm items inside.
- Clean the filter after each use (see Maintenance).
- Do not allow lint to collect around the dryer.
- Never climb on top of the dryer. It could result in damage.
- Always follow electrical standards and requirements. (see Installation).
- Always buy original spare parts and accessories (see Service).

## TO MINIMIZE THE RISK OF FIRE IN YOUR TUMBLE DRYER, THE FOLLOWING SHOULD BE OBSERVED

- Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle. It is a fire hazard to dry items that HAVE NOT been washed with water.
- Do not dry garments that have been treated with chemical products.
- Do not tumble dry items that have been spotted or soaked with vegetable or cooking oils, this constitutes a fire hazard. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil, Oxidation creates heat. If the heat cannot escape, items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics containing vegetable or cooking oil or those that have been contaminated with hair care products be placed in a tumble dryer they should first be washed with extra detergent - this will reduce, but not eliminate the hazard. The cool tumble phase should be used to reduce the temperature of the items. They should not be removed from the dryer and piled or stacked while hot.
- Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry cleaning solvents or other flammable or explosive substances. Highly flammable substances commonly used in domestic environments including cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Do not tumble dry items containing foam rubber (also known as latex foam), or similarly textured rubber like materials. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softener or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener product.
- Do not tumble dry undergarments that contain metal reinforcements eg. bras with metal reinforcing wires. Damage to the tumble dryer can result if the metal reinforcements come loose during drying.
- Do not tumble dry rubber, plastic articles such as shower caps or babies waterproof covers, polythene or paper.
- Do not tumble dry rubber backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.
- Remove all objects from pockets, especially lighters.

**WARNING:** Never stop the dryer before the end of the drying cycle. The final part of a tumble dryer cycle without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

## Dryer Description

### Control panel



The HEAT button selects drying temperature.

OUT: LOW heat    IN: HIGH heat

The **TIMER** knob sets the drying time: rotate it clockwise, **NEVER COUNTER-CLOCKWISE**, until the indicator is pointing to the drying time you want to select.

Set the program knob to OFF to switch off the machine.

### CHOOSING A PROGRAMME

1. Plug the dryer into the electrical socket.
2. Sort your laundry according to fabric type.
3. Open the door and make sure the filter is clean and in place.
4. Load the machine and make sure items are not in the way of the door seal. Close door.
5. Set the temperature with the HEAT button. High heat for Cotton and synthetics. Low heat for delicates and acrylics.
6. Select a drying time by rotating the TIMER knob clockwise.

The tables below show APPROXIMATE drying times in minutes. Weights refer to dry garment weights.

Cottons - High (full) Heat			
Drying times 800-1000rpm spin in washing machine			
1kg	2kg	3kg	4kg
30-40mins	40-55mins	60-70mins	85-100mins

Synthetics - High (full) Heat	
Drying times on reduced spin in washing machine	
1kg	2kg
20-30mins	30-45mins

Acrylics - Low (gentle) Heat	
Drying times on reduced spin in washing machine	
1kg	2kg
30-50mins	50-70mins

## Troubleshooting

Before you call the service centre go through the following troubleshooting suggestions:

### PROBLEM:

The dryer won't start.

### POSSIBLE CAUSES/SOLUTION:

- The plug is not in the socket or making contact.
- There has been a power failure.
- The fuse has blown. Try to plug another appliance into the socket.
- You are using an extension cord? Try to plug the dryer directly into the socket.
- The timer knob has not been set properly.
- The start button has not been pressed.
- The start button was pressed with the door open. Make sure the door is closed before pressing the start button.

### PROBLEM:

It is taking a long time to dry.

### POSSIBLE CAUSES/SOLUTION:

- The filter has not been cleaned.
- The temperature setting is not correct.
- The correct time has not been selected.
- The vent tube or air intake vent is obstructed.
- The items were too wet.
- **The dryer was over loaded.**

## PRODUCT DATA (EU Regulation 392/2012)

Brand <b>INDESIT</b>	Models <b>IS 41 V</b>
Rated capacity of Cotton laundry for the standard programme at full load <b>4.0 kg</b>	Energy efficiency class <b>C</b>
The weighted Annual Energy Consumption (AE <sub>c</sub> ) <b>329.6 kWh</b> . Consumption per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.	
This household tumble dryer is a <b>Non-Automatic Air-Vented Dryer</b>	
Energy consumption: full load E <sub>dry</sub> <b>2.85 kWh</b> , partial load E <sub>dry1/2</sub> <b>1.46 kWh</b>	
Power consumption: off-mode (P <sub>o</sub> ) <b>0.0 W</b> , left-on mode (P <sub>l</sub> ) - <b>W</b>	
Duration of the 'left-on mode' for power management systems - Minutes	
The "standard cotton programme" suitable for drying normal wet cotton laundry that is the most efficient programme in terms of energy consumption for cotton used at full and partial load is <b>High Heat:</b>	
Programme time (Minutes) weighted (T <sub>l</sub> ) full & partial load <b>71</b> , full load (T <sub>dry</sub> ) <b>94</b> , partial load (T <sub>dry1/2</sub> ) <b>53</b>	
Airborne acoustical noise emissions <b>66 dB(A)</b> re 1 pW.	

"consumer information in compliance with EU Regulation 932/2012"


Typical Energy used – Synthetics full load **0.82 kWh**, partial load **not applicable**

Typical Drying time – Synthetics full load **30 minutes**, partial load **not applicable**

This data is also available on the website <http://www.INDESIT.com/INDESIT>

## DISPOSAL OF OLD ELECTRICAL APPLIANCES

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE) requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

 The crossed out "wheeled bin" symbol on the product reminds you of your obligation that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



1 9 5 1 1 9 0 7 1 0 1

11/2016 Xerox Fabriano

## Repairs and After Sales

For product help and advice, repairs, spare parts or accessories, we're here to help.

For local repair engineers - **03448 111 606**  
ROI - **0818 313 413**

UK standard local rate applies  
ROI local Irish rate applies

For Parts and Accessories visit:  
**[parts.indesit.co.uk/shop](http://parts.indesit.co.uk/shop)**

Please remember to register your appliance at  
**[www.indesit-service.co.uk](http://www.indesit-service.co.uk)**  
to activate your 10 year parts guarantee.

## How to find your model and serial number:

