

### **OWNER'S MANUAL**

# LG Wi-Fi Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

MODEL

SN11RG (SN11RG, SPN8-W, SPN11-SL, SPN11-SR)

### **Safety Information**



RISK OF ELECTRIC SHOCK



CAUTION: TO REDUCE THE RISK OF FLECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO OUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's

enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions

in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD. DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION:** The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

#### CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

CAUTION: Be careful to make sure children do not put their hands or any objects into the \*speaker duct.

\* speaker duct: A hole for plentiful bass sound on speaker cabinet. (enclosure)

### Symbols

~	Refers to alternating current (AC).		
==	Refers to direct current (DC).		
	Refers to class II equipment.		
Ф	Refers to stand-by.		
I	Refers to "ON" (power).		
4	Refers to dangerous voltage.		

#### **Table of Contents**

#### 1 Getting Started

- 2 Safety Information
- 6 Introduction
- 7 Front panel
- 9 Rear panel
- 10 Remote control
- 13 Speakers position14 Installing the sound
- 14 Installing the sound bar
- 15 Mounting the unit on a wall
- 17 Mounting the wireless rear speakers

#### 2 Connecting

- 19 Network connection
- 19 Installing "Google Home" App
- 20 Launch the app to connect Wi-Fi
- 21 Organizing cables (Optional)
- 22 Wireless subwoofer and rear speaker connection
- 22 Wireless subwoofer connection
- 23 Wireless rear speakers connection
- 25 Surround sound
- 28 Connecting to your TV
- 28 Using an OPTICAL cable
- 28 LG Sound Sync
- 29 Using an HDMI cable
- 30 ARC (Audio Return Channel) function
- eARC (Enhanced Audio Return Channel) function
- 30 What is SIMPLINK?
- 31 Additional information for HDMI
- 32 Optional equipment connection
- 32 DOLBY ATMOS®
- 32 DTS:X®
- 33 HDMI IN connection
- 33 OPTICAL IN connection
- 34 USB connection

#### 3 Operating

- 37 USB operation
- 38 How to use the Google Assistant
- 38 Talk to the Google Assistant
- 40 Reference site for Google Assistant Help
- 41 Control your TV and Sound Bar with Voice command
- 41 Available voice commands
- 43 "LG Wi-Fi Speaker"
- 43 Installing "LG Wi-Fi Speaker" App
- 44 Using a BLUETOOTH Wireless Technology
- 44 About BLUETOOTH
- 44 BLUETOOTH profiles
- 44 Listening to Music of a BLUETOOTH Device
- 47 Other operations
- 47 Using your TV remote control
- 47 AUTO POWER On/Off
- 48 Auto function change
- 49 Standby mode
- 49 Standby mode
- 49 Networked standby mode
- 49 Reset the Speaker

### 4 Troubleshooting

- 50 Troubleshooting
- 50 General
- 52 Network
- 52 Application
- 53 NOTES to use wireless
- 53 NOTES to release Demo mode

#### 5 Appendix

- 54 File requirement
- 54 Trademarks and licenses
- 55 Specifications
- 57 Handling the Unit
- 57 Important Information Relating to Network Services
- 58 TERMS OF USE

### Introduction

#### Symbol used in this manual




Indicates special notes and operating features.



Indicates cautions for preventing possible damages

### Front panel

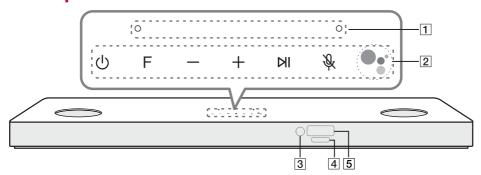

#### 1 : Microphone

- (Standby)
- Switches the unit ON or OFF.

#### F (Function)

- Select the function and input source by pressing **F** repeatedly.

Input source / Function	Display	
Wi-Fi	WI-FI	
Bluetooth	BT	
Optical		
ARC	OPT/HDMI ARC	
e-ARC		
LG Sound Sync (Wired)		
HDMI IN 1	HDMI1	
HDMI IN 2	HDMI2	
USB	USB	

2

You can use Bluetooth function after making Wi-Fi network connection by using Google Home app.

#### **+/-** (Volume)

- Adjusts volume level.

#### M

- Starts playback. / Pauses playback.

#### ⟨Mic mute⟩

- Disables the detect voice recognition by pressing  $\,$  on the unit. All the Google Assistant LED turns amber and "The mic is muted." is heard.

To cancel it, press  $\mbox{\ensuremath{\mbox{$\chi$}}}$  on the unit again. Google Assistant LED turns off and "The mic is back on." is heard.



2 - Enables Google Assistant to receive your voice commands.
To cancel it, press ( again. (Page 38)

#### Remote sensor

#### Google Assistant LED

- Changes LED status according to Google Assistant performance.

LED	Status	Description	
0 0 0 0	All four LEDs are on.	Ready to listen to your voice command.	
000000	All four LEDs blink.	Responds to your voice command.	
0 0 0 0	Microphone is off and the solid amber LED will be on.	Voice recognition is disable	

#### Display Window

Display window will be darkened automatically if there is no key input for 15 seconds.
 When you press any button, the display window will brighten.

 
#### Precautions in using the touch buttons

- Use the touch buttons with clean and dry hands.
  - In a humid environment, wipe out any moisture on the touch buttons before using.
- ↑ : Do not press the touch buttons hard to make it work.
  - If you apply too much strength, it can damage the sensor of the touch buttons.
  - Touch the button that you want to work in order to operate the function correctly.
  - Be careful not to have any conductive material such as metallic object on the touch buttons. It can cause malfunctions.


This unit will turn itself off to save electric consumption when the main unit is not connected to an external device and is not used for 15 minutes.

Remove foreign materials between the grill and the case by using a cotton swab.





### Rear panel

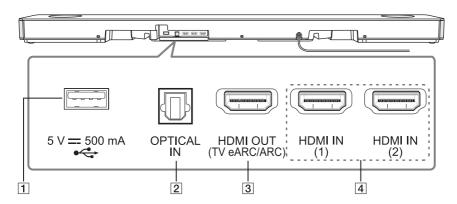


- USB Port
  - : Connect USB memory device to the USB port on the back of the unit.
- OPTICAL IN

4

- Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV.
- : HDMI OUT (TV eARC/ARC) : - Connect the HDMI OUT (TV eARC/ARC) jack on the back of the unit to ARC jack on the TV.
- : HDMI IN (1)/HDMI IN (2)
  - : Connect HDMI IN jack on the back of the unit to HDMI OUT jack on the external device.
    You can enjoy the sound and picture from HDMI connection on an external device.


### Remote control

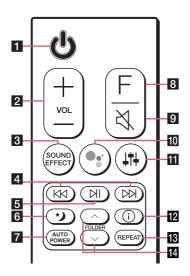

#### Replacement of Battery

Remove the battery cover on the rear of the remote control, and insert the battery with  $\bigoplus$  and  $\bigoplus$  matched correctly.

Risk of fire or explosion if the battery is replaced by an incorrect type.

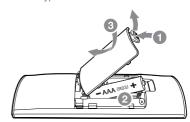

() (Standby)

- Switches the unit ON or OFF.
- Networked standby: It allows the unit to switch to standby mode.
  To turn on Networked standby function, Press (b).
  To turn off Networked standby function, press (b) for about 3 seconds.

VOL (Volume) +/-

- Adjusts speaker volume

#### SOUND EFFECT

- Selects a sound effect mode by using SOUND EFFECT.

On Display	Description		
AI SOUND PRO	Analyzes the property of the input sound and provides the sound optimized for the content in real time.		
BASS BLAST or BASS BLAST+	Reinforces the bass and powerful sound.		
STANDARD	You can enjoy premium sound with MERIDIAN technology.		
MOVIE	You can enjoy more immersive and cinematic surround sound.		
MUSIC	You can enjoy more good sound for music source.		

3

- When this unit detects DOLBY ATMOS or DTS:X stream, you cannot change sound effect to any other. In this case, even though you press SOUND EFFECT, this unit does not respond. And you can see only "NOT SUPPORTED" on the display window.
- TV remote: It allows you to control the volume of this unit by your TV remote control even by other company's product. (Page 47)
   To turn on or off the TV Remote function, press and hold SOUND EFFECT for about 3 seconds and
- Supported TV brands

press it again.

LG	Panasonic	Philips	Samsung	Sharp	Sony	Toshiba	Vizio
----	-----------	---------	---------	-------	------	---------	-------

4 : KM / DM (Skip)

- Press 🖊 or 🔀 to go to next or previous file.

5

**Ⅶ** (Play/Pause)

- Starts playback. / Pauses playback.
- (Night time)
- It is useful when you want to watch movies at low volume late at night. It makes to reduce the sound intensity and improve fineness and softness.
  - Press \*) to activate Night time mode. To cancel it, press \*) again.

7 : AUTO POWER

- It allows the unit to turn on and off automatically by input signal: Optical (Page 47)

F (Function)

- Select the function and input source by pressing F repeatedly.
- - •
- Enables Google Assistant to receive your voice commands while watching TV (not necessary when listening to music through Wi-Fi or Bluetooth, you can just say "Hey Google").

To cancel it, press ( again. (Page 38)

#### \$\precitt{\psi}\psi\ (Sound tuning)

- Adjusts sound level of each speaker.
   Select the speaker you want to adjust by using the sound level by using VOL +/-.
- Adjusting rear speakers level is applied only when the rear speakers are connected.
- See the page 13 for more information of speakers.

Display	Description	Range
WF	Sub Woofer	-15 ~ 6
С	Center	-6 ~ 6
OVC	Overhead Volume Control	-6 ~ 6
S	Side	-6 ~ 6
R	Rear	-6 ~ 6
ROV	Rear Top	-6 ~ 6
TRE	Treble	-5 ~ 5
BAS	Bass	-5 ~ 5

• Surround sound: It allows you to enjoy surround sound with rear speakers. (Page 25)
To turn on or off the surround sound, press and hold ## for about 3 seconds and press it again.

#### (Information)

- You can display various information of the input source by pressing ①.
  - Wi-Fi: Connected Application name
  - BT (Bluetooth): Connected Bluetooth device name
  - OPT (Optical)/ARC/E-ARC/HDMI1/HDMI2 (HDMI IN 1/HDMI IN 2): Audio format
  - USB: File information contained on a USB.

### REPEAT

12


14


- Press REPEAT to select desired repeat or random mode.

#### FOLDER ∧/∨

- Searches a folder on USB device.

## **Speakers position**

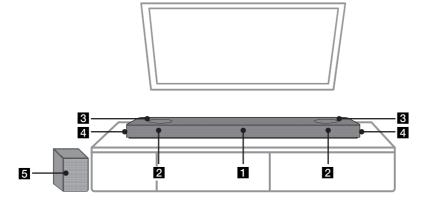

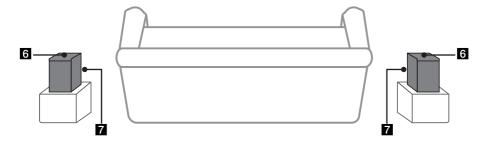

1	Center speaker
2	Front speakers
3	Top speakers
4	Side speakers
5	Subwoofer
6	Rear top speakers
7	Rear speakers


### Installing the sound bar

You can hear the sound by connecting the unit to the other device: TV, Blu-ray disc player, DVD player, etc.

Place the unit in front of the TV and connect it to the device you want. (Pages 28 - 34)

You can place the wireless subwoofer anywhere in your room. But it is better to place the subwoofer near the main unit. Turn it slightly toward the center of the room to reduce the wall reflections.

For the best surround sound, place the speakers as shown below.

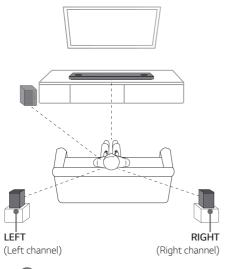



#### Note

- If the sound bar covers the remote sensor of the TV, please separate distance between the sound bar and TV by 10 ~ 15 cm or more.
- The illustration above may differ from actual units
- The wireless rear speakers are designed for a pair. When installing the speakers, make sure the position of the speakers that is marked on the rear of the speakers.



#### Caution

- For best performance of wireless connection such as **Bluetooth** or wireless subwoofer, do not install the unit on Metallic furniture because wireless connection communicates through a module positioned on the bottom of the unit.
- Be careful not to make scratches on the surface of the Unit /Subwoofer when installing or moving them.

### Mounting the unit on a wall

#### ∠!\ Caution

- Do not install this unit upside down. It can damage the parts of this unit or be the cause of personal injury.
- Do not hang onto the installed unit and avoid any impact to the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may result in an injury or damage to the product.
- When the unit is installed on a wall, please make sure that a child does not pull any of connecting cables, as it may cause it to fall.


You can mount the main unit on a wall.



#### Caution

Because it is difficult to make a connection after installing this unit, you should connect the cables before installation.

#### Preparation materials

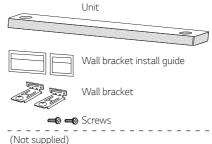







Screws (A) and Wall Plugs are not supplied for mounting the unit. We recommend the Hilti (HUD-1 6 x 30) for the mounting.

 
 Match the TV's BOTTOM EDGE of Wall bracket install guide with the bottom of TV and attach to the position.



 When you mount it on a wall (concrete), use the wall plugs. You should drill some holes. A guide sheet (Wall bracket install guide) is supplied to drill. Use the sheet to check the point to drill.

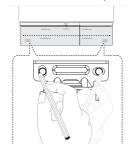

 
- 3. Remove the Wall bracket install guide.
- 4. Fix the brackets with screws (A) as shown in the illustration below.



5. Put the unit on the brackets to match screw holes on the bottom of the unit.



6. Fix the unit with the screws firmly.

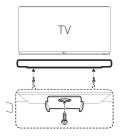

### Mounting the wireless rear speakers

You can mount the wireless rear speakers on a wall.

#### Preparation materials



Wireless rear speakers



Screws

(Not supplied)

 
Note

Screws (A)


Wall plug

Screws (A) and Wall Plugs are not supplied for mounting the unit. We recommend the Hilti (HUD-1 6 x 30) for the mounting.


1. Fix the brackets with screws (A) to a suitable position on a wall.



2. Put the wireless rear speaker on the bracket to fit the screw hole on the bottom of the speaker.

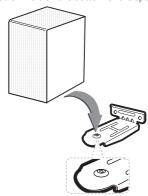

3. Fix the wireless surround speaker with the supplied screw firmly.

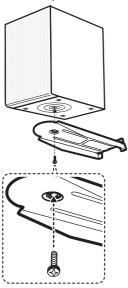


Note \_

To detach the unit, perform it in reverse order.

#### **Network connection**

You can enjoy various functions of this sound bar by connecting to network and your smart device with "Google Home" app.

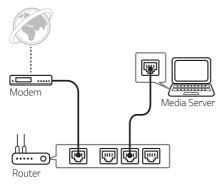



The "Google Home" app is required to connect the sound bar wirelessly to the network.



#### Note

In a network environment (Router, Internet and Internet Service Provider) that supports both IPv4 and IPv6, the network automatically connects to IPv4 or IPv6 when connecting to the network

You can check the each network status by selecting the settings of My Speakers ([Settings]>[IP Info.]) on the "LG Wi-Fi Speaker" app.

#### Installing "Google Home" App

The "Google Home" app allows you to use various functions of this speaker through your smart device.

#### Requirements before setup

- A wireless router must be connected to the internet. A smart device such as Android or iOS devices must be connected to the wireless router via Wi-Fi connection.
- It needs Google account to use this app. During connect Wi-Fi, this app may request to create Google account.

#### Through "Google Play" or "App Store"

- 1. Tap the "Google Play Store" icon or "App Store" icon on your smart device.
- 2. Type in "Google Home" in the search bar and tap "Search" on "Google Play" or "App Store"
- 3. Select "Google Home" in the search result list to download.





#### Note

- Depending on the device version, "Google Home" app may not work.
- For more information, visit the web site. https://www.google.com/cast/setup/

#### Launch the app to connect Wi-Fi

Make sure your smart device Wi-Fi feature is turned on. Once a connecting operation is performed, it does not need to be performed again.



#### Note

In case of iOS devices, it should be turned on Bluetooth setting on your smart device.

1. Tap the "Google Home" icon to launch the app.



2. Follow the screen on app to set speaker. Follow these instructions in order.



#### Note

- · Use the same Wi-Fi connection to set the speaker and your smart device.
- If the Bluetooth setting turned on your smart device, it will be easy to connect Wi-Fi.
- · During installation, you should create a speaker name. It is needed when pairing the Bluetooth device. You can check and edit the speaker name. Follow the "Edit speaker name" (Page 46)
- · For more information on the setup, visit the web site. https://support.google.com/ assistant/answer/7538816

3. When the speaker is properly connected to Wi-Fi, "CONNECTED" will appear on the display window with sound.




#### Note

- · Depending on wireless router status, it might not work well Wi-Fi connection.
- It is recommended that you use Wi-Fi Group Play with less than 5 speakers.
- "Google Home" app is provided by Google. It might be revised by a change of Google Policy.
- For more information (Set up, Usage, Help etc.), research "Google Assistant Help" or visit the web site. http://support.google.com/ assistant
- The speaker may not be available for use on some functions from the "Google Assistant Help" site. (Page 40)
- The speaker is not compatible with "Smart ThinQ" app. Therefore it is not available in setup and cannot be controlled by using "Smart ThinQ" app.

# Organizing cables (Optional)

You can organize the cable with cable ties.

- 1. Hold the cables together with cable ties as shown below.
- 2. Tighten cable ties.

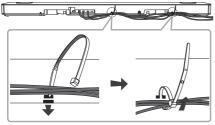

- Note
- After all connections are completed, you can arrange cables as needed.
- Cable ties are not provided.

### Wireless subwoofer and rear speaker connection

#### Wireless subwoofer connection

#### LED indicator of wireless subwoofer

LED Color	Status
Green (Blink)	The connection is trying.
Green	The connection is completed.
Red	The wireless subwoofer is in standby mode or the connection is failed.
Off (No display)	The power cord of wireless subwoofer is disconnected.

 
#### Setting up the wireless subwoofer for the first time

- 1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- 2. Turn on the sound bar. The sound bar and the wireless subwoofer will be automatically connected.
  - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.

#### Manually pairing wireless subwoofer

When your connection is not completed, you can check red LED on the wireless subwoofer and the wireless subwoofer does not make sound. To solve the problem, follow the steps below.

1. Press Pairing on the rear of the wireless subwoofer.




- The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the **Pairing**.)
- 2. Turn on the sound bar.
  - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.



#### Note

 - It takes a few seconds (and may take longer) for the main unit and the subwoofer to communicate with each other and make sounds.
- The closer the main unit and the subwoofer, the better sound quality. It is recommended to install the main unit and the subwoofer as close as possible and avoid the cases below.
  - There is an obstacle between the main unit and the subwoofer.
  - There is a device using same frequency with this wireless connection such as a medical equipment, a microwave or a wireless LAN device.
  - Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.



# Wireless rear speakers connection

#### LED indicator of wireless rear speakers

LED Color	Status
Green (Blink)	The connection is trying.
Green	The connection is completed.
Red	The wireless rear speakers are in standby mode or the connection is failed.
Off (No display)	The power cord of wireless rear speakers are disconnected.

 
## Setting up the wireless rear speakers for the first time

- Connect the power cord of the wireless rear speakers to the outlet.
- 2. Turn on the main unit: The sound bar and wireless rear speakers will be automatically connected.
  - The green LED on the wireless rear speakers turns on.

#### Manually pairing wireless rear speakers

When your connection is not completed, you can see the red LED on the wireless rear speaker and the speaker does not make sound. To solve the problem, follow the below steps.

 Press PAIRING on the rear of the wireless rear speaker.




- The green LED on the wireless rear speaker blinks quickly. (If the green LED does not blink, press and hold the **PAIRING**.)
- 2. Turn on the main unit
  - Paring is completed. The green LED on the wireless rear speaker turns on.



#### Note

 - If there is a strong electromagnetic wave product nearby, interference may occur. Put the main unit and the wireless rear speakers away from there.
- The wireless rear speakers will automatically switch to standby mode in a few minutes after the sound bar is turned off.
   When the wireless rear speakers is in standby mode, the LED will turn on in red.
- When you turn on the sound bar, the wireless rear speakers will turn on and the LED will change to green and then the speakers make sound within a few seconds.
- It takes a few seconds (and may take longer) for the main unit and the wireless rear speakers to communicate with each other.
- Use the rear speakers at least 30 cm away from either TV screen or PC monitor.
- When the wireless rear speakers is being connected or disconnected with the main unit, output sound is maybe interrupted.
- Set the distance between the sound bar and the wireless rear speakers as close as possible and keep them away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.



#### **Surround sound**

You can enjoy magnificent surround sound for all the input sound source with rear speakers.

If you turn on the surround function, the whole speaker outputs sound.

When you turn off the surround function, the speakers output sound as an original input sound channel.

To turn on surround function, press and hold #4 on the remote control for about 3 seconds and press it once again while "OFF - SURROUND" is scrolled.

To turn off surround function, press and hold 11 on the remote control for about 3 seconds and press it once again while "ON - SURROUND" is scrolled.

#### **Surround function ON**

Sound Effect	Input	Output		
Sound Effect	input	No rear speakers	Rear speakers connected	
	2.0 Ch	( <del>233</del> ) <u>o</u>		
AI SOUND PRO	5.1 Ch	(*****)0		
	7.1 Ch or more	( <del>****</del> ) <u>0</u>		
	2.0 Ch	( <del>****</del> ) <u>0</u>		
BASS BLAST or BASS BLAST+	5.1 Ch	( <del>233</del> ) <u>0</u>		
	7.1 Ch or more	( <del>233</del> ) <u>o</u>		
	2.0 Ch	( <del>233</del> ) <u>o</u>		
STANDARD	5.1 Ch	( <del>*****</del> )		
	7.1 Ch or more	( <del>*****</del> ) <u>0</u>		
	2.0 Ch	( <del>2, 3</del> )g		
MOVIE	5.1 Ch	( <del>*****</del> ) <u>9</u>		
	7.1 Ch or more	( <del>*****</del> ) <u>0</u>		
	2.0 Ch	( <del>2,3</del> )g	§ ( <del>2 )</del> ) <u>0</u>	
MUSIC	5.1 Ch	( <del>2,3</del> )g	( <del>2</del>	
	7.1 Ch or more	( <del>3,3,3</del> )0	( <del>3</del> ) <u>0</u>	

### **Surround function OFF**


Sound Effect	: Input		Output			tput
Souria Effect			No rear speakers	Rear speakers connected		
	2.0 Ch					
		DTS		( <del>*****</del> *******************************		
AI SOUND PRO	5.1 Ch	Dolby	( <del>*****</del> *******************************			
		Others				
	7.1	Ch or more	( <del>****</del> ********************************	( <u> </u>		
2.000 21.407		2.0 Ch	( <del>****</del> )			
BASS BLAST or BASS BLAST+		5.1 Ch	( <del>*****</del> )			
3, 03 52 5.	7.1 Ch or more		( <del>2.2.2.</del> ) <u>0</u>			
	2.0 Ch					
	5.1 Ch	DTS	( <del>******</del> ******************************			
STANDARD		Dolby				
		Others				
	7.1 Ch or more		(**************************************			
		2.0 Ch	(			
MOVIE	5.1 Ch		(			
	7.1 Ch or more		(222)0			
	2.0 Ch					
	5.1 Ch	DTS		( <del>*****</del> *******************************		
MUSIC		Dolby	(			
		Others				
	7.1 Ch or more		( 2 2 2 ) 0	( <del>*****</del> *) <b>o</b>		

### Connecting to your TV

Please connect with this unit and TV using the optical digital cable or HDMI cable considering the state of the TV.

#### Using an OPTICAL cable

 Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV using an OPTICAL cable.

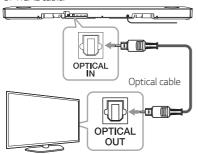

Select the input source to OPT/HDMI ARC by pressing F repeatedly.

You can see "OPT" on the display window if connecting normally between this unit and your TV



#### Note

- Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.
- You can enjoy the TV audio through the speakers of this unit. In the case of some TV models, you must select the external speaker option from the TV menu. (For details, reference your TV user manual.)
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.

#### **LG Sound Sync**



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with the LG TV that supports LG Sound Sync. Make sure of the LG Sound Sync logo is on your TV

Controllable function by LG TV's remote control: Volume up/down, mute




#### Note

- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV.
  - According to TV Specifications, the volume and mute of this unit synchronize with TV.
- When the connection fails, make sure of the condition of the TV and power.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
  - The unit is turned off.
  - Changing to another function.
  - Disconnecting the optical cable.
- The amount of time to turn off this unit is different depending on your TV when you set AUTO POWER function to ON

#### LG Sound Sync with wired connection

 Connect your LG TV to the unit by using an optical cable.

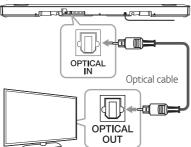


- Set up the sound output of TV to listen to the sound through this unit: (Refer to the TV's instruction manual for the details of LG Sound Sync.)
- 3. Turn on the unit by pressing (
- 4. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.

You can see "LGOPT" on the display window if connecting normally between this unit and your TV.

#### Using an HDMI cable

If you connect this unit to a TV that supports HDMI CEC and ARC (Audio Return Channel), you can enjoy the TV audio through the speakers of this unit without connecting the optical cable.

 Connect the HDMI OUT (TV eARC/ARC) jack on the back of the unit to ARC jack on the TV using an HDMI cable.

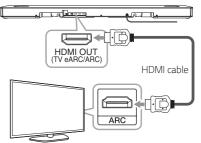

2. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.

You can see "ARC" or "E-ARC" on the display window if connecting normally between this unit and your TV.



- You can enjoy the TV audio through the speakers of this unit. In the case of some TV models, you must select the external speaker option from the TV menu. (For details, reference your TV user manual.)
- Depending on your LG TV model, you may need to turn on the SIMPLINK function on your LG TV.
- When you return to ARC function from another function, you need to select the input source to OPT/HDMI ARC. Then this unit changes to ARC function automatically.

# ARC (Audio Return Channel) function

The ARC function enables an HDMI capable TV to send the audio stream to HDMI OUT of the unit.

# eARC (Enhanced Audio Return Channel) function

eARC (Enhanced Audio Return Channel) features an advancement over the existing ARC (Audio Return Channel) and supports the latest high-bitrate audio formats such as DTS-HD Master Audio™, DTS:X®, Dolby® TrueHD, Dolby Atmos® and more.

You can use your multiple components just by simple connection.

## Preparing to Use the eARC or ARC Function

- Your TV must support the HDMI-CEC and eARC or ARC function and the HDMI-CEC and eARC or ARC must be set to On.
- The setting method of HDMI-CEC, eARC or ARC may differ depending on the TV. For details about eARC or ARC function, refer to your TV manual.
- You must use the certified HDMI cable. (page 31)
- You must connect the HDMI OUT on the unit with HDMI IN of the TV that supports eARC or ARC function using an HDMI cable.
- You can connect only one Sound bar to TV compatible with eARC or ARC.

#### What is SIMPLINK?



Some functions of this unit are controlled by the TV's remote control when this unit and LG TV's with SIMPLINK are connected through HDMI connection.

Controllable functions by LG TV's remote control: Power on/off, volume up/down, etc.

Refer to the TV owner's manual for the details of SIMPLINK function.

LG TV's with SIMPLINK function has the logo as shown above.



#### Note

- Depending on the state of the unit, some SIMPLINK operation may differ from your purpose or not work.
- Depending on a TV or a player which is connected with this unit, SIMPLINK operation may differ from your purpose.

#### Additional information for HDMI

- When you connect an HDMI or DVI compatible device make sure of the following:
  - Try switching off the HDMI/DVI device and this player. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this player.
  - The connected device's video input is set correctly for this unit.
  - The connected device is compatible with 720 x 576p (or 480p), 1280 x 720p, 1920 x 1080i, 1920 x 1080p, 4096 x 2160p or 3840 x 2160p video input.
- Not all HDCP-compatible HDMI or DVI devices will work with this player.
  - The picture will not be displayed properly with non-HDCP device.



 
- If a connected HDMI device does not accept the audio output of the player, the HDMI device's audio sound may be distorted or may not output.
- Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the player and then turn it on again.
- When the HDMI connection with HDCP is not verified, TV screen is changed to black screen. In this case, check the HDMI connection, or disconnect the HDMI cable.
- If there are noises or lines on the screen, please check the HDMI cable (length is generally limited to 4.5 m).
- You cannot change the video resolution in the HDMI1/HDMI2 mode. Change the video resolution of the connected component.
- If the video output signal is abnormal when your personal computer is connected to HDMI IN jack, change the resolution of your personal computer to 576p (or 480p), 720p, 1080i or 1080p.

#### **HDMI** cable Checklist

Some HDMI cables have poor signal transmission, which can cause problems with sound and video transmission.

Even after HDMI cable connections, if no sound, sound interrupted, noise occurring from the sound bar and/or no video, no smooth video on your TV, the HDMI cable may be the problem.

Use the cable marked with the premium HDMI certification logo. We recommend using "High Speed HDMI Cable with Ethernet" or later version.



#### Connection through HDMI Cable\*

Your television must support the newest HDMI features (HDMI CEC¹¹ / ARC (Audio Return Channel)) to fully enjoy the Live broadcasting channel with audio system through an HDMI cable. Unless your TV supports these HDMI features, the audio system should be connected through an OPTICAL cable.

1) HDMI CEC (High-Definition Multimedia Interface Consumer Electronics Control)

Consumer Electronics Control (CEC) is an HDMI feature designed to allow the user to command and control the CEC-enabled devices, that are connected through HDMI by using only one of their remote controls.

\* Trade names for CEC are SimpLink (LG), Anynet+ (Samsung), BRAVIA Sync (Sony), EasyLink (Philips), etc.

# Optional equipment connection

#### **DOLBY ATMOS®**

#### What is DOLBY ATMOS®?

Dolby Atmos gives you amazing experience you've never before by overhead sound, and all the richness, clarity, and power of Dolby sound.


#### DTS:X®

#### What is DTS:X®?

In the real world, sound is all around us, moving freely in any direction.  $\mathsf{DTS}:X^{\otimes}$  is immersed in this natural, multi-dimensional sound experience as we go about our daily lives.

#### For using DOLBY ATMOS® and DTS:X®

- DOLBY ATMOS® is available only in HDMI1/HDMI2 and ARC mode.
  - To use DOLBY ATMOS® in ARC mode, your TV has to support DOLBY ATMOS®.
- DTS:X® is available only in HDMI1/HDMI2 mode
- It is needed to set up an audio output on external devices (Blu-ray disc player, TV etc.) to "No encoding" such as "Bitstream", "Auto" or "Bypass".
  - If you can select audio output sampling rate, set it to 192 kHz.
- If your TV does not support DTS sound source, connect the playback (source) device to the HDMI IN or OPTICAL IN jack on the soundbar to listen to DTS audio.

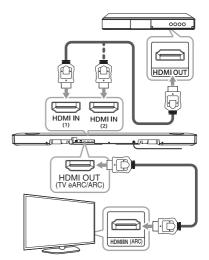

- Connect HDMI IN (1) or HDMI IN (2) jack on the back of the unit to HDMI OUT jack on the external device such as Blu-ray disc player, DVD player, etc.
- Connect HDMI OUT (TV eARC/ARC) jack on the back of the unit to HDMI IN (ARC) jack on the TV.
- 3. Select the input source to HDMI1, HDMI2 or OPT/HDMI ARC by pressing **F** repeatedly.
  - If you select HDMI1 or HDMI2, you can hear the sound from the external device. Select it when playing the external device.
  - If you select OPT/HDMI ARC, you can hear the sound from your TV. Select it when watching the TV

You can see "DOLBY ATMOS" or "DTS:X" on the display window if connecting normally between this sound bar and your TV and the contents is played.




#### Note

- DOLBY ATMOS®/DTS:X® supports 5.1.2 channel. (7.1.4 channel when it connected with Wireless rear speakers)
- If the sound bar does not have sound or the video on TV is not smooth, the HDMI cable may be the problem. Refer to the HDMI cable checklist. (Page 31)

#### **HDMI IN connection**

You can enjoy the sound from the external device which is connected to HDMI IN (1) or HDMI IN (2) jack on this unit.

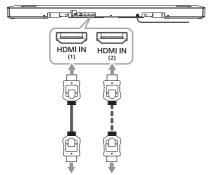


To the Blu-ray disc player, DVD player, etc.

- Connect HDMI IN (1) or HDMI IN (2) jack on the back of the unit to HDMI OUT jack on the audio device such as Blu-ray disc player, DVD player, etc.
- 2. Select the input source to HDMI1 or HDMI2 by pressing **F** repeatedly.

#### **OPTICAL IN connection**

Connect an optical output jack of external devices to the OPTICAL IN jack.

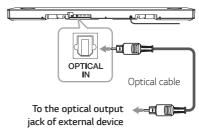

- 1. Connect the OPTICAL IN jack on the back of the unit to optical out jack of your external device.
- 2. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.

You can see "OPT" on the display window if connecting normally between this unit and your device.



#### Note

Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.



#### Caution

Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.










Optical jack Optical cable Optical jack Optical cable

#### Optional equipment connection

You can enjoy both sound and picture from the external device you connect.

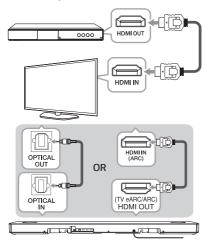

- Connect HDMI IN jack of your TV to HDMI OUT jack on the external device such as Blu-ray disc player, DVD player, etc.
- Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV using an OPTICAL cable.

Or connect the HDMI OUT (TV eARC/ARC) jack on the back of the unit to HDMI IN (ARC) jack on the TV using an HDMI cable.


3. Select the input source to OPT/HDMI ARC by pressing **F** repeatedly.



If the sound bar does not have sound or the video on TV is not smooth, the HDMI cable may be the problem. Refer to the HDMI cable checklist. (Page 31)

#### **USB** connection

Connect USB memory device to the USB port on the back of the unit.

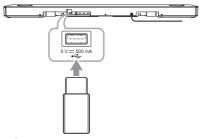



#### Note

It is recommended that you purchase a USB gender separately for the convenience of USB insertion and extraction. (Recommended USB gender type: USB 2.0 extension cable)

For more information of playing files on a USB, refer to the page 37.

#### Removing the USB Device from the unit

- Choose a different function/mode.
- 2. Remove the USB device from the unit.

#### Compatible USB devices

- MP3 Player. Flash type MP3 player.
- USB Flash Drive: Devices that support USB 2.0.
- The USB function of this unit does not support some USB devices.

#### **USB** device requirement

- Devices which require additional program installation connected to a computer, are not supported.
- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minutes to be searched.
- To prevent data loss, back up all data.
- The unit's USB Port cannot be connected to PC.
   The unit can not be used as a storage device.
- The exFAT file systems are not supported on this unit. (FAT16/FAT32/NTFS systems are available.)
- Depending on some devices, it may not available to recognize the followings on this unit.
  - External HDD
  - Card readers
  - Locked devices
  - Hard type USB devices
  - USB hub
  - Using USB extension cable
  - iPhone/iPod/iPad
  - Android device

#### Playable file

#### Sampling Frequency

MP3: within 32 to 48 kHz OGG: within 32 to 48 kHz AAC: within 32 to 48 kHz

FLAC: 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz (16 bit/ 24 bit)

WAV: 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz (16 bit/ 24 bit)


#### Bitrate resolution

MP3: within 8 to 320 kbps OGG: within 64 to 320 kbps AAC: within 8 to 320 kbps

- Maximum files: Up to 2,000
- Maximum directories: Up to 200
- A protected file by DRM (Digital rights management) cannot be played on the unit.
- Video files in the USB storage device can not be played.
- Depending on the performance of your USB device, playback may not work well.

Note

• Folders and files on the USB are recognized as below.

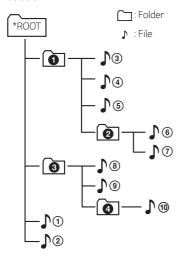

- If there is no file in a folder, the folder will not appear.
- File will be played from file 10 to file 10 one by one.
- Files will be played in order recorded and it may be different depending on the record circumstances.
- This unit can display file or folder names that contain numbers or English characters only.
- \*ROOT: The first screen you can see when a this unit recognize the USB is "ROOT".

# **USB** operation

- 1. Connect the USB device to the USB port.
- 2. Select the USB function by pressing F repeatedly.

То	Do this
Playback	Press <b>NI</b> .
Pause	During playback, press <b>NI</b> .
Skip to the next/ previous file	During playback, press (D) on the remote control to go to the next file.
	Playing less than 3 seconds, press 🗚 on the remote control to go to the previous file.
	Playing after 3 seconds, press K4 on the remote control to go to the beginning of the file.
Play repeatedly or randomly	Press <b>REPEAT</b> on the remote control repeatedly. Refer to the note for details about the display change.
Search a folder	Press <b>FOLDER</b> ∧ <b>/</b> ∨ on the remote control.



- The resume point may be cleared when you pull out the power cord or removing the USB device from the unit.
- Repeat/Random playback operates as follows.

On Display	Description
OFF	Plays songs on USB device in order.
ONE	Plays a same song repeatedly.
FOLDER	Plays songs in a folder repeatedly.
ALL	Plays all the songs on USB device repeatedly.
SHUFFLE	Plays all the songs once randomly, and stops the playback.


# How to use the Google Assistant

### Talk to the Google Assistant

You can use a variety of voice commands to control this speaker with the Google Assistant. Try to say a voice command to the speaker. The speaker will activate the Google Assistant and perform your voice command.



- Turn on the speaker and connect Wi-Fi. (Page 20)
- Say "Hey Google" or press Then the speaker is activated and ready to receive your voice commands.

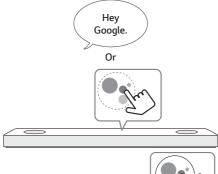



- Just say the thing you want to do. Then the speaker recognizes and performs your voice command.
- 4. After a few seconds, the Google Assistant will respond to your command.




#### Note

Assistant.

- The Google Assistant only responds to voice commands when you are using Wi-Fi or BT (Bluetooth) as the input.
   If you are using HDMI, Optical, ARC, Optical Sound Sync, or USB input, then you must use the button to activate the Google
- Each time you use voice recognition, say "Hey Google" or press .

#### **Comfortable Function**

With the Google Assistant built in, you can control compatible smart home devices such as TV's, lights, switches, plugs, thermostats and more by simply using your voice.

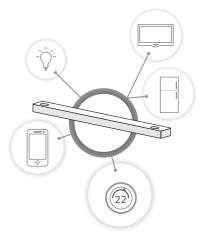

For more information, visit the below web site.

- Set up, Usage and more: <a href="http://support.google.com/assistant/answer/7540703">http://support.google.com/assistant/answer/7540703</a>
- Compatible LG appliance models:
   Visit <a href="http://www.lg.com">http://www.lg.com</a> and then search the information

#### Voice command

- 1. Time
  - "What time is it?", "What time is it now?", "What time is it in Spain?"
- 2. Weather

"What's the weather?", "What's the weather this weekend?", "What's the weather in Paris?", "Will it rain tomorrow?"

3. Plan

"Tell me about my day.", "What's my next meeting?", "Set a reminder to check schedule at 6pm."

4. Alarms

"Set an alarm", "Set an alarm for 9am", "Wake me up at 9am", "What alarms are set?"

- 5. Music
  - "Play the music", "Next song.", "Previous song.", "Pause the music"
- 6. Volume

"Volume level 3.", "Maximum volume.", "Mute.", "Turn it up", "Turn it down"

7. Smart Home devices
"Set the heat to 22"
"Turn on lights in the kitchen"
"Watch on TV"



#### Note

- For more information on the voice commands, refer to the "Google Home" app screen or visit the web site. <a href="http://support.google.com/assistant">http://support.google.com/assistant</a>
- · Voice command of Volume level change
  - The volume range of this unit is 1-40. (Except LGOPT function. In LGOPT function, the volume range works 1-100.)
  - Google Assistant recognizes voice command of volume level change as a scale (1-10) or a percentage (1-100 %)
  - For example, if you say "Volume level five" the volume level of this unit changes to 20.
     If you say "Volume to 65 %", it changes to 26.
  - Volume level increases or decreases by 10 % (i.e. 4) when you say, "volume up" or "volume down".
  - When you say numbers of 10 and less, it is recommended to say "percent" to prevent too loud sound.




- After connecting to Wi-Fi, this function is available to use. If Google Assistant LED (White) blinks, the speaker is not connected to Wi-Fi. Follow the "Installing "Google Home" App" and try again. (Page 19)
- If the Google Assistant LED is solid amber, the microphone is off. In that case, the Google Assistant is not available to receive your comment. Press & on the unit.
- If the Google Assistant fails to understand your commands, it will say answers such as "Sorry, I can't help with that yet", "My apologies. I don't understand."
- Avoid noisy places, because the speaker may not receive your commands or "Hey Google".
   Instead of "Hey Google", press
- When the voice recognition time limit is exceeded on smart devices, this function automatically cancels.
- Speaking with correct pronunciation will increase the voice recognition rate.
- The Google Assistant may be slow to recognize or act depending on the Wi-Fi connection status or Google server status.
- If you have any trouble or question about Google Assistant, please suggest by saying "Hey Google, Feedback." It would be helpful for improving Google Services.

# Reference site for Google Assistant Help

Set up the Google Assistant on your speakers	https://support.google.com/assistant/answer/7538816
Listen to music	https://support.google.com/assistant/answer/7539710
Play music on your TV or speakers	https://support.google.com/assistant/answer/7539867
Play TV shows & movies	https://support.google.com/assistant/answer/7539991
Control smart home devices	https://support.google.com/assistant/answer/7540703
Create a shopping list	https://support.google.com/assistant/answer/7540969
Buy items on your shopping list	https://support.google.com/assistant/answer/7384588#speaker
Set up and manage My Day	https://support.google.com/assistant/answer/7393908#speaker
Listen to radio	https://support.google.com/assistant/answer/7540307
Control volume of your speakers	https://support.google.com/assistant/answer/7538817
Change your language	https://support.google.com/assistant/answer/7394513#speaker

# Control your TV and Sound Bar with Voice command

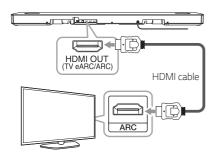

- Connect your Sound Bar to Wi-Fi by using Google Home app.
- 2. Connect your Sound Bar and TV by using an HDMI cable.
- 3. Say a voice command. See the following tables.



- You have to say voice commands in English.
- Available TV: Web OS version 4.5 or later TV (LG TV models released after 2019 years)
- Available voice commands might be revised by a change of Google Policy.
- Speaks the voice commands with accurate and clear pronunciation.

#### Available voice commands

#### **LG TV**

Commands	Action
Turn on LG TV Turn LG TV on Power on LG TV Power LG TV on	Turns on your LG TV.
Turn off LG TV Turn LG TV off Power off LG TV Power LG TV off	Turns off your LG TV.
Channel up on LG TV LG TV channel up Next channel on LG TV	Your LG TV changes the channel to up.
Channel down on LG TV LG TV channel down Previous channel on LG TV	Your LG TV changes the channel to down.
Volume up on LG TV LG TV volume up	Volume of your LG TV increases.
Volume down on LG TV LG TV volume down	Volume of your LG TV decreases.
Mute LG TV	Mutes your LG TV
LG TV unmute LG TV mute off	Unmutes your LG TV

# **Sound Bar**

Comi	mands	Action
Turn off LG sound bar Power off LG sound bar		Turns off your LG Sound Bar.
	Wi-Fi network	Changes to the Wi-Fi function.
	BLUETOOTH	Changes to the BT (Bluetooth) function.
Switch function to	OPTICAL	Changes to the Optical function.
Enable function	HDMI ARC	Changes to the HDMI ARC function.
Set function to	HDMI 1	Changes to the HDMI1 function.
	HDMI 2	Changes to the HDMI2 function.
	USB	Changes to the USB function.
	STANDARD	Changes the sound effect to STANDARD.
	AI SOUND PRO	Changes the sound effect to AI SOUND PRO.
Set sound effect	MOVIE	Changes the sound effect to MOVIE.
See Souria errece	MUSIC	Changes the sound effect to MUSIC.
	BASS BLAST (BASS BLAST PLUS)	Changes the sound effect to BASS BLAST (BASS BLAST PLUS).
Display the input sour	ce information	Displays the input source information on display window.
Enable Auto volume		Turns on Auto volume function.
Disable Auto volume		Turns off Auto volume function.
Enable Auto Power		Turns on Auto power function.
Disable Auto Power		Turns off Auto power function.
Enable Night Time		Turns on Night time mode.
Disable Night Time		Turns off Night time mode.
Enable DRC		Turns on DRC.
Disable DRC		Turns off DRC.
Enable TV remote		Turns on TV remote function.
Disable TV remote		Turns off TV remote function.
Enable Surround Disable Surround		Turns on Surround sound.  Turns off Surround sound.
Enable Neural X		Turns on Neural X
Disable Neural X		Turns of Neural X.
Disable Neural /		Tarris on recarding.

# "LG Wi-Fi Speaker"

The "LG Wi-Fi Speaker"app is provided by LG Electronics. This app allows you to use various functions of this speaker through your smart device:

#### Requirements before using

You should connect to Wi-Fi by using "Google Home" app prior using this app. (Page 20)

#### Enjoying music on your device and home network server

You can listen to the music on your smart device and home network server.

#### Using Chromecast built-in

You can enjoy music contents through this sound bar with Chromecast enabled apps.

#### Setting and controlling the sound bar

You can manage the sound bar settings and control the sound bar even without remote control.

#### Requirements

- A wireless router must be connected to the internet
- A smart device such as a smartphone or tablet must be connected to the wireless router via Wi-Fi connection.



#### Note

For more informations of "LG Wi-Fi Speaker", follow the instructions of the application.

# Installing "LG Wi-Fi Speaker" **App**

#### Through Apple "App Store" or "Google Play Store"

- 1. Tap the Apple "App Store" icon or "Google Play Store" icon.
- 2. Type in "LG Wi-Fi Speaker" in the search bar and tap "Search".
- 3. Select "LG Wi-Fi Speaker" in the search result list to download



- "LG Wi-Fi Speaker" app will be available in version of the software as follow: Android OS: Ver 5.0 (or later) iOS: Ver 10 (or later)
- Depending on the device, "LG Wi-Fi Speaker" app may not work.
- You can find the available application of this unit by using "LG Audio" app. Android OS: Ver 5.0 (or later)

# Using a BLUETOOTH Wireless Technology

#### About BLUETOOTH

Bluetooth is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the Bluetooth in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

- Available Devices: Smart phone, MP3, Notebook, etc
- Version: 5.0
- · Codec: SBC

#### **BLUETOOTH** profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This speaker is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

#### Listening to Music of a **BLUETOOTH Device**

Before you start the pairing procedure, make sure that the Bluetooth feature on your smart device is turned on. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

- 1. Turn on the speaker and connect Wi-Fi. Follow "Network connection" (Page 19-20)
- 2. Select the **Bluetooth** function by pressing **F** repeatedly.
  - "BT" and then "READY" appears in the display window.
- 3. Operate the **Bluetooth** device and perform the pairing operation. When searching for this speaker on your Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device.

Your speaker appears as "Speaker name (App setup)".

4. Select the "Speaker name (App setup)".



- Speaker name was setup on "Google Home" app. For example, if the speaker name is set to "Living Room" in the "Google Home" app, you will see "Living Room" on your Bluetooth device.
- You may check and edit the speaker name on "Google Home" app (Page 46)
- Depending on the **Bluetooth** device type, some devices have a different pairing way. For details about **Bluetooth** pairing, refer to your Bluetooth device manual.

5. When this unit is successfully connected with your Bluetooth device,

"PAIRED" → your device's name → "BT" appears on the display window.



#### Note

- If it is unavailable to display device name on the unit, "-" will be displayed.
- To check the connected device's name. press (i) on the remote control. The connected Bluetooth device's name is displayed.
- 6. Listen to music.

To play music in your **Bluetooth** device, refer to your Bluetooth device's user quide.

According to your **Bluetooth** device's volume level, the volume level of Bluetooth will be adjusted.



#### Note

- When using **Bluetooth** technology, you have to make a connection between the unit and the **Bluetooth** device as close as possible and keep the distance.
  - However it may not work well in the case below:
  - There is an obstacle between the unit and the Bluetooth device.
  - There is a device using same frequency with Bluetooth technology such as a medical equipment, a microwave or a wireless LAN device.
- · If last connected device is LG TV, this sound bar will connect to the TV automatically when you restart the sound bar.
- · If the LG TV is turned off, this sound bar will enter "READY" (Bluetooth ready) mode. When the TV is turned back on, the Sound Bar will not reconnect automatically. To connect the Sound Bar and the TV:
  - Say "Hey Google, connect Bluetooth"
  - Turn the Sound Bar off and back on.

Then follow the TV's on screen instructions.

 Available TV: LG TV models released after 2016 and some TVs may not work well.



- This unit supports Bluetooth auto pairing. However it does not operate in the case below:
  - When you restart this unit.
  - When you disconnect this unit by yourself.
  - When you disconnect this unit on the connected Bluetooth device.
- The sound may be interrupted when the connection is interfered with by the some other electronic wave.
- Pairing is limited to "One" Bluetooth device. Multi-Pairing is not supported.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy using **Bluetooth** when using Phone, MP3, Notebook, etc..
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- Bluetooth connection will be disconnected. when the unit is turned off or the Bluetooth device gets to far from the unit.
- If the **Bluetooth** connection is disconnected connect the **Bluetooth** device again.
- When a Bluetooth device is not connected. "READY" appears on the display window.
- If you change to another function after connecting Bluetooth device, Bluetooth connection will be disconnected. When you return to Bluetooth function. Bluetooth connection will be connected automatically.
- When one Bluetooth device has connected. to this unit, another device cannot find and connect to this unit. If you want to connect another device. disconnect the current device and try again.

#### Using Voice command to connect **BLUETOOTH**

If the speaker has paired to a **Bluetooth** device before, you can use "Google Assistant" to connect Bluetooth. Say "Connect", "Connect to Bluetooth" or "Hey Bluetooth".

To disconnect it, say "Cancel", "Unpair devices" or "Clear all devices".

#### Controls connected BLUETOOTH device

You can control the connected Bluetooth device from the unit; play, pause, skip, volume.



- Only Android OS and iOS is available to use this function.
- This function may not be supported depending on the **Bluetooth** device or some of TV operated differently.
- You can control connected **Bluetooth** devices by voice recognition. Follow the "How to use Google Assistant" (Page 38).

#### Edit speaker name

You can check and edit the speaker name on the "Google Home" app.

# Other operations

#### Using your TV remote control

You can control some functions of this unit by your TV remote control even by other company's product. Controllable functions are volume up/down and

Press and hold SOUND EFFECT on the remote control for about 3 seconds. "ON - TV REMOTE" appears and you can control this unit by your TV remote control.

To check the status of this function, press and hold SOUND EFFECT on the remote control.

To turn off this function, press and hold **SOUND** EFFECT on the remote control and press it once again while "ON - TV REMOTE" is scrolled.



#### Note

- · Make sure that the sound output of your TV is set to [External speaker].
- This function does not operate on LG TV's magic remote control.
- This function may not work well when some TV control functions such as HDMI CEC. SIMPLINK and LG Sound Sync set to ON.
- · This function may not work well when the unit and the TV are connected with an HDMI cable.
- · Some remote control may not be supported.

#### AUTO POWER On/Off

This sound bar automatically turns on and off by an input source: Optical

To turn on this function, press AUTO POWER on the remote control and press it once again while "OFF -AUTO POWER" is scrolled.

To check the status of this function, press AUTO POWER on the remote control

To turn off this function, press AUTO POWER on the remote control and press it once again while "ON -AUTO POWER" is scrolled.

#### Turning on

When you turn on your TV or an external device connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from your device.

#### Turning off

When the TV is off, this sound bar switches to the Networked standby mode.



- After the unit is turned on by AUTO POWER function, it will be automatically turned off if there is no signal for a certain period of time from the TV connected by LG Sound Sync (Optical).
- · After the unit is turned on by AUTO POWER function, it will be automatically turned off if there is no signal for a certain period of time from the external device.
- If you turned off the unit directly, it cannot be turned on automatically by AUTO POWER function. However the unit can be turned on by AUTO POWER function when optical signal comes in after 5 seconds of no signal.
- Depending on the connected device, this function may not operate.
- When you turn on this unit for the first time, status of Auto Power function is turned on.
- You can set the AUTO POWER function only when this unit is turned on.

#### Auto function change

This sound bar recognizes input signals such as Optical, HDMI ARC, **Bluetooth**, and "LG Wi-Fi Speaker" app and then changes suitable function automatically.

# When you turn on your TV or an external device

When you turn on your TV or an external device connected by the one among Optical, LG Sound Sync (Optical), or HDMI ARC, this sound bar will change to a suitable function so you can listen to the sound through it.

# When you try to connect a BLUETOOTH device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected. Play your music on the **Bluetooth** device.

# When you play music by "LG Wi-Fi Speaker" app

When you play music by "LG Wi-Fi Speaker" app on your smart device, this sound bar changes the function to WI-FI and you can listen to the music through it.



#### Note

This unit does not change the function to optical if SIMPLINK of the connected TV, Bluray disc player, set-top box or etc. device set to on or connected CEC supported device is turned on. If you want to use the auto function change, turn off SIMPLINK function on your LG TV. It takes for about 30 seconds to turn off SIMPLINK

#### How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 3 seconds.

# Standby mode

The speaker switches to the standby mode if there is no music playback or no button operation.

#### Standby mode

If you press and hold b for about 3 seconds, the speaker switches to the standby mode. Then "GOOD-BYE" appears on the display window. And all wireless network ports are deactivated.

### Networked standby mode

#### Option 1.

When music is not played and buttons are not pressed for 15 minutes, the speaker switches to the Networked standby mode. Then "GOOD-BYE" appears on the display window.

#### Option 2.

If you press (), the speaker switches to the Networked standby mode. Then "GOOD-BYE" appears on the display window.

# Reset the Speaker

If the speaker doesn't respond, reset the speaker.

Press and hold the % on the unit until you hear
the beep sound once. You can see "RESET" on the
display window. Then all the stored wireless network
information is deleted.

# **Troubleshooting**

# General

Symptoms	Cause & Solution
The unit does not work properly.	Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again.
	Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again.
	Previous setting may not be saved when device power is shut off.
The power does not turn	Is the power cord plugged into the outlet?
on.	Connect the power plug to the outlet.
Sound is not produced.	Is the volume set to minimum?
	Adjust the volume.
	When you are using connection with a external device (set top box, <b>Bluetooth</b> device etc.), adjust volume level of the device.
	Is the mute function activated?
	Press       or adjust the volume level to cancel the mute function.
	Is the function selected properly?
	Check the input source and select the correct input source.
No woofer sound	Is the subwoofer plugged in?
	Plug the power cord of subwoofer into the wall outlet securely.
	Is pairing between the unit and the subwoofer disconnected?
	Connect the unit and the subwoofer. (Page 22)
The remote control does	Is the remote control too far from the unit?
not work properly.	Operate the remote control within about 7 m.
	Is there an obstacle in the path of the remote control and the unit?
	Remove the obstacle.
	Are the batteries in the remote control exhausted?
	Replace the batteries with new one.
The AUTO POWER	Check connection of the external device such as TV, DVD/Blu-Ray player.
function does not work.	Check the state of SIMPLINK on your LG TV and turn off SIMPLINK.
	Depending on the connected device, this function may not operate.
LG Sound Sync does not	Check whether your LG TV supports LG Sound Sync (Wired).
work.	Check connection of LG Sound Sync (Wired).
	Check sound setting of your TV and this unit.

Symptoms	Cause & Solution
When you feel the output	Check the details below and adjust the unit according to them.
sound of the unit is low.	Switch the state of DRC function to [OFF] by using "LG Wi-Fi Speaker".
	With the sound bar connected with TV, change the AUDIO DIGITAL OUT setting on TV Setup Menu from [PCM] to [AUTO] or [BITSTREAM].
	With the sound bar connected with Player, change the AUDIO DIGITAL OUT setting on Player Setup Menu from [PCM] to [PRIMARY PASS-THROUGH] or [BITSTREAM].
	Change Audio DRC setting on connected device setup menu to [OFF] state.
	Make sure that Night Time mode is not On. Turn off Night Time mode.
USB is not recognized	Format the USB device and connect it again.     When formatting the USB device, select the available file system. (Page 35)
Bluetooth pairing does	Be sure your <b>Bluetooth</b> device is on.
not work well.	Switch <b>Bluetooth</b> off and on again on your <b>Bluetooth</b> device, then try pairing again.
	Remove the obstacle in the path of the <b>Bluetooth</b> device and the unit.
	Depending on the type of the <b>Bluetooth</b> device or surrounding environment, your device may not be paired with the unit.
The unit does not connect with <b>Bluetooth</b> device.	Make sure the speaker connects to Wi-Fi by using "Google Home" app.
Voice recognition does	The speaker may not be recognized because of the surrounding noise.
not work well.	Instead of "Hey Google", press ( ).
	Check and make sure the microphone is muted. Press      ★ on the unit.

# Network

Symptoms	Cause & Solution	
Cannot connect the speaker to your home	The wireless communication may be interrupted from household devices that are using radio frequencies. Move the speaker away from them.	
network.	Check your router. Try turning it off and back on.	
	Check that the Wi-Fi feature is turned on in your smart device.	
	Check that the speaker and your smart device are connected to same Wi-Fi.	
Wi-Fi connection does	If you restart the router?	
not work well.	You need to turn the speaker's power off and on again.	
	If you install new router.	
	You need to perform a factory set and setup the network connection for speaker.	

# **Application**

Symptoms	Cause & Solution
The application doesn't	Does an error occur when accessing the app?
work properly.	Make sure that your smart device is compatible with the app.
	Make sure that the application is the latest version.
	Make sure that the connected unit turns on.

# **NOTES** to use wireless

Symptoms	Cause & Solution
This device may have wireless interference.	<ul> <li>Wireless may not operate normally in weak signal area.</li> <li>Please install the device close enough to wireless subwoofer.</li> <li>Do not install the device on metal furniture for optimum performance.</li> </ul>
Bluetooth device may malfunction or make noise in the following cases.	<ul> <li>When any part of your body contact the transceiver of the Bluetooth device or sound bar.</li> <li>When there is an obstacle or wall or the device is installed in a secluded spot.</li> <li>When there is a device (a wireless LAN, a medical equipment or a microwave) using same frequency, make the distance between the products as far away as possible each other.</li> </ul>
	When connecting the device to the <b>Bluetooth</b> device, make the distance between the products as close as possible each other.
	When the device gets too far from the <b>Bluetooth</b> device, the connection is disconnected and also malfunction may occur.

# **NOTES** to release Demo mode

Symptoms	Cause & Solution
Can not change input source with <b>F</b> such as BT ( <b>Bluetooth</b> ), HDMI etc. and only [DEMO] indication is showing in the front display.	Unplug the power cord and plug it in again. If that doesn't work, after setting the volume to minimum, press and hold <b>F</b> (About 5 seconds) on the
Remote Control does not work. (No response)	main unit until the display indicates current selected function.

# Appendi:

# File requirement

Available File extensions: "mp3", "aac", "ogg", "flac", "wav"

#### Sampling Frequency

MP3: within 32 to 48 kHz OGG: within 32 to 48 kHz AAC: within 32 to 48 kHz

FLAC: 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz (16 bit/ 24 bit)

WAV: 32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz (16 bit/ 24 bit)

#### Bitrate resolution:

MP3: within 8 to 320 kbps OGG: within 64 to 320 kbps AAC: within 8 to 320 kbps

- The file requirements are not always compatible.
   There may have some restrictions by file features and media server's ability.
- Depending on the types of file or ways of recording, it may not play back.
- Some DRM-loaded files are not supported on this speaker.
- The types of supported files may differ depending on the operating system and/or the manufacturer of the smart device and PC.

# Trademarks and licenses

All other trademarks are trademarks of their respective owners.

# **DOLBY** ATMOS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are Trademarks of dolby Laboratories.



For DTS patents, see http://patents.dts.com.
Manufactured under license from DTS Licensing
Limited. DTS, the Symbol, & DTS and the Symbol
together, DTS:X, and the DTS:X logo are registered
trademarks or trademarks of DTS, Inc. in the
United States and/or other countries. © DTS, Inc.
All Rights Reserved.



The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth** SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of

their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator. Inc.

# **Specifications**

General	
Power requirements	Refer to the main label on the unit.
Power consumption	Refer to the main label on the unit.
	Networked standby: 6.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 1443.0 mm x 63.0 mm x 146.0 mm (with foot)
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 90 %
Bus Power Supply (USB)	5 V === 500 mA
Available Digital Input Audio Sampling Frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 192 kHz
Available Digital Input Audio format	Dolby Atmos, Dolby Audio, DTS:X, DTS-HD, PCM

Input/Output		
OPTICAL IN	3 V (p-p), Optical jack x 1	
HDMI IN (1) / HDMI IN (2)	19 Pin (Type A, HDMI™ connector) x 2	
HDMI OUT	19 Pin (Type A, HDMI™ connector) x 1 1080p, 1080i, 720p, 576p, 480p 2160p@24/25/30 Hz 4:4:4 2160p@60/50 Hz 4:2:0 4K Sources dependent on HDCP 2.3 are supported at 4K resolutions.	

Amplifier (RMS Output)		
Total	770 W RMS	
Front	50 W RMS x 2 (4 $\Omega$ at 1 kHz, THD 10 %)	
Center	50 W RMS (4 $\Omega$ at 1 kHz, THD 10 %)	
Surround	50 W RMS x 2 (4 $\Omega$ at 1 kHz, THD 10 %)	
Тор	50 W RMS x 2 (4 $\Omega$ at 1 kHz, THD 10 %)	
Rear	50 W RMS x 2 (3 Ω at 1 kHz, THD 10 %)	
Rear top	50 W RMS x 2 (3 $\Omega$ at 1 kHz, THD 10 %)	
Subwoofer	220 W RMS (3 $\Omega$ at 80 Hz, THD 10 %)	

Wireless subwoofer		
Power requirements	Refer to the main label on the subwoofer.	
Power consumption	Refer to the main label on the subwoofer.	
Туре	1 Way 1 Speaker	
Impedance	3Ω	
Rated Input Power	220 W RMS	
Max. Input Power	440 W RMS	
Dimensions (W x H x D)	Approx. 221.0 mm x 390.0 mm x 312.8 mm	

System	
Wireless LAN (Internal antenna)	802.11a/b/g/n Wi-Fi networks

Wireless Rear speakers (Each)				
Power requirements	Refer to the main label on the wireless rear speakers.			
Power consumption	Refer to the main label on the wireless rear speakers.			
Туре	Rear Speaker	1 way 1 speaker		
	Rear top speaker	1 way 1 speaker		
Impedance	Rear Speaker	3 Ω		
	Rear top speaker	3 Ω		
Rated Input Power	Rear Speaker	50 W RMS		
	Rear top speaker	50 W RMS		
Max. Input Power	Rear Speaker	100 W RMS		
	Rear top speaker	100 W RMS		
Dimensions (W x H x D)	Approx. 130.0 mm x 211.5 mm x 191.2 mm			

• Designs and specifications are subject to change without prior notice.

# Handling the Unit

#### When shipping the Unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

#### Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

#### Cleaning the unit

To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

# Important Information Relating to Network Services

All information, data, documents, communications, downloads, files, text, images, photographs, graphics, videos, webcasts, publications, tools, resources, software, code, programs, applets, widgets, applications, products and other content ("Content") and all services and offerings ("Services") provided or made available by or through any third party (each a "Service Provider") is the sole responsibility of the Service Provider from whom it originated.

The availability of and access to Content and Services furnished by the Service Provider through the LGE Device are subject to change at any time, without prior notice, including, but not limited to the suspension, removal or cessation of all or any part of the Content or Services.

Should you have any inquiry or problem related to the Content or Services, you may refer to the Service Provider's website for the most up-to-date information. LGE is neither responsible nor liable for customer service related to the Content and Services. Any question or request for service relating to the Content or Services should be made directly to the respective Content and Service Providers.

Please note that LGE is not responsible for any Content or Services provided by the Service Provider or any changes to, removal of, or cessation of such Content or Services and does not warrant or guaranty the availability of or access to such Content or Services.

### **TERMS OF USE**

These Terms of Use apply to those individuals and groups who use LG's Wi-Fi speaker, any software(s) associated with LG Wi-Fi speaker, this application and any services associated this application (collectively "LG Software"). They set out LGE's responsibilities to you as well as identifying the "dos" and "don'ts" that you should be aware of when you use the LG Software. LG Software is proprietary software owned by LG Electronics Inc., a corporation registered in Korea with its registered office at Yeouido-dong 20, Yeoungdeungpo-gu, Seoul, Korea. LGE, and its licensors ("LGE", "us" or "we").

By accessing or using LG Software, you confirm that you accept these Terms of Use and that you agree to comply with them. If you do not agree to these Terms of Use, you may not access or use the LG Software. To the extent that any conflict arises between these Terms of Use and any other document referred to in these Terms of Use, these Terms of Use will take precedence, unless clearly stated otherwise in the relevant document.

We grant you a non-exclusive license to use the preinstalled copy of LG Software solely to the extent necessary for you to use your LG Wi-Fi speaker personally and for no other purpose.

You acknowledge that all ownership rights in LG Software anywhere in the world belong exclusively to us and that no ownership rights in LG Software are transferred to you. You are only entitled to the limited use of LG Software as is granted in these license terms.

You may not copy, modify, decompile or reverse engineer our software in any way unless you are allowed to do so by law. We reserve the right to suspend, withdraw or discontinue all or part of the Services without notice if we consider that you are in breach of these Terms of Use.

You acknowledge that LG Software has not been developed to meet your individual requirements. We make no promises or guarantees that LG Software is free from bugs or errors or that it will always be available. We use commercially reasonable efforts to provide LG Software on a continuous, high quality basis but cannot guarantee that they will always be available, uninterrupted or error free. It is possible that we may have to interrupt or discontinue the LG Software or suspend or restrict your use of all or any part of the Services where we consider it reasonably necessary for technical, operational, security, legal or regulatory reasons.

We do not accept any responsibility if for any reason the Services or any part of them are unavailable at any time or for any period.

Although you may use LG Software to download and access content or applications made available by third parties on your LG Software, we make no promises or guarantees that you will always be able to access such content or applications. So far as we are legally able to do so, we exclude any warranties, conditions or other terms which may be implied into these license terms by law.

So far as we are legally able to do so, we exclude any liability for any loss or damage incurred by you or any other person in connection with your use of LG Software. We are only responsible for loss or damage suffered that is a foreseeable result of our breach of these license terms or our negligence up to the amount specified below, but we are not responsible for any loss or damage that is not foreseeable. Loss or damage is foreseeable if it is an obvious consequence of our breach or if it was contemplated by you and us when you starting using LG Software.

For any loss or damage that is not excluded under these license terms, whether in contract, tort (including negligence) or otherwise, the total liability of us and our group of companies to you is limited to the amount that you paid for your LG Software service. To the extent permissible under the applicable laws, some jurisdictions do not allow the limitation or exclusion of liability for incidental or consequential damages, or have legislation that restricts the limitation or exclusion of liability, so the above limitation may not apply to you.

Nothing is these license terms shall limit or exclude our liability for death or personal injury relating from our negligence, fraud or fraudulent misrepresentation or any other liability that cannot be excluded or limited by law.

LG Software provides access to "apps" and link to other services owned and operated by third parties, such as content providers. Any third party apps, services and content that you access via the Services are made available to you by these third party providers and are outside the scope of these Terms of

Your dealings with any third party providers are solely between you and the relevant provider and may be subject to the provider's own terms and conditions and privacy policy. We encourage you to read these documents, although we are not responsible for their content. We do not accept any responsibility for apps, services or content provided by third party providers.

We may impose limits on the use of or access to certain third party content, application or services, in any case without notice or liability. We expressly disclaims any responsibility or liability for any change, interruption, disabling, removal of or suspension of any content, application or service made available through this LG Software. We are neither responsible nor liable for customer service related to the content, application and services. Any question or request for service relating to third party's content, application or services should be made directly to the respective content and service providers or application developers, as appropriate.

These terms do not affect your statutory rights as a

Suitability of the Services for children and parental control tools

Modify this accordingly to suit if appropriate: The Services are not directed at children under the age of 13 and are not structured specifically to attract children under 13. Further, certain content that you may access through your use of the Services may contain material that you consider indecent, objectionable or which may not be suitable for children.

If you permit a child to use your LG Smart TV to access the Services, you are solely responsible for deciding whether or not the relevant Services are appropriate for access by that child.

[Your Smart TV offers a parental control tool (by way of a 4 digit PIN). If you have enabled the 4-digit PIN, your LG Smart TV will not be able to display restricted content unless you type in the PIN. You are responsible for setting up and maintaining the parental control tool and any other controls that are available, and we will not be responsible for any harm, loss or damage you suffer or any other user of your LG Smart TV suffers as a result of your failure to do so. Depending on the models of your LG Smart TV, these features may not be available.

#### Viruses and Security

Modify this accordingly to suit if appropriate: We use commercially reasonable efforts to ensure that the Services are secure and virus free, but those efforts cannot and do not guarantee that the Services will be free from bugs, viruses, or other vulnerabilities.

Further, we do not accept responsibility for any loss or damage caused by a virus, distributed denialof-service attack, or other technologically harmful material that may infect your LG Smart TV, data or other material belonging to you, during your use of the Services.

Modify as you think appropriate: Complaints

If you have any gueries, concerns or complaints about the Services, please contact [include reference to non-personal LG email address].

Modify as you think appropriate: Miscellaneous

Unless expressly stated otherwise, these Terms of Use and the documents referred to in them contain the entire agreement between us and you relating to your use of the Services and supersede any previous agreements, arrangements, undertakings or proposals, written or oral, between us and you relating to your use of the Services.

We may assign, sub-contract or otherwise transfer any or all of our rights and obligations under these Terms of Use to any company, firm or person. We can only do this if it does not materially affect your rights under these Terms of Use. You may not assign, sub-contract or otherwise transfer your rights or obligations under these Terms to anyone else (except where you dispose of your LG Smart TV to a third party) unless you first agree this with us in writing.

If we decide not to exercise or enforce any right that we have against you at a particular time, then this does not prevent us from later deciding to exercise or enforce that right.

If any part of these Terms of Use is found to be illegal, invalid or otherwise unenforceable by a court or regulator, then, where required, that part shall be deleted and the remaining parts of the Terms of Use will continue to be enforceable.

These Terms of Use do not create or infer any rights that are enforceable by any person who is not party to them.

These Terms of Use are governed by the laws of the country where your LG Smart TV is sold and both you and LGE agree to submit to the exclusive jurisdiction of the courts of the country where your LG Smart TV is sold in connection with the same

This Agreement shall be governed by the laws of the Republic of Korea, excluding their conflicts of laws provisions.

If you have any questions or comments about these Terms of Use please contact www.lg.com.

These Terms of Use may be updated by LGE from time to time. If we make a material change to our Terms of Use, we will update you via your LG Software or other means.

#### **OPEN SOURCE SOFTWARE NOTICE** INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

For more information about Google's open source, visit device settings of Google Home app.

#### **Disclaimers**

Google, Google Home, Google Play, Chromecast builtin and other related marks and logos are trademarks of Google LLC.

The Google Assistant requires an internet/data connection. Data rates may apply.

The Google Assistant is not available in certain languages and countries.

Subscriptions may be required, and additional terms, conditions and/or charges may apply.

Controlling certain devices and features in your home requires a compatible smart device.

