

linsar
SEEING IS BELIEVING




24"
HD TV

MODEL: 24LED550

User Manual



Contents

Unpack and Prepare	3	TV Setting Menus	16	USB Mode	35
What's in the Box	3	Quick Settings	18	Set up	35
 Important Tips	4	Picture	19	Troubleshooting	38
Attaching the Stand	5	Sound	21	Product Fiche & Specifications	41
Wall-Mounting the TV	6	Channel	23	Compliance and	
Connect to Power	7	Network	24	Responsible Disposal	42
Connect your Antenna	7	Time	25	Declaration of Conformity	43
Controls and Connections	8	System	26		
Get to Know your TV	8	Lock	27		
Buttons on the TV	8	About TV	30		
Ports on the TV	9	TV Guide	31		
Remote Control	11	Recording	32		
Setup	11	Recording Live TV	33		
Using the Remote Control	12	Playback	33		
Buttons & Functions	13	Pause Live TV (Time-shift)	34		
On-Screen Set Up	15				

Unpack and Prepare

What's in the Box


Before installing your new TV, check you have everything needed.

In the box you will find:

- A. 24" HDTV
- B. Remote Control
- C. AAA Batteries
- D. TV Stands
- E. Screws for TV Stands
- F. Quick Start Guide
- G. General Safety Warnings
- H. User Manual

You will need:

- Phillips-head screwdriver (for stand installation)
- Antenna cable (to watch live TV)

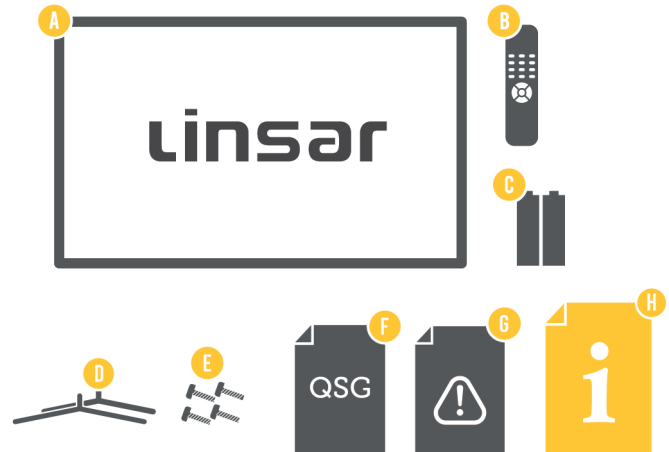




Important Tips

- Place the TV on a level surface.
- Place the TV away from any source that may generate heat or vibrations.
- Make sure there is enough space around vents for airflow.
- The remote control works up to 5 metres away from the TV.
- Unplug the TV before cleaning it.
- Clean using a dry cloth only - do not use water or chemicals.
- Use only the power supply provided.
- It is highly recommended to use safety straps for securing the TV in place.
- Keep liquid, children and pets away from the TV at all times.

Attaching the Stand

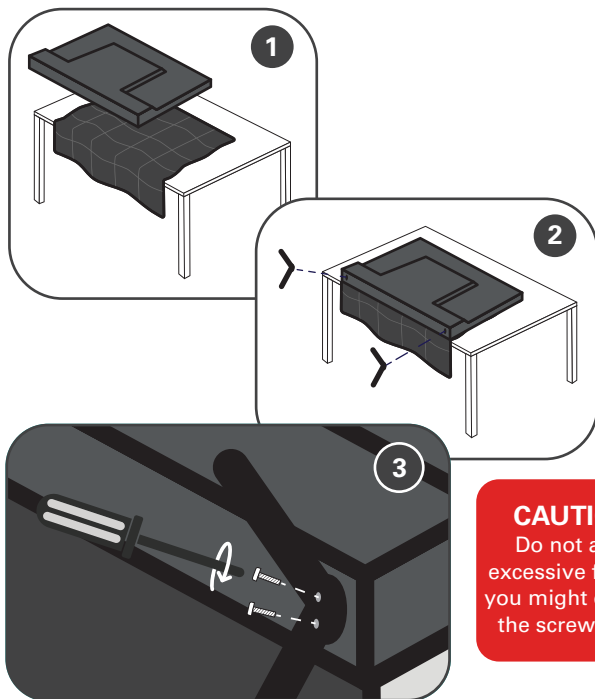

CAUTION!
Do not apply
excessive force as
you might damage
the screw holes.



- Unplug the TV from the power outlet before installing or removing the stand.
- Only touch the frame, not the screen.
- It is highly recommended to use safety straps for securing the TV.



Unless you are wall-mounting the TV, you will need to attach its stand/legs.

1. Lay the TV face-down on a soft, flat surface (like the sofa, or a towel on a table) larger than the TV itself.
2. Match stands to the installation points on the underside of the TV.
3. Attach the stands to the TV at the installation points using the screws provided. (Grab a screwdriver for this bit). Make sure the legs are facing away from each other (not leaning inwards).

Wall-Mounting the TV



- Unplug the TV from the power outlet before wall-mounting.
- Contact a professional for assistance with wall-mounting the TV.
- The TV is only suitable for mounting at heights $\leq 2\text{m}$.

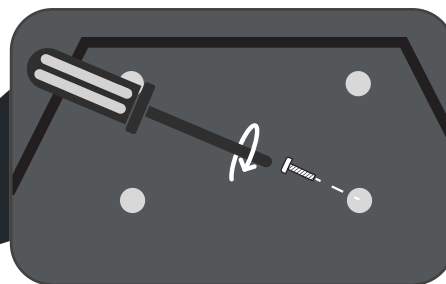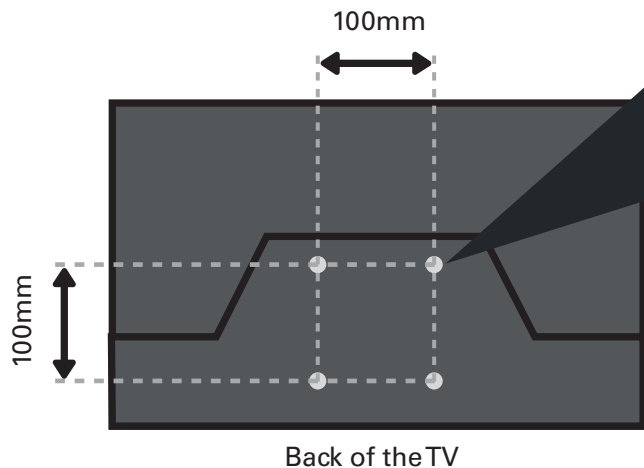

Required

- VESA Mounting Bracket
- 4 x M4*10mm screws (or longer as required)


The TV comes with holes on the back panel for use with wall-mounting brackets (bracket not included).

Use four standard M4*10mm screws (or longer, depending on the mounting bracket) to wall-mount this TV (screws are not included).



The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, consult a qualified installer for advice on bracket support and wall support.

Connect to Power

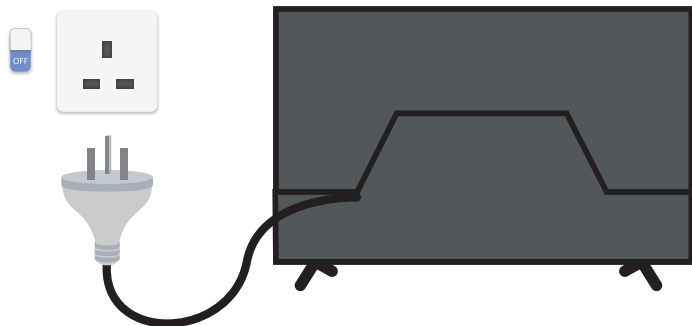

Don't forget to plug in the TV to the power outlet. Leave the power switched off until installation is finished.




Make sure the TV is **switched off** at the power outlet until you have finished connecting your cables.

Connect your Antenna

Digital TV in HD (High Definition)

High Definition (HD) channels provide the best viewing quality and are available with a digital antenna connection.

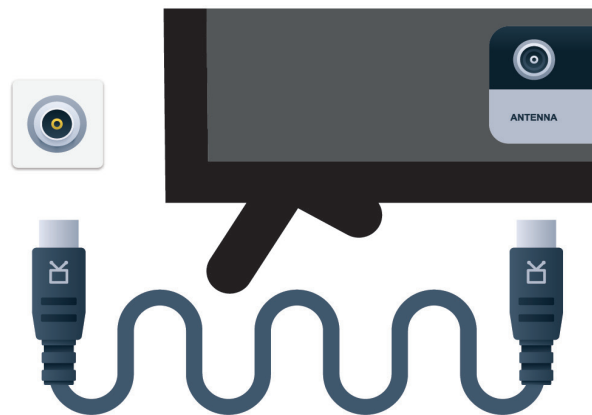


Antenna cable not included.

Controls and Connections


Get to Know your TV



Buttons on the TV

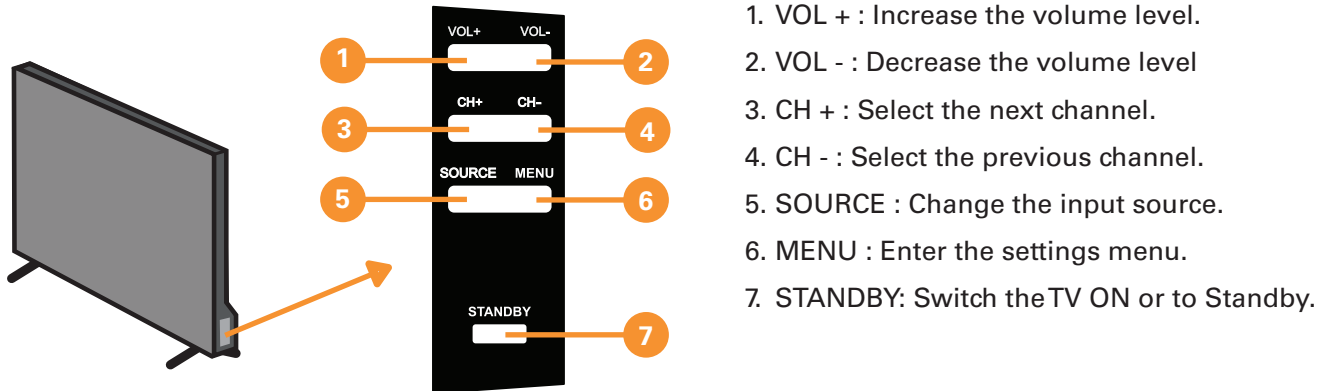

Ports on the TV

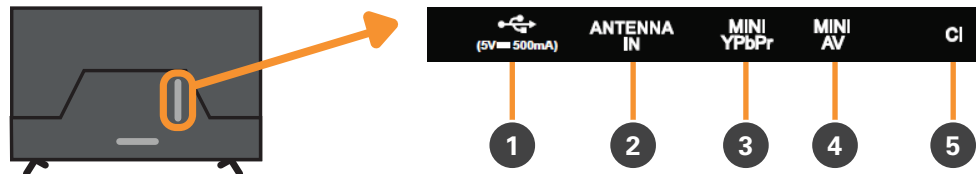 


- | | | |
|---|-----|---|
| 1 | USB | <ul style="list-style-type: none">» PVR record and pause liveTV» Play your stored media files (supported file codecs and extensions may vary)» Software updates |
|---|-----|---|

- | | | |
|---|------------|--|
| 2 | ANTENNA IN | Connect your antenna for liveTV. (Antenna cable not included.) |
|---|------------|--|

- | | | |
|---|------------|---|
| 3 | MINI YPbPr | You can use this to connect component signal source. Supports high definition (HD) picture quality. This requires a component cable (not included). |
|---|------------|---|

- | | | |
|---|------------|--|
| 4 | MINI AV IN | You can use this to connect your DVD player. Supports Standard Definition (SD) picture quality. Requires an AV cable (not included). |
|---|------------|--|

- | | | |
|---|----|--|
| 5 | CI | CAM (Conditional Access Module) card is connected to the CI slot, you can view related information or manage the CAM card. |
|---|----|--|

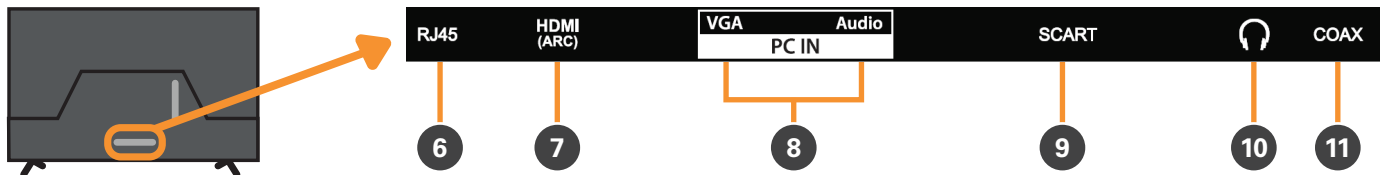 

6 **RJ45 (LAN)** Connect to your broadband modem using an Ethernet cable (not included).

7 **HDMI IN** All-digital connection between the TV and any HDMI device. Supports Full HD. Requires a HDMI cable (not included).

8 **PC IN** Connect your PC and its Audio to your TV. Requires VGA and AUX Cable (not included).

9 **SCART** Connect your SCART signal source, Requires SCART Cable (not included).


10 **Headphone Jack** Connect to your headphones, amplifier or audio device, using an AUX cable (not included).

11 **COAX** Connect an external digital audio device. Use an Coaxial cable (not included) to connect the unit with an amplifier, soundbar or other audio decoding device for digital audio signal input.

Remote Control

Setup

Insert two AAA size batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.

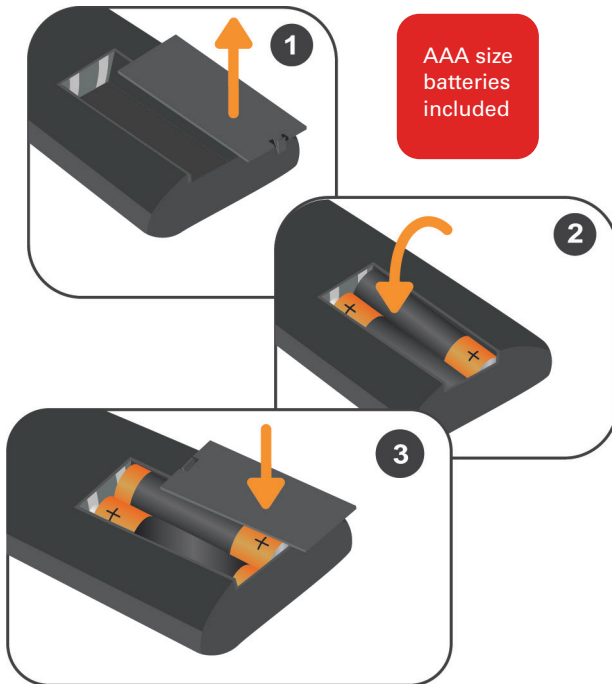

Precautions When Using Batteries

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

Illustration is for reference only.

Using the Remote Control

To use the remote, point it towards the remote sensor at the front of the TV. The remote will not operate if its path is blocked.

The remote has a range of up to about 5 metres from the TV at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

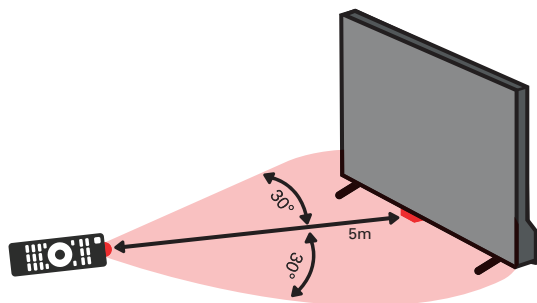


Image is an example only. Remote sensor location on TV may vary.



Remote Hints and Tips

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- Do not place objects between the remote control and the remote sensor.
- Do not use this remote control while simultaneously operating a remote control for other devices.

Buttons & Functions

⏻/STANDBY: Switch the TV to On or Standby

DVD: Select DVD mode*

SLEEP: Set the TV sleep timer

P-MODE: Cycle through the different picture modes

NUMBER BUTTONS (0-9): Press to select a TV channel directly when watching TV


GUIDE: Launch the TV Guide (DTV)

SOURCE: Switch the input source

▲/▼/◀/▶: Press the UP/DOWN/LEFT/RIGHT buttons to navigate the on-screen menus and adjust the system settings

OK: Display the channels list (DTV).

MUTE/🔇: Mute the sound. Press again or press VOL+ to restore the sound

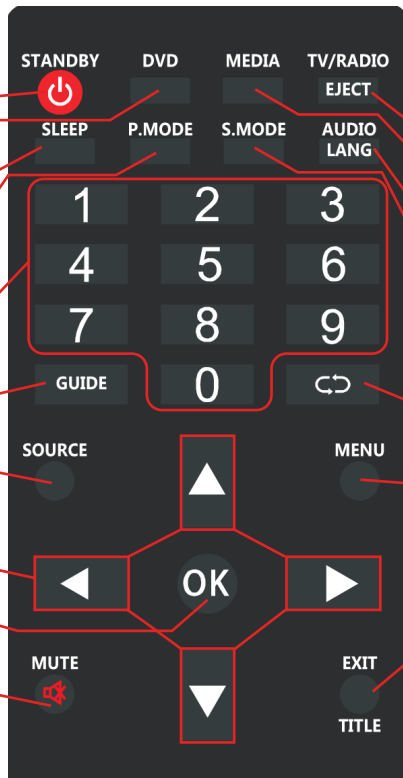

TV/RADIO/EJECT: Switch between TV or radio / Eject a disc (DVD)*

MEDIA: Select USB mode

AUDIO/LANG: Switch the available sound-track language (DTV/DVD)*


S-MODE: Cycle through the different sound modes

↺: Return to the previous channel

MENU: Display the main TV menu

TITLE/EXIT: Exit from the main TV menu displayed on the screen; Display the DVD title menu*

* DVD functions are not applicable for this model.

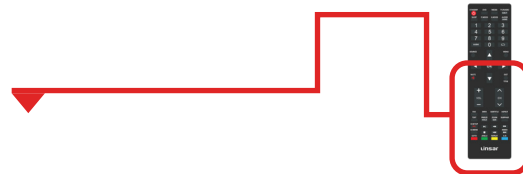

VOL +/-: Turn the volume up/down

INFO: View information on current program

FAV: Press to display your favourite program in DTV mode

TEXT: Switch between TV and Teletext mode

FREEZE/HOLD: Hold the picture temporarily

REC/D.SETUP: Record program in DTV mode / Display the DVD setup menu

⏸: PLAY/PAUSE in TIMESHIFT and USB mode

D.MENU: Display the main disc menu

■: Stop playback

■/GOTO: Jump to a different chapter of the DVD

■/ANGLE: View DVD playback from different angles, if the DVD has this feature*

CH ^/v: Change to the next or previous channel

SUBTITLE: Enable/disable subtitles

ASPECT: Change the size of the image on your screen

SUBPAGE: Manually jump to the previous or next subpage of Teletext

SIZE/ZOOM: Change the picture size

⏮: Move fast backward

 
⏭: Move fast forward

⏮/INDEX: Play next file./ Display the recorded programs list (DTV)

⏮: Play the previous file

■/A-B: Repeat selected DVD scenes*

■/REPEAT: Repeat playback of a selected chapter, title, or the entire DVD*

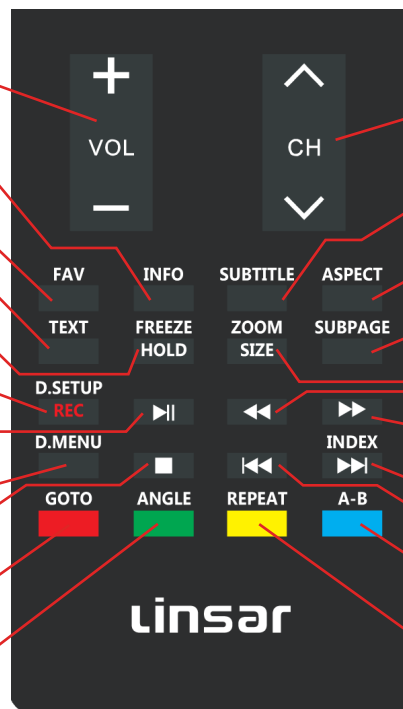

On-Screen Set Up





Make sure equipment is properly connected before connecting the TV to power.



On/Standby light is RED in standby mode.


 


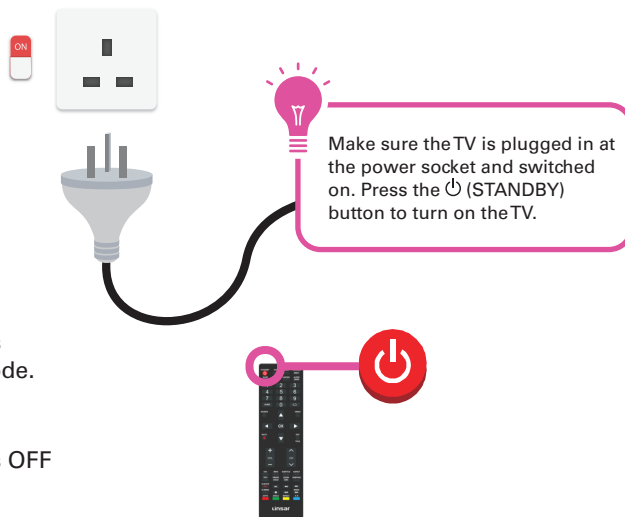On/Standby light is OFF when the TV is on.



Make sure the TV is plugged in at the power socket and switched on. Press the  (STANDBY) button to turn on the TV.

First Time Setup menu

When you turn the TV on for the first time, the First Time Setup menu will appear.

Follow the prompts using the  /  /  /  **OK** buttons to select your preferences. You will be able to adjust:


OSD Language **Country** **Home Mode** **Input Source**

If you make an error, you can update your preferences in the settings menu later.

TV Setting Menus

Menu Navigation Buttons

Press the **MENU** button to display the TV settings menu. See the guide below for all the other buttons you'll need to use to adjust and change your settings.

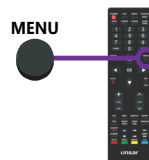

Once you have programmed any settings, the unit will retain them in its memory until you change them, even after turning the TV off.

Function

Remote Button

Display the main menu



Select different sub-menus



Enter a sub-menu



Select preferred option



Adjust a value



Return to the previous menu



Exit a menu



Menus Index



Quick Settings

18

- Audio Language
- Subtitle Language
- Record List
- Schedule List



Picture 19

- Picture Mode
- Personal Mode Settings:
 - Brightness, Contrast, Colour, Tint, Sharpness, Backlight
- Aspect Ratio
- Advanced Settings:
 - Overscan, Colour Temperature, Dynamic Contrast, Noise Reduction



Sound 21

- Sound Mode
- Surround Sound
- Speaker (Digital Output)
- AVC (Auto Volume Level)
- Advanced Settings:
 - Balance, Treble, Bass, Audio Description



Channel 23

- Auto Scan
- DVB Antenna
- Digital Manual Scan
- Digital Smart Retune
- CAM Setting
- Signal Information



Network 24

- Network
- Ethernet
- Network Test
- Network Information



Time 25

- Time
- On Time
- Off Time
- Sleep Timer
- OSD Timer
- Auto Standby



System 26

- Country
- Language
- Lock
- HDMI CEC
- Advanced Settings
 - PVR & Time-Shift Settings, Hearing Impaired, Blue Screen, Setup Wizard, Store Mode



Lock 27

- Lock
- Set Password
- Channel Lock
- Parental Guidance
- Key Lock
- Hotel Mode

Quick Settings



Option	Description
Audio Language	Select available audio language
Subtitle Language	Select available subtitle language
Record list	Display list of recorded programs
Schedule list	Display schedule list if a program has been scheduled through EPG



Picture



Picture Mode

Standard (default) : Picture settings for general viewing environments.

Economy : Settings are optimised for energy efficiency.

Dynamic : Brighter and clearer picture setting for bright viewing environments.

Movie : Picture settings for cinematic viewing environment.

Personal : Adjust settings to best suit your viewing environment and content.

Personal Mode settings

Option	Description
Brightness	Adjust the depth of shadow in the picture. The closer to 0, the darker shadows will look, losing detail in darker images.
Contrast	Adjust the intensity of highlights/white in the picture. The closer to 100, the brighter highlights will look, losing detail in brighter images.
Colour	Adjust the saturation. The closer to 100, the deeper the colour.
Tint	Adjust colour balance between red and green. The closer red is to 50, colour will be more red dominant. The closer green is to 50, colour will be more green dominant.
Sharpness	Adjust the sharpness of the picture. The closer to 100, the sharper and clearer the image.
Backlight	Adjust screen brightness by adjusting the backlight. The closer to 100, the brighter the screen.



See the next page
for more
menu settings

Aspect Ratio

Adjust the video size. Sizes may differ between input sources.

Advanced Settings

Option	Description
Overscan	Turn overscan on/off.
Colour Temperature	Adjust colour temperature for suitable viewing.
Dynamic Contrast	Adjusts the difference between the bright and dark sides of the screen according to the brightness of the image.
Noise Reduction	Reduce screen noise to make the image clean.

Sound

Option	Description
Sound Mode	<div><div>Standard</div><div>Music</div><div>Personal</div><div>Movie</div><div>Sports</div></div>

Option	Description
Surround Sound	Turn ON/OFF surround sound effect from yourTV speakers.
Speaker (Digital Output)	Select the digital audio output mode. Options: PCM, RAW, OFF
AVC (Auto Volume Level)	Turn on/off Auto Volume Level.

Advanced Settings

Option

Description

Balance

Adjust the audio output between the left and right speakers.

**AD (Audio
Description)**

Audio Description (AD) provides an additional audio track for visually challenged persons (DTV only, subject to program).

These options are available in the Personal sound mode:

Bass

Adjust bass of audio output.

Treble

Adjust the levels of higher pitched sounds.

Channel



Option	Description
Auto Scan	Automatically tune all available digital TV channels. Adjust settings. Press OK or ► to start scanning.
DVB Antenna	Display current antenna type.
Digital Manual Scan	Manually select and tune digital TV channels. Use ◀/▶ to select the broadcast channel. Select START to begin scanning.
Digital Smart Retune	Quickly scans channels if the current saved signals are updated.
CAM Setting	When a CAM (Conditional Access Module) card is inserted into the CI slot, you can view related information or manage the CAM card.
Signal Information	Display current signal information (DTV mode only).



Network

Option	Description
Network	Display network type
Ethernet	Turn on/off DHCP. When DHCP is off, you can see and adjust IP address, Netmask, Gateway and DNS using navigation buttons.
Network Test	Test network condition
Network Information	Display network information



Time

Option	Description
	Display current system time.
Time	Auto sync: turn auto synchronisation on/off. If off, adjust the date and time using the navigation buttons. Time zone: select time zone.
OnTime	Set the hour, minute and day using the navigation buttons. Input source: select power on input source. Channel: select the channel Volume: adjust the volume.
OffTime	Set the hour, minute and day using navigation buttons.
SleepTimer	Set the sleep timer.
OSDTimer	Select desired OSD menu duration.
Auto Standby	Select desired auto sleep (standby) duration.

System



Option	Description
Country	Select country
Language	Select your preferred On Screen Display, Audio and Subtitle language.
Lock	See next page for more information.
HDMI CEC	See page 29 for more information.

Advanced Settings

PVR & Time-Shift Settings	Select desired disk, partition, Time-Shift size, format USB device and check USB speed.
Hearing Impaired	For hearing impaired users, this function explains scenes or actions via a descriptive caption. (Available for programs that contain related captions.)
Blue Screen	When there is no signal or a poor signal, a blue screen will appear.
Setup Wizard	Open the first time setup wizard.
Store Mode	Select Off for normal home viewing or On for in-store retail demonstrations.

Lock




Enter the factory password '0000' using the number buttons on the remote and select 'OK' on-screen. If you changed your password but forgot it, you can still use the master password.



Factory Password: 0000

Master Password: 4711

Option	Description
Lock	Enable/disable the lock on the system.
Set Password	Input a new password using the number buttons on the remote and confirm it again to set your private password.
Channel Lock	Lock selected channels. Press the ▲ / ▼ buttons to select the channel you want to lock. Press the  /ANGLE button repeatedly to lock/unlock the highlighted channel.
Parental Guidance	This item is used to block access to specific program ratings.
Key Lock	Enable/disable the lock on TV button operation.
Hotel Mode	See the next page for more information.


Hotel Mode

Option	Description
Hotel Mode	Turn On/Off Hotel Mode.
Source Lock	Turn On/Off the lock on available sources.
Default Source	Set a default input source.
DTV Channel Type	Set the DTV channel type.
Default Program	Set the default digital program.
Default Volume	Set the default volume level.
Max Volume	Set a limit to the maximum volume level.
Clear Lock	Reinstate the default settings of Hotel Mode.
USB clone to TV	Backup data to your connected USB storage device.
TV clone to USB	Restore data to the TV from a USB memory device.

HDMI CEC

This feature allows for your TV and your connected HDMI device to be controlled by one remote. Press the SOURCE button on the TV or remote control to select the HDMI input source.

Option	Description
HDMI CEC (Consumer Electronics Control)	Turn HDMI CEC On/Off.
Device Auto Power Off	When enabled, connected CEC devices will power off automatically when the TV is turned off.
TV Auto Power On	When enabled, the TV will automatically turn on when connected CEC devices are turned on.
HDMI ARC (Audio Return Channel)	If this function is enabled, sound from the TV can be sent to an HDMI-ARC supported external audio device.
Detect	Detect available devices.



Make sure your device supports CEC! Also remember to turn on its ARC function.

About TV

Option	Description
System Information	Show TV system information
System Upgrade	Upgrade TV software through network or a USB disk.
Restore to Default	Restore to default factory settings.




TV Guide

TV Guide Functions


Function	Remote Button
Switch between the channels list and programs list	◀ / ▶
Select a Channel or Program	▲ / ▼
Select the program and press OK to display more options	OK
Schedule a reminder for the selected program	GO TO
Schedule a recording for the selected program	D.SETUP REC
Display full program information	INFO
Exit TV Guide menu	EXIT TITLE

To access the TV guide, press the **GUIDE** button on the remote.

 To activate the TV Channels use the ▲ / ▼ buttons to select a channel in the left column, then press OK to confirm.

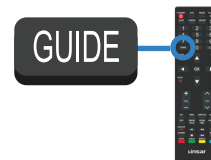

Recording

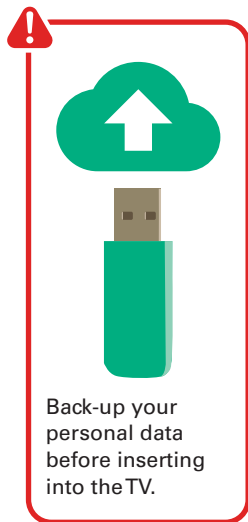 

Important Tips:

- Back-up your personal data before plugging in your USB to the TV. We do not assume liability for any loss of data due to misuse or malfunction.
- You cannot change channels while in recording mode.
- If the signal is interrupted while in recording mode, the recording will stop until the signal is established.
- Do not turn the TV off while it is in time-shift mode.
- The file recorded can only be used on this TV. Do not copy it to any other device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored on it may be damaged.



Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



Recording Live TV

Instant Recording

Press **D.SETUP/REC** once - start recording.

Press **D.SETUP/REC** again to view detailed information.




Stop Recording

Press **■** once - display the dialogue box.

Select **YES** to stop recording.

Select **NO** to continue recording.

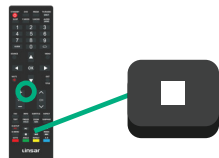

When a program is being recorded in the background (while the TV is in standby mode), the Standby/ON light will flash red.



Recording, scheduled recording and pause live TV functions only work in DTV mode.

SOURCE



Scheduled Recording

See 'TV Guide' on page 31 about scheduling recordings.

Playback

Press the **INDEX** button to display the list of recorded programs, or press **MENU** > select Quick Settings > Record List then press the **OK** button to display the list of recorded programs.



Press the **OK** button to start playback in Full Screen Mode.

Press **MENU** then select "delete" to delete the selected file.

NOTE: If the tool bar disappears, press the **EXIT** button on the remote control to display it again.

Pause Live TV (Time-shift)

Temporarily pause the liveTV signal, then resume playback at your convenience.




Before you can record with this TV (including time-shift recording), you must insert your USB storage device into the USB port.



Start Time-shift

Press the **⏸** button on the remote to enter time-shift mode.

Press the **⏸** or **OK** buttons to resume playing the program.

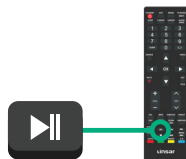

Stop Time-shift



Press the **■** button to exit time-shift.



The USB storage device won't retain recorded data after you exit the time-shift function.


NOTE: If the tool bar disappears, press the **EXIT** button on the remote control to display it again.

USB Mode

Set up

Insert your USB into a USB port on the TV.

Press the SOURCE button to select 'USB' mode.

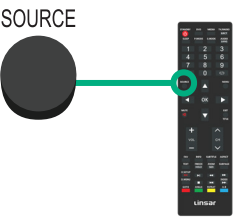

You can only play Photos in the Photo category and Music in the Music category and so on. Make sure you select the correct category for the file you wish to play.

Function	Remote Button
Choose a source or file	◀/▶/▲/▼
Start playing your media	OK
Return to the previous screen, exit media mode	EXIT TITLE



Playback Functions

Playback of different media types have different controls.

Photo

Function	Remote Button
Navigate to a folder or file	◀/▶ / ▲ / ▼
Display a photo	OK
Display/close playback tool bar	MENU
Display media file information	INFO
Return to file list	EXIT TITLE

Music

Function	Remote Button
Navigate to a folder or file	◀/▶ / ▲ / ▼
Play a track	OK
Switch playlist and tool bar	MENU
Display media file information	INFO
Fast forward or rewind the track	◀◀ / ▶▶
Skip or restart the current track	⏮ / ⏭
Return to the file list	EXIT TITLE

Video

Function	Remote Button
Navigate to a folder or file	◀/▶ / ▲/▼
Play video	OK
Display or close playback tool bar	MENU ●
Display media file information	INFO
Return to the file list	EXIT ● TITLE



Only supported file types will be displayed. See the specifications table for supported file types.



Troubleshooting

If you experience problems with your TV, check below for advice.

Problem	Solution
The remote control does not work	<p>Make sure that the batteries are installed with their poles (+/-) in the correct direction.</p> <p>Remove any obstacles between the remote control and remote control sensor on the TV.</p> <p>Check if the power indicator at the bottom of the TV blinks when you press the remote's power button.</p> <p>If it does not, replace the remote control's batteries.</p> <p>Try pointing the remote directly at the remote control sensor from 1.5-1.8m away.</p>
The TV won't turn on	<p>Make sure that the AC power cord is securely plugged into the wall outlet.</p> <p>Check the wall outlet is turned on and the power indicator at the bottom of the TV is lit.</p> <p>If using a multi-outlet, check if it is working properly. To check whether a power strip is working properly, plug the TV's power plug directly to a wall outlet and observe its operation.</p> <p>Try to power on using the power button on the TV.</p>
There is no picture/sound or distorted picture/sound in DTV mode	<p>Ensure the antenna cable is securely connected to the TV and to the wall outlet.</p> <p>Ensure the input source is set to DTV.</p> <p>If "No Signal" is displayed, run Menu > Channel > Auto Scan to search for channels.</p> <p>If some channels are missing, run Menu > Channel > Auto Scan or manually search by Menu > Channel > Digital Manual Scan.</p> <p>Try a different antenna cable or another TV if possible.</p> <p>Move the TV away from electronic equipment or devices that could cause interference.</p> <p>Adjust the antenna position.</p> <p>If the picture appears fuzzy or blurry, select High Definition (HD) channels or programs.</p>

Problem	Solution
There is no picture/sound or distorted picture/sound from an external device	<p>Ensure that connection to the device is correct and that all cables are fully inserted.</p> <p>Remove and reconnect all cables connected to the TV and the external devices. Try new cables if possible.</p> <p>Restart the connected devices by unplugging each device's power cord and then plugging it in again.</p> <p>If "No Signal" is displayed on the TV, ensure that the correct input source has been selected.</p> <p>When using the component cable, confirm that the green (Y), blue (Pb) and red (Pr) jacks are plugged into their proper connectors.</p>
There is no/distorted/delayed sound	<p>Ensure the volume is not muted. If it is, press the VOL+ button to restore the sound.</p> <p>If earphones are connected, unplug them.</p> <p>Check the volume level of the external device.</p> <p>Ensure that connection to the external audio device is correct and that all cables are fully inserted.</p> <p>Ensure correct input source and audio settings have been selected on the external audio device.</p> <p>Move the TV away from electronic equipment or devices that could cause interference.</p> <p>If you are using an external audio device via a HDMI cable, ensure that the device supports HDMI-ARC and, if applicable, the ARC setting is turned On (refer to the connection guide in the user manual of the connected device). Ensure on the TV, MENU > System > HDMI CEC > HDMI ARC > ARC setting is turned on.</p> <p>If you are using an external audio device via an optical cable, check that the MENU > Sound > Speaker > Audio Out is set to "PCM".</p> <p>If the TV sound is not synchronised with the picture, adjust the applicable MENU > Sound > Speaker > Digital Audio Delay setting.</p>



Problem	Solution
<p>USB storage device is not recognised or media files don't play properly</p>	<p>This TV has been tested with the majority of Flash memory-based devices and hard disks (media players with HDD) on the market however, it may not be compatible with certain devices.</p> <p>If the external hard drive has its own power adaptor, use it.</p> <p>Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.</p> <p>The TV may not be able to recognise a USB device or read the files if it is connected with a USB extension cable</p> <p>The files that use an unsupported codec or container will not play on the TV.</p> <p>Some files may not play correctly if there is an error in the content or container.</p> <p>Certain files, depending on how they are encoded, may not play on the TV.</p> <p>Sound may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.</p>



Product Fiche & Specifications

Brand	Linsar
Product name	24"HD TV
Model No.	24LED550
Energy efficiency class for Standard Dynamic Range (SDR)	F
On mode power demand for Standard Dynamic Range (SDR)	20W
Energy efficiency class for High Dynamic Range (HDR)	n/a
On mode power demand for High Dynamic Range (HDR)	n/a
Off mode power demand	n/a
Standby mode power demand	<0.5W
Networked standby mode power demand	n/a
Size ratio	16:9
Screen resolution (pixels)	1366 x 768
Diagonal screen size	60cm/23.6inch
Visible screen area	15.3dm ²
Panel technology used	LED LCD
Automatic brightness control (ABC) available	No
Voice recognition sensor available	No
Room presence sensor available	No
Image refresh frequency rate	60Hz

HDMI version	1.4a	
HDCP version	1.4	
Multimedia playback formats (USB mode)	Music	MP3
	Photo	JPEG/JPEG
	Movie	AVI, MPEG-1, MPEG-2
USB output	DC 5V 500mA	
Power source	AC 100-240V, 50/60Hz	
Power consumption	Max. 48W	
Operating temperature	0° C to 45° C	
Operating humidity	20%-80%	
Dimensions (W x D x H)	With stand: 550 x 169 x 362 mm	
	Without stand: 550 x 75 x 327 mm	
Weight	Net	2.5 kg
	Gross	3.5 kg

Specifications are subject to change without notice.



Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product



At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.



Notes for Battery Disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.



Declaration of Conformity



Hereby, Tempo International Ltd., declares that this TV complies with all applicable essential requirements of the directives. The full text of the declaration of conformity is available at the following internet address. Or please scan the QR code to access.

<https://www.linsar.com/wp-content/uploads/2021/06/24LED550-Declaration-of-Conformity.pdf>

<https://www.linsar.com>

linsar
SEEING IS BELIEVING