

linsar

SEEING IS BELIEVING

USER MANUAL



2 SLICE
TOASTER
980W

Contents

Important Safeguards.....	03
Parts List.....	06
Getting Started.....	07
Instructions.....	08
Troubleshooting.....	10
Other Useful Information.....	11

Important Safeguards

READ ALL INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If this is not the case, contact the after sales support line and do not use the 2 Slice Toaster.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or circuit breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the 2 Slice Toaster body itself in water or other liquid. Do not expose the electrical connections to water.
- The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat.
- Grip the plug when disconnecting, do not pull the cord.
- Do not let the cord hang over the edge of a table or bench top. Do not let it touch hot surfaces.
- Do not pick up or operate the appliance if the power supply cord or plug is damaged, or after it malfunctions or has been dropped or damaged in any way.
- In case of damage, contact the after sales support line for advice.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Make sure all electrical connections are clean and dry before switching on.
- Do not use this appliance in conjunction with an extension cord.
- Unplug the appliance from the power outlet when not in use and before cleaning, servicing, maintenance or moving the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.

WARNING: ELECTRIC SHOCK HAZARD!

Never attempt to dislodge food from inside the 2 Slice Toaster when it is plugged into an electrical outlet. Always unplug it and let it cool first.

Never use a knife or any other sharp metal tool to remove the bread, and do not touch the metal parts inside the 2 Slice Toaster.

Usage conditions and restrictions


- This appliance is intended for domestic use only.
- This product is not intended for commercial use. Do not use it outdoors.
- Only use this 2 Slice Toaster as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Improper installation and the use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or personal injury and will invalidate your warranty.
- We assume no responsibility for any eventual damages caused by improper or faulty use.
- This appliance can be used by children from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children should be supervised to ensure they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use chemical, steel wool or abrasive cleaners to clean the outside of the unit, as these will scratch the metal surface.
- Do not operate the unit near liquids (kitchen sink, water basins, taps etc).
- Ensure that all the parts are correctly assembled before operation.
- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- If there is a product malfunction, or if it has been damaged in any way, call the after sales support for assistance.
- Immediately unplug the appliance if fire or smoke is emitted.
- Place the product on a straight, rigid and stable surface, away from sources of direct sunlight or excessive heat.
- Do not place the product near heat sources such as radiators, heat registers, stoves or other appliances that produce heat.
- Do not place the product near other items that may damage it, such as naked flame sources (lit candles) or objects containing water (a vase or fish bowl).
- Take care that no objects fall and no liquids are spilled into any openings.
- Do not leave the 2 Slice Toaster unattended when it is switched on.

 **WARNING!**

- **CAUTION: HOT SURFACE!** 
- Do not put any part of your hand or body near the 2 Slice Toaster when it is switched on.
- Do not touch any part of the 2 Slice Toaster when it is toasting. The surfaces get hot.
- This appliance features a short power cord to reduce the risk of being entangled, and to reduce the risk of tripping. An extension cord or longer detachable cord is not recommended for use with this product.
- There are no user-serviceable parts inside. Do not attempt to service this product. Please call our after sales support for instructions.
- Intended use: The appliance is only suitable for toasting bread products. Do not use it for anything other than its intended purpose, and only use it as described in this manual.
- Do not put anything else (such as oversized food, metal foil packages or utensils) into the toasting slots. Doing so may create a fire or electric shock hazard.
- When using the 2 Slice Toaster, make sure there is adequate air space above and on all sides for air circulation.
- **WARNING: DO NOT** use the 2 Slice Toaster under the following conditions:
 - * On or near a gas or electric hob, in a heated oven or near an open flame.
 - * On a soft surface (such as carpet) or where it may tip over during use.
 - * Outdoors or in areas of high humidity.
 - * Near or below materials that can ignite easily (such as curtains, drapes, wall hangings, tea towels) or underneath wall cabinets, as bread may burn and cause a fire if it is toasted for too long.
- Do not cover the 2 Slice Toaster or place anything on top during use.
- Do not insert any objects into the appliance.
- **Crumb tray:** To avoid the risk of fire, regularly remove crumbs from the crumb tray. Make sure the crumb tray is dry and properly in place before reuse.
- The 2 Slice Toaster heats up and can cause burns. The metal housing on top of the 2 Slice Toaster can become very hot. Do not touch hot surfaces during or immediately after use. Use handles or knobs.
- Always use oven mitts when handling hot material and allow metal parts to cool before cleaning.
- Take care when taking out hot bread slices after toasting to avoid injuries.
- The temperature of accessible surfaces may be high when the appliance is operating.

SAVE THESE INSTRUCTIONS

Parts List

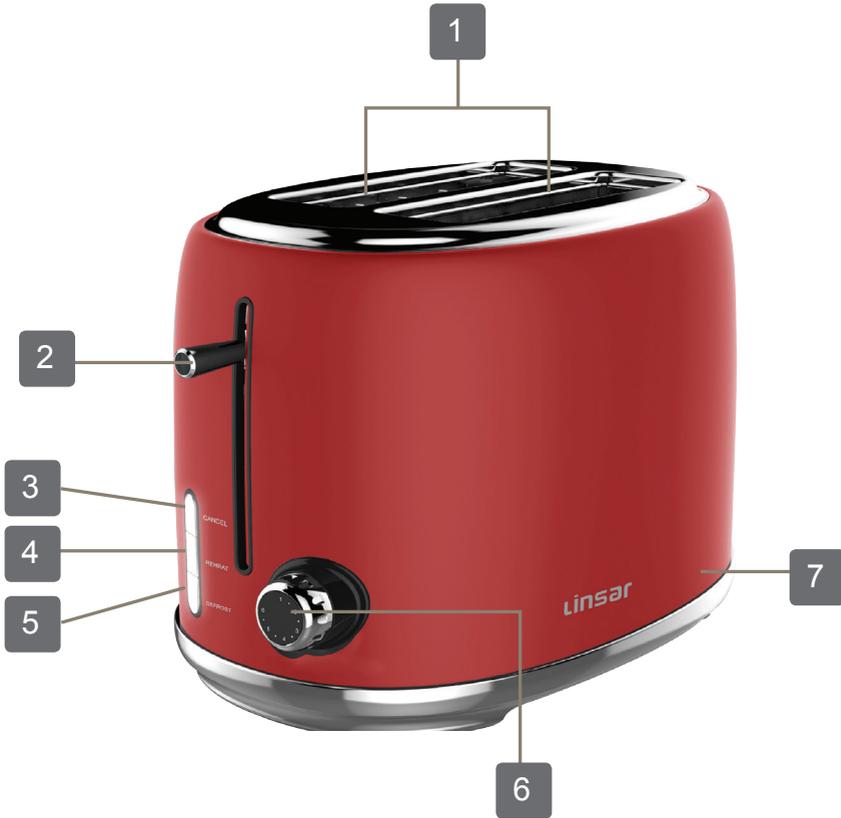

1. Bread slots
2. Toasting lever
3. Cancel button
4. Reheat button
5. Defrost button
6. Browning control knob
7. Removable crumb tray (not visible here)

Getting started

Before first use

- This product has been packaged to protect it against transportation damage. Remove all packaging materials from around and inside the appliance, keep the original packaging carton and materials in a safe place; it will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the carton is to be disposed of, please recycle all packaging materials where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Read this manual to familiarise yourself with the 2 Slice Toaster. Pay particular attention to the safety instructions on the previous pages.
- Remove any adhesive labels and wipe the outside of the 2 Slice Toaster with a damp cloth. Make sure there is no packaging material remaining in the slots.
- Fully unwind the power cord and inspect it and the plug for damage. Do not use the 2 Slice Toaster if it is visibly damaged or not working properly. In case of damage, contact the after sales support line for advice on replacement.
- Place the 2 Slice Toaster on an even and heat-resistant surface. Do not place the 2 Slice Toaster where heat, moisture or high humidity are generated, or near combustible materials.
- Keeping the safety instructions from the previous pages in mind, place the 2 Slice Toaster on an appropriate surface and plug it into an easily accessible wall outlet.
- Set the browning control to the maximum level.
- Push down the toasting lever and let your 2 Slice Toaster heat up without any bread to burn off any remnants from transport and the manufacturing process.
- **NOTE:** You may notice a slight burning smell or smoke when first using the 2 Slice Toaster. This is no cause for concern. Ensure good ventilation and let the 2 Slice Toaster complete a few toasting cycles until no more odour or smoke is present.
- After a short cooling down period, your 2 Slice Toaster is now ready for use.

Instructions

Toasting bread

- Make sure the crumb tray is properly in place before using the 2 Slice Toaster. It is located underneath the heating elements and can be accessed from the side of the 2 Slice Toaster opposite the controls.
- Place the 2 Slice Toaster on an even and heat-resistant surface, connect it to a properly installed wall socket and switch on power to the outlet.
- Place two slices of bread into the bread slots.
- Set the browning level with the browning control knob. The higher the number, the longer the toasting time and the darker the toast.

Knob position	Browning level
1 - 2	For thinly sliced, or slightly dry bread
3 - 5	For fresh, medium thick slices of white or wholemeal bread
6	For frozen, or very thick slices

- Push down the toasting lever completely to switch on the 2 Slice Toaster. The lever will only stay down when the 2 Slice Toaster is connected to the power outlet and the power is switched on.
- The CANCEL button indicator will illuminate; press it at any time to stop toasting.
- **NOTE:** This 2 Slice Toaster automatically adjusts the slot width when the toasting lever is pushed down to accommodate slices of different thickness.
- When the toast is ready, the toasting lever moves up and the 2 Slice Toaster switches off automatically. You can now remove the bread from the 2 Slice Toaster.
- **CAUTION:** Do not touch the metal parts of the 2 Slice Toaster as they become hot during toasting.
- If toasting more bread, allow the 2 Slice Toaster 15 to 20 seconds to cool down before beginning the next toasting cycle so the electronically controlled thermostat can reset.
- After several toasting cycles, pull out the crumb tray and clean it. See the cleaning instructions on page 11.

WARNING!

If bread becomes stuck inside the 2 Slice Toaster, unplug the 2 Slice Toaster and let it cool before trying to remove the bread. Do not use a knife or any other sharp metal tool to do so, and do not touch the metal parts inside the 2 Slice Toaster.

Reheating toasted bread

Use this function to reheat bread that was toasted earlier.

- Put the toasted bread back into the 2 SliceToaster.
- Push down the toasting lever.
- Press the REHEAT button. The reheat indicator light comes on and stays illuminated during the reheating process.

Toasting frozen bread

The 2 Slice Toaster has a special defrost setting for toasting frozen bread slices.

- Put one or two slices of frozen bread into the 2 SliceToaster.
- Select the browning level.
- Push down the toasting lever.
- Press the DEFROST button. The defrost indicator light comes on and stays illuminated during the defrosting/toasting process.

Some tips for perfect toasting

Toasting is a combination of cooking and drying bread. As moisture levels differ from one bread to another, toasting times can vary.

- Bread products with a very uneven surface (such as English muffins) will require a higher setting.
- Thickly cut pieces of bread will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur.
- When toasting raisin or other fruit bread, remove loose raisins from the surface of the bread before placing the slices into the 2 Slice Toaster. This will help prevent pieces from falling into the 2 Slice Toaster or sticking on the guard wire in the slot.
- Single slice toasting: If you are toasting a single slice of bread, select a lighter browning setting than usual. The 2 Slice Toaster is designed to heat the whole toasting chamber for two slices. By reducing the time for toasting a single slice, it will not be over-toasted.

Problem	Solution
The 2 Slice Toaster is not working.	Check the power connection and ensure the plug is properly inserted in the outlet.
Bread is stuck in the 2 Slice Toaster.	<p>Unplug the 2 Slice Toaster and let it cool down. Then carefully remove the slice or slices from the 2 Slice Toaster. You may need to hold the 2 Slice Toaster over a sink and shake it gently to help loosen stuck bread.</p> <p>Do not use metal objects to remove the bread. Do not touch the metal parts inside the 2 Slice Toaster.</p> <p>If the bread became stuck because it was too thick, make sure to slice it a little thinner in future.</p>
The toast is too dark or too light.	The selected browning level is too high or too low. Select a different setting.
The 2 Slice Toaster emits smoke.	<p>The selected browning level is too high for the type of bread toasted. Press the Cancel button to stop the toasting cycle.</p> <p>Ensure the crumb tray is clean.</p> <p>Check to make sure no large crumbs are caught in the slot. Turn the unplugged unit upside down over the sink and shake gently to remove any crumbs.</p>
Bread ejects very quickly.	<p>Push down the toasting lever completely.</p> <p>Make sure the power is switched on at the outlet.</p> <p>Make sure to select an appropriate browning level.</p>

Other useful information

Cleaning and maintenance

WARNING!

- Always disconnect the 2 Slice Toaster from the power outlet and allow it to cool before cleaning.
- Never immerse the 2 Slice Toaster in water or any other liquid for cleaning. All connections and sockets must be kept dry.
- The outside of your 2 Slice Toaster only requires occasional wiping with a damp cloth and mild, non-abrasive household detergent, if necessary, then wipe dry.
- To prevent damage to the 2 Slice Toaster, do not use scouring pads, steel wool, solvents or harsh chemical or alkaline cleaning agents.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, or cleansers that contain acetic acid. Do not allow such substances to come into contact with the appliance parts.
- Remove crumbs after each use.
- To clean the crumb tray, pull it out completely, discard the crumbs and wipe it clean with a dry or damp cloth.
- To remove stubborn spots, use a nylon or plastic scouring pad dampened in soapy water and squeezed almost dry. Make sure the tray is completely dry before inserting it back into the 2 Slice Toaster.
- Do not put the crumb tray in the dishwasher.

Service and repair

Do not attempt to dismantle the 2 Slice Toaster. The unit contains no user-serviceable parts inside. If you have any problems with the 2 Slice Toaster, contact the after sales support line for advice on repair or replacement.

Storage

- Always let your 2 Slice Toaster cool down completely prior to storing, especially if it is stored in a tightly enclosed space.
- Store the 2 Slice Toaster with the cord wound up underneath the base.

Environment Friendly disposal

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “Wheeled Bin” symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Contact your local authority for information concerning the correct disposal of your old appliance.

Technical specifications

Power	820-980W
Voltage	220-240V 50/60Hz

Protection Class I (This appliance must be earthed)



