

linsar

SEEING IS BELIEVING

USER MANUAL



Variable
Temperature
Jug Kettle
2500-3000W

Contents

Important Safeguards.....	03
Parts List.....	06
Getting Started.....	07
Instructions.....	08
Other Useful Information.....	09

Important Safeguards

READ ALL INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label. If this is not the case, contact the after sales support line and do not use the Jug Kettle.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the Jug Kettle body itself in water or other liquid. Do not expose the electrical connections to water.
- The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat.
- Grip the plug when disconnecting, do not pull the cord.
- Do not let the cord hang over the edge of a table or bench top. Do not let it touch hot surfaces.
- Do not pick up or operate the appliance if the power supply cord or plug is damaged, or after it malfunctions or has been dropped or damaged in any way.
- In case of damage, contact the after sales support line for advice.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard.

- Make sure all electrical connections are clean and dry before switching on.
- Do not use this appliance in conjunction with an extension cord.
- Unplug the appliance from the power outlet when not in use and before cleaning, servicing, maintenance or moving the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.

Usage conditions and restrictions

- This appliance is intended for domestic use only.
- Only use this kettle with the supplied power base.
- Do not use the power base to power any appliance other than this kettle.
- Do not use the kettle to boil anything other than water.
- This product is not intended for commercial use. Do not use it outdoors.
- Only use this Jug Kettle as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Improper installation and the use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or personal injury and will invalidate your warranty.
- We assume no responsibility for any eventual damages caused by improper or faulty use.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliances. In a safe way and understand the hazards involved.
- This appliance can be used by children from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and it's cord out of reach of children aged less than 8 years.
- Children should be supervised to ensure they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use chemical, steel wool or abrasive cleaners to clean the outside of the unit, as these will scratch the metal surface.
- Do not operate the unit near liquids (kitchen sink, water basins, taps etc).
- Ensure that all the parts are correctly assembled before operation.

- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- If there is a product malfunction, or if it has been damaged in any way, call the after sales support for assistance.
- Immediately unplug the appliance if fire or smoke is emitted.
- Place the product on a straight, rigid and stable surface, away from sources of direct sunlight or excessive heat.
- Do not place the product near heat sources such as radiators, heat registers, stoves or other appliances that produce heat.
- Do not place the product near other items that may damage it, such as naked flame sources (lit candles) or objects containing water (a vase or fish bowl).
- Take care that no objects fall and no liquids are spilled into any openings.

WARNING!

- Handle with care to avoid spillage on the connector and base.
- Lift the Jug Kettle off the power base to fill it. Never fill the kettle while it sits on its base. If the base unit becomes wet, unplug it before wiping it dry.
- To avoid splashing of boiling water, do not overfill the kettle. Make sure the water level is above the minimum mark but below the maximum level.
- Make sure the lid is securely closed before switching on the kettle.
- Never leave the filter loose in the kettle, it must sit securely in the grooves in front of the spout.
- Do not leave the kettle unattended when it is switched on.
- Do not open the lid while water is boiling.



CAUTION: HOT!

- Never remove the filter when the kettle contains hot water.
- Do not put any part of your hand or body near the kettle when it is switched on.
- Do not touch any part of the kettle when it is boiling. The surfaces get hot. Use the handle only.
- This appliance features a short power cord to reduce the risk of being entangled, and to reduce the risk of tripping. An extension cord or longer detachable cord is not recommended for use with this product.
- There are no user-serviceable parts inside. Do not attempt to service this product. Please call our after sales support for instructions.

SAVE THESE INSTRUCTIONS

Parts List



1. Lid
2. Spout with filter
3. Body
4. Power base
5. Handle
6. Water level
7. ON/OFF Switch and variable temperature control

Getting started

Before first use

- This product has been packaged to protect it against transportation damage. Remove all packaging materials from around and inside the appliance, keep the original packaging carton and materials in a safe place; it will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the carton is to be disposed of, please recycle all packaging materials where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after-sales support line for advice on examination, repair or return of the damaged product.
- Read this manual to familiarise yourself with the Jug Kettle. Pay particular attention to the safety instructions on the previous pages.
- Make sure the appliance is disconnected from the power supply and the on/off switch is in the OFF position (up).
- Lift the Jug Kettle vertically off the power base, open the lid and fill the kettle with cold water and boil it (as described on the following page), then discard the water. This is to ensure all oils, dust and other residues left from the manufacturing process and transport are removed. Repeat this procedure a second time before using the kettle for boiling water to drink.
- Your new Jug Kettle is now ready for use.

Boil-dry protection


- The Jug Kettle has an automatic shut-off feature that shuts down power to the Jug Kettle if it is empty, preventing accidental operation without water. Once this safety feature has been activated, unplug the Jug Kettle and let it cool down for a few minutes before filling it with cold water. The Boil-dry protection will then reset, and your Jug Kettle is ready for use again.

Instructions

Using the Jug Kettle

1. To fill the Jug Kettle, remove it from the power base and open the lid, fill with the desired amount of cold tap water, then close the lid. Alternatively, the Jug Kettle may be filled through the spout.
2. Make sure to fill the kettle at least to the minimum (0.5L) but not beyond the maximum (1.7L) level. Too little water will result in the kettle switching off before the water has boiled; too much water will result in boiling water spilling out of the spout when boiling. Take care that no water spills onto the power base.
3. Ensure that the lid is firmly in place before positioning the Jug Kettle on the power base. With dry hands, plug the power base into an appropriate wall outlet and switch on power at the outlet.
4. Press down the on/off switch below the handle. The indicator light will light up and the water will start heating up. Do not open the lid during use.
NOTE: Ensure that the switch is free of obstructions and the lid is firmly closed. The Jug Kettle will not turn off if the switch is constrained or the lid is open.
5. The Jug Kettle will automatically switch itself off when the water has boiled: the on/off switch will return to the OFF position and the power indicator will no longer be illuminated.
6. Wait until the water inside the kettle has completely stopped bubbling before pouring. Remove the kettle from the power base by gripping the handle and lifting it off the power base.

Variable Temperature Feature

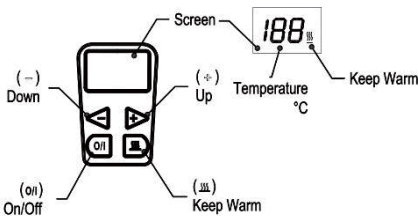

Boiling water

Open the lid of the kettle and fill to maximum water level 1.7ltr (Minimum water level is 0.8ltr) Once the kettle is placed on the kettle base and power is switched on it is ready to use. The kettle will be in standby until O/I button is pressed at which time the + and – buttons can be used to select the desired temperature.

Method one: Press the 'O/I' directly, at this time, the display shows "100" and flashes (one key to boil water function). In this case, the kettle boils the water to 100 C by default.

In the process of boiling water, press '+' or '-', you can reset the temperature at any time. When setting temperature is higher than the actual water temperature, the water continue to boil ;When the actual water temperature is reached or exceeded the set temperature, the heating tube will stop working (" + "and" - "are locked). About 3 minutes later, LED is no display , which means the The kettle is back on standby.

Method two: Firstly, press '+' (the display shows 100 C) or '-' (display shows 40 C). Press '+' or '-' again, choose to set temperature of the boiling water , and then press 'O/I', the display screen starts flashing and the kettle starts boiling water to the set temperature . (If don't press 'O/I' , display does not flicker, kettle stops working , after 10 seconds , display is not showing, the kettle is back to standby.

Note: when the boiling water reaches the set temperature, the kettle stops working (" + "and" - "are locked). The display screen shows the set temperature. After about 3 minutes, the display screen goes off and the kettle returns to standby mode. If the keep warm function needs to be operated within the 3 minutes, the keep warm key can be pressed to release the lock and the keep warm temperature can be set. If you press the 'O/I' button during these 3 minutes, the display screen will go off and the kettle will return to standby mode.

keep warm

Open the lid and fill with water (not more than the maximum water level 1.7 L and not less than the minimum water level 0.8L) then close the lid.

Place the Kettle on the power base. The kettle is now is standby and the display will be blank.

Press + on the kettle handle and the display will show 100C or press – and the display will show 40C . The + or – buttons can then be used to set the desired temperature, now press the “Keep warm” button and then press the O/I button to confirm. The temperature on the display and the keep warm symbol located in the lower right hand corner of the display will continue to flash, the kettle will start to heat the water to set temperature on the display.

Please note – If the O/I button is not pressed to confirm the desired temperature the warm symbol will not flash and the kettle will return to standby after 10 seconds.

During the normal boiling water process the + or – buttons can be used to change the desired temperature. When the water reaches the set temperature it will change to the keep warm function. Please note that after 2 hours the display will go off and the kettle will return to standby.

When using the keep warm function the “keep warm” symbol will continue to flash on the display. The kettle can be returned to its normal boiling function by pressing the keep warm button. If the O/I button is pressed the kettle will go into standby.

Note; To switch the between Celsius and Fahrenheit hold down the keep warm button for 2 seconds and the display will change.

To stop the heating process at any time during operation press the O/I button located on the top of the handle.

WARNING!

Take care when pouring the water to avoid scalding from boiling water or hot steam. Do not open the lid while the water in the kettle is hot.

Other useful information

NOTE

The Jug Kettle takes approx. 15–20 seconds to turn off when boiling – this is not a fault. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re boiling.

Cleaning and maintenance

WARNING!

- Always disconnect the Jug Kettle from the power outlet and allow it to cool before cleaning.
- Never immerse the kettle, cord or power base in water. All connections and sockets must be kept dry.
- The outside of your kettle only requires occasional wiping with a damp cloth and mild, non-abrasive household detergent, if necessary, then wipe dry.
- To prevent damage to the kettle, do not use scouring pads, steel wool, solvents or harsh chemical or alkaline cleaning agents.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, or cleansers that contain acetic acid. Do not allow such substances to come into contact with the appliance parts.

Removal of mineral deposits

From time to time, you may need to clean off any mineral deposits (limescale) left by water inside your kettle to keep it operating efficiently. How often you have to do this depends on the water hardness in your area and on how often you use the Jug Kettle. If scaling is a problem in your area, it is important that you clean the inside of the kettle regularly as scale build-up will damage the heating element and impair the boil-dry safety feature.

You can use a commercially available descaling agent for household products (according to the instructions on the packet) to descale the kettle, or a simple water and vinegar solution and follow the steps below.

1. Fill the kettle with 3 cups of white vinegar and the remainder with water.
2. Let this mixture stand in the kettle overnight. Do not boil.
3. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.
4. Fill the kettle with fresh, clean water, let it boil and then discard the water. Repeat with clean, fresh water until all traces of vinegar are removed.

NOTE

It is possible that spots of what looks like rust may appear on the base.
This is caused by impurities in the water, it is not a fault.

Cleaning the filter

Clean the filter regularly to ensure an easy flow of water. Take out the filter from in front of the spout and under running water, rub the filter gently with your fingers. Be careful not to use anything that could tear or damage the filter when cleaning.

Descale the filter at regular intervals. Soak it in a descaling solution, rub off any residues gently with your fingers and then rinse the filter thoroughly.

Service and repair

Do not attempt to dismantle the kettle or power base. The unit contains no user-serviceable parts inside. If you have any problems with the Jug Kettle, contact the after-sales support line for advice on repair or replacement.

Storage

When in storage or not in use, the power cord may be wound around the cord storage under the bottom of kettle.

The Jug Kettle may be stored on the power base but make sure the power supply is turned off when the kettle is not in use.