

TABLE OF CONTENTS

TOASTER SAFETY

| | |
|--|---|
| Important safeguards..... | 6 |
| Electrical requirements | 8 |
| Electrical equipment waste disposal..... | 8 |

PARTS AND FEATURES

| | |
|-----------------------------|---|
| Parts and accessories | 9 |
|-----------------------------|---|

USING THE TOASTER

| | |
|---------------------------------------|----|
| Before first use | 10 |
| Simple start-to-finish toasting | 10 |
| Toasting..... | 11 |

SPECIAL TOASTING FUNCTIONS

| | |
|----------------------|----|
| Toasting Bagels..... | 12 |
| Defrosting..... | 13 |
| Keep Warm | 14 |
| Lift & See | 15 |

CARE AND CLEANING..... 16

TROUBLESHOOTING 17

WARRANTY AND SERVICE..... 18

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or Toaster in water or other liquid.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair or adjustment.

6. Unplug Toaster from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. Detail for cleaning of the appliance, please refer to section “Care and Cleaning” on page 16
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press “Cancel” then remove plug from outlet.
12. Do not use Toaster for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if Toaster is covered with or touching flammable material, including curtains, draperies, walls and the like, when in operation.
15. Do not attempt to dislodge food when Toaster is plugged in.
16. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices or other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
17. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
18. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

SAVE THESE INSTRUCTIONS

TOASTER SAFETY

Electrical requirements

WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 Volts A.C. only

Frequency: 50/60 Hz


NOTE: Your toaster has a grounded plug. To reduce the risk of electrical shock, this plug will fit in an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Electrical equipment waste disposal

Disposal of packing material

The packing material is 100% recyclable and is marked with the recycle symbol .

The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.


Scrapping the product

- This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment

and human health, which could otherwise be caused by inappropriate waste handling of this product.



 
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.


PARTS AND FEATURES

Parts and accessories

2-Slice

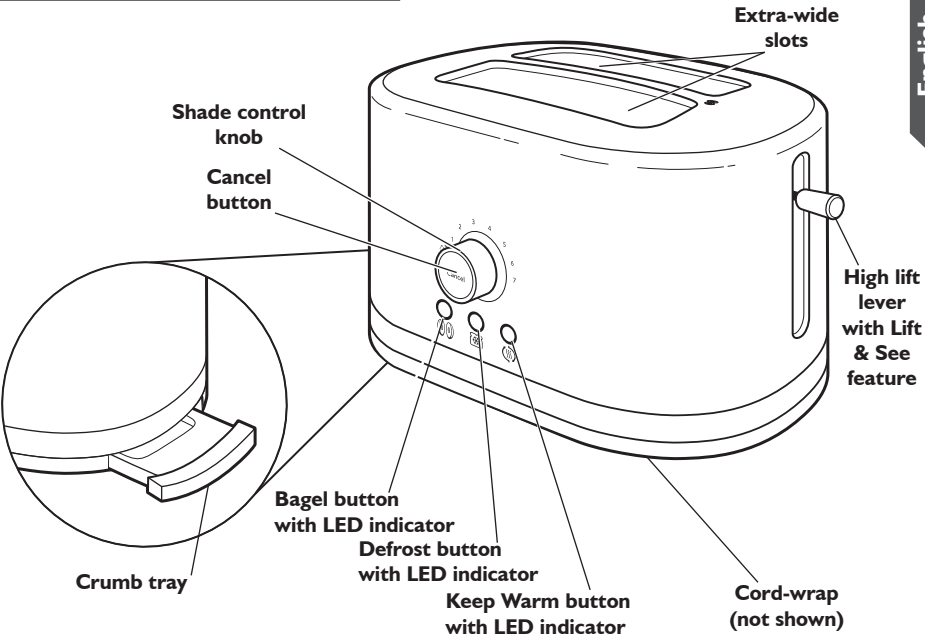

Long slot (4-slice)

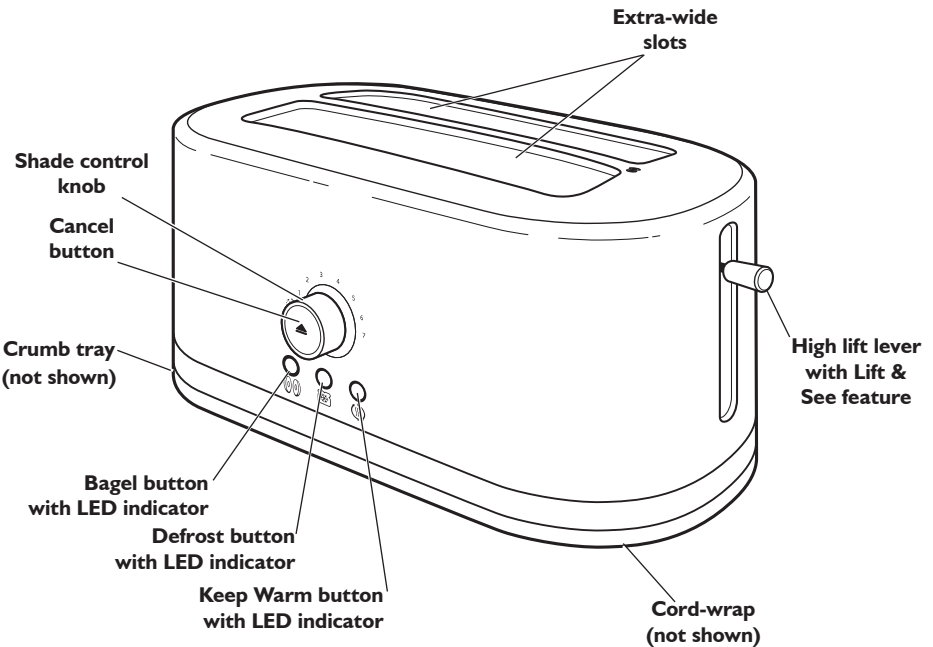 

USING THE TOASTER

Before first use

Before using your Toaster, check the extra-wide slots and remove any packing or printed material that might have fallen inside during shipping or handling. To avoid damage to the Toaster, do not probe inside the Toaster slots with any metal objects.

⚠ WARNING



Electrical Shock Hazard

 
Plug into a grounded outlet.

Do not remove ground prong.


Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

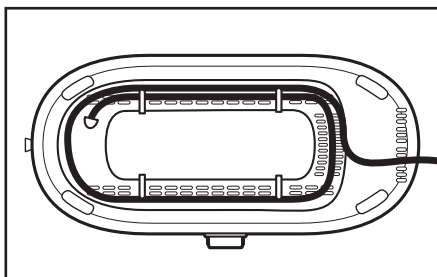

 - 1 Shorten cord, if necessary, by wrapping cord under the base. The toaster's feet are tall enough to allow the cord to exit from under any side of the toaster.

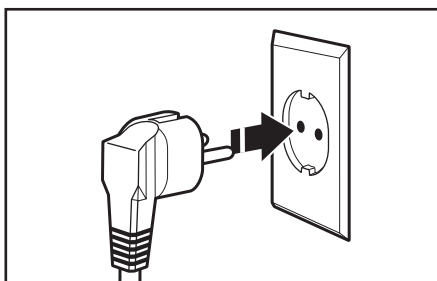

- 2 Plug into a grounded outlet. Plug will vary by region.

NOTE: You may see light smoke the first time you use the Toaster. This is normal. The smoke is harmless and will soon dissipate.

 
Simple start-to-finish toasting

Simple start-to-finish toasting: Select any, or all, of the three special toasting functions (defrost, bagel, or keep warm), and the Toaster will automatically move from one step to the next without any additional effort on your part.

USING THE TOASTER


Toasting

English

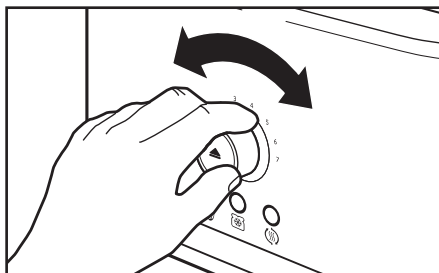


- 1** Select your desired shade by turning the shade control knob to the right for darker toasting or to the left for lighter toasting. To reheat toast that has cooled, turn the shade control knob to the far left of the shade control settings.

 NOTE: The age, type, and moisture level of different breads may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting.

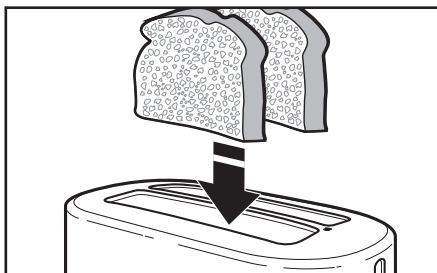


- 2** Insert bread or other food to be toasted into the slot(s).

 NOTE: For even toasting, toast only one bread type and thickness at a time. If toasting bagels, be sure to press the Bagel button. See "Toasting bagels."

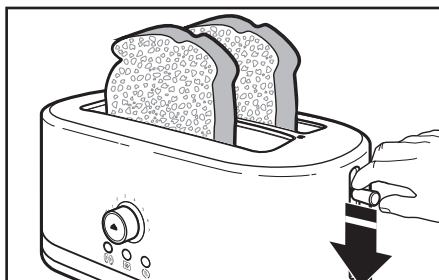

- 3** Press down on lift lever to start the toasting cycle. If Keep Warm (☺) isn't selected, the toast will rise automatically at the end of the cycle and the Toaster will turn off.

 NOTE: To activate the Keep Warm (☺) function, press down on the lift lever, then press the KEEP WARM (☺) button.

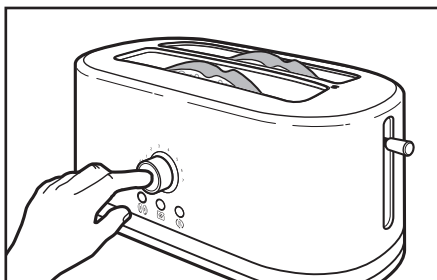


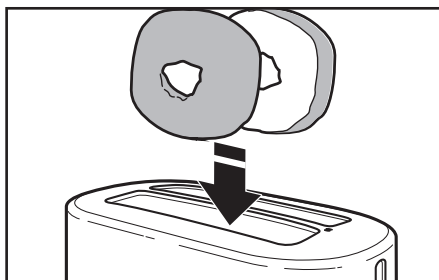 
- 4** To cancel toasting at any time, press CANCEL (▲). The Toaster will raise the toast and turn off.

TIP: For smaller items, lift up on the lift lever to raise toast above the top of the Toaster.

 
SPECIAL TOASTING FUNCTIONS

Toasting Bagels


 Your Toaster features a special setting for bagels, ensuring optimal heating time for the best results. The heating elements will adjust to nicely toast the inside of a cut bagel without burning the outside surface.




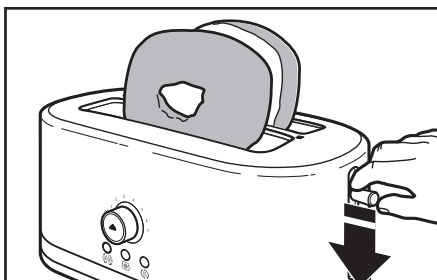


 1 Insert bagels with the cut side facing in, as shown.

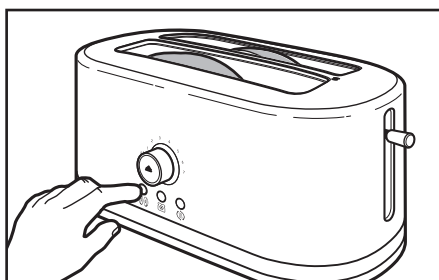

  2 With the shade control knob set to your desired shade, press down on the lift lever to start the toasting cycle.




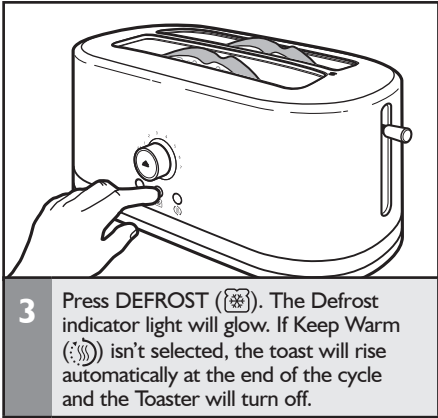 
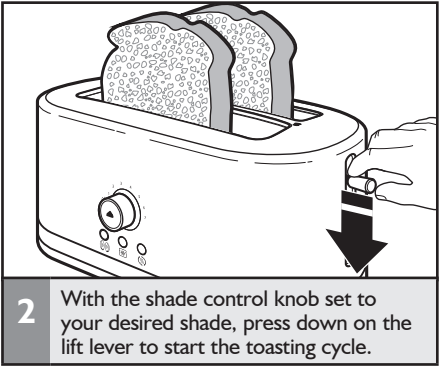 
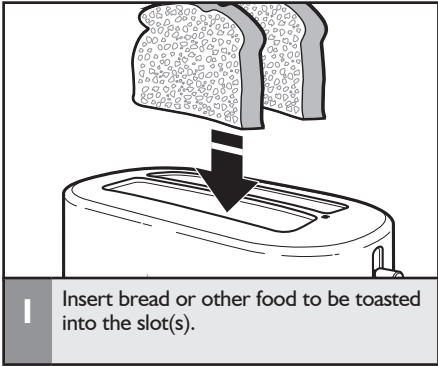 
3 Press BAGEL (). The Bagel indicator light will glow. If Keep Warm isn't selected, the bagel(s) will rise automatically at the end of the cycle and the Toaster will turn off.

 

 
TIP: The Bagel () function can be used at the same time as the Defrost () and Keep Warm () functions.

SPECIAL TOASTING FUNCTIONS

Defrosting


 The Defrost function adds additional time to the toasting cycle to defrost frozen bread before toasting it.

 


TIP: The Defrost () function can be used at the same time as the Bagel () and Keep Warm () functions.

 
SPECIAL TOASTING FUNCTIONS

Keep Warm

 
 The Keep Warm function holds toast in low, gentle heat for 3 minutes after toasting.

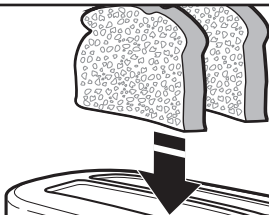
 



1 Insert bread or other food to be toasted into the slot(s).

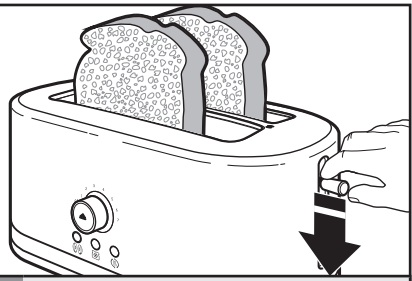





2 With the shade control knob set to your desired shade, press down on the lift lever to start the toasting cycle.

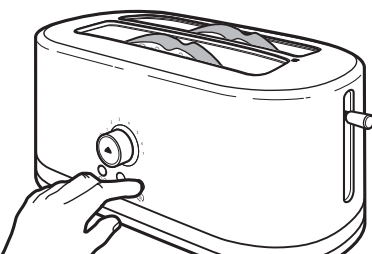

  3 Press the KEEP WARM  button. The Keep Warm  indicator light will blink slowly.

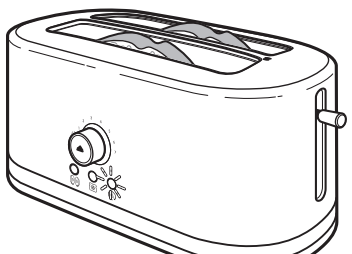

  
4 When the toasting cycle is complete, the Keep Warm  indicator light will stop blinking and glow continuously while the toaster keeps the toast warm for 3 minutes after toasting.

TIP: The Keep Warm  function can be used at the same time as the Bagel  and Defrost  functions.


SPECIAL TOASTING FUNCTIONS

Lift & See

 With the Lift & See feature, you can check toasting progress without stopping the toasting cycle.

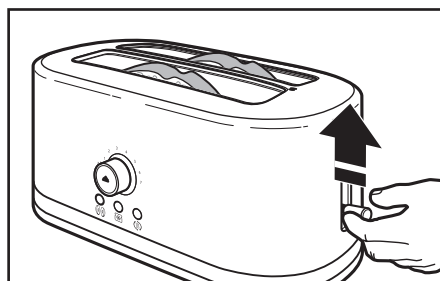

 - 1 Raise the lift lever any time during the toasting cycle to view the toast's progress.

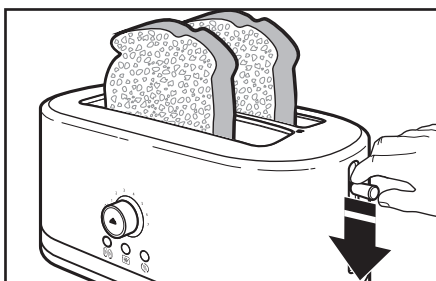


- 2 Press down on lift lever to lower the toast back into the toaster.


TIP: For smaller items, lift up on the lift lever to raise toast above the top of the Toaster.

CARE AND CLEANING

 IMPORTANT: The tray will be hot immediately following a toasting cycle. Allow Toaster to cool before emptying the crumb tray.

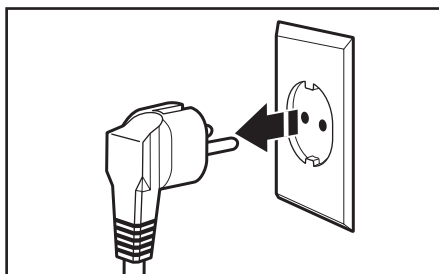


 - 1** Unplug the Toaster and let it cool before cleaning. Plug will vary by region.

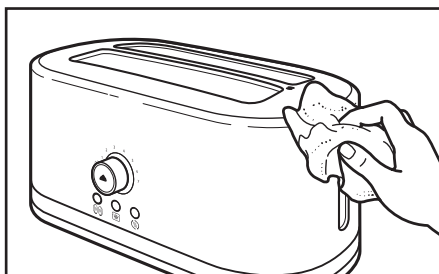


- 2** Wipe Toaster with a soft, damp cotton cloth. Do not use paper towels, abrasive cleansers or liquid cleaning products. Do not immerse Toaster in water.

 NOTE: If grease or oil splatters on the Toaster, wipe splatters away immediately using a clean, damp cotton cloth.

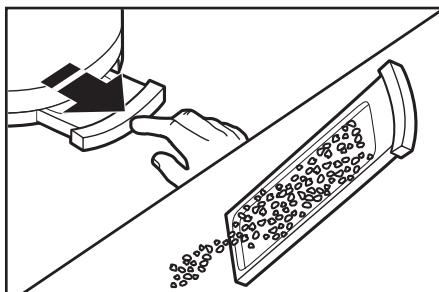

 - 3** Press "PUSH" (located in center of the crumb tray) so that it opens slightly, then slide it out of the Toaster. Shake the crumbs into a waste container. For consistent browning results, empty the crumb tray after each use. Crumb tray is hand-wash only

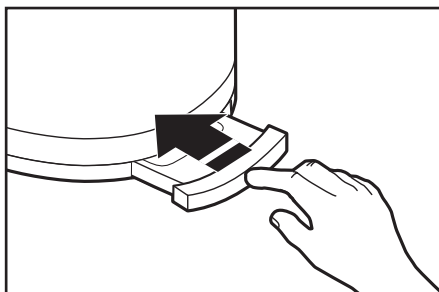

- 4** Return crumb tray to Toaster. Press in on the center of the crumb tray until it clicks into position. Do not use the Toaster without the crumb tray fully in place.

NOTE: KitchenAid does not recommend the use of a toaster cover.

! WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

If your toaster should fail to operate, check the following:

1. Check that the Toaster is plugged into a grounded electrical outlet. If it is, unplug the Toaster.
2. Plug in Toaster.
3. If the Toaster still does not work, check the household fuse or circuit breaker.

If the problem cannot be corrected:

See the "Warranty and service" section. Do not return the Toaster to the retailer; retailers do not provide service.

WARRANTY AND SERVICE

KitchenAid Toaster warranty

| Length of Warranty: | KitchenAid Will Pay For: | KitchenAid Will Not Pay For: |
|--|--|---|
| Europe, Middle East and Africa: 5KMT4116, 5KMT2116 Two years full warranty from date of purchase. | The replacement parts and repair labour costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center. | A. Repairs when Toaster is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes. |

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Customer service

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorized Service Center, please find our contact details below.

NOTE: All service should be handled locally by an Authorized KitchenAid Service Center.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504.

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorized KitchenAid Service/Customer Center.

For more information, visit our website at:

www.KitchenAid.co.uk
www.KitchenAid.eu

© 2015. All rights reserved.
Specifications subject to change without notice.