

5KSMVSA, 5KSMEMVSC




KitchenAid

TABLE OF CONTENTS


PARTS AND FEATURES	6
Parts and accessories.....	6
STAND MIXER ATTACHMENT SAFETY	7
Important safeguards	7
USING THE STAND MIXER ATTACHMENT	9
Fresh Prep Slicer/Shredder attachment blade chart	9
Assembling the Fresh Prep Slicer/Shredder attachment	11
Using the Fresh Prep Slicer/Shredder attachment.....	12
CARE AND CLEANING	13
Cleaning the Fresh Prep Slicer/Shredder attachment.....	13
TROUBLESHOOTING	13
WARRANTY AND SERVICE	14

PARTS AND FEATURES


PARTS AND ACCESSORIES

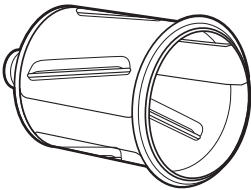


Slicing blade

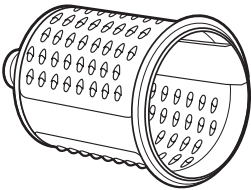


Medium shredding blade

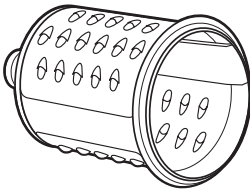


Coarse shredding blade

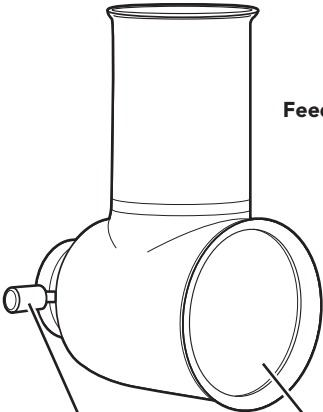

Feed tube

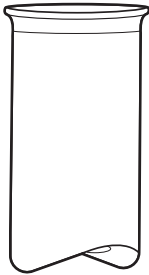


Large food pusher

 


Small food pusher

Release lever


Attachment housing

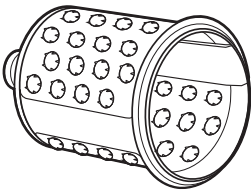

Potato grating blade*

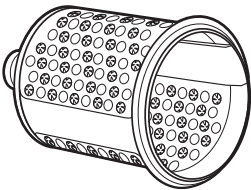

Fine grating blade*

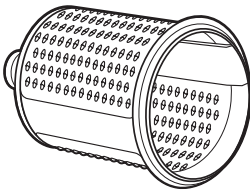

Fine shredding blade*

***Model 5KSMEMVSC**

STAND MIXER ATTACHMENT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Stand Mixer in water or other liquid.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. This appliance is not intended for use by persons, including children, with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.

STAND MIXER ATTACHMENT SAFETY

5. The appliance is not to be used by children. The appliance and cord should be out of reach of children.
6. Be sure to turn the Stand Mixer off (turn speed to “0”) and detach the Fresh Prep Slicer/Shredder attachment from Stand Mixer after each use of the Fresh Prep Slicer/Shredder attachment and before cleaning. Make sure the motor stops completely before disassembling.
7. Keep hands, utensils or other objects away from the Fresh Prep Slicer/Shredder attachment while it is in operation to reduce the risk of severe injury to persons or damage to the Fresh Prep Slicer/Shredder attachment.
8. Never feed by hand. Always use the provided food pusher.
9. If food becomes lodged in the Fresh Prep Slicer/Shredder, turn the motor off and disassemble Fresh Prep Slicer/Shredder attachment to remove the remaining food.
10. Avoid contacting moving parts.
11. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
12. Close supervision is necessary when any appliance is used by or near children.
13. Do not use outdoors.
14. Do not use the appliance if the driver mechanism or rotating parts are damaged. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
15. Do not let the Stand Mixer cord hang over the edge of table or counter.
16. Blades are sharp. Handle carefully when inserting or removing blades.
17. Do not remove food until Stand Mixer is OFF with speed turned to “0” and Slicer/Shredder blade stops.
18. To avoid damaging the gear assembly, do not immerse the Fresh Prep Slicer/Shredder attachment main assembly in water or other liquids.

STAND MIXER ATTACHMENT SAFETY

19. This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices or other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.

USING THE STAND MIXER ATTACHMENT

FRESH PREP SLICER/SHREDDER ATTACHMENT BLADE CHART

WARNING



Rotating Blade Hazard

Always use food pusher.




 
 
 


Keep fingers out of openings.

Keep away from children.

Failure to do so can result in amputation or cuts.


NOTE: For best results, feed only one item at a time into the feed tube (ex. carrot). Do not feed items into the feed tube by hand; always use the food pushers. If food remains in the Fresh Prep Slicer/Shredder attachment after running, turn the Stand Mixer off (Speed "0") to stop the Fresh Prep Slicer/Shredder attachment, removing the remaining items, and place back into the feed tube to shred or slice again.

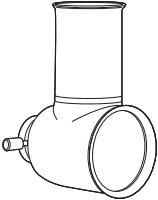USING THE STAND MIXER ATTACHMENT


USE THESE PARTS	WITH THESE PARTS	SUGGESTED FOODS	SPEED
<div>FINE SHREDDING BLADE</div> <div></div>	<div>HOUSING and SMALL or LARGE FOOD PUSHER</div> <div></div> <div></div>	CHEESE CAULIFLOWER	4
<div>MEDIUM SHREDDING BLADE</div> <div></div>		CAULIFLOWER BEETS CHEESE	
<div>COARSE SHREDDING BLADE</div> <div></div>		ZUCCHINI POTATOES CHEESE	
<div>SLICING BLADE</div> <div></div>		CARROTS CUCUMBER ZUCCHINI POTATOES CABBAGE (shred)	
<div>FINE GRATING BLADE</div> <div></div>		CHEESE	
<div>POTATO GRATING BLADE</div> <div></div>		POTATOES	

USING THE STAND MIXER ATTACHMENT



ASSEMBLING THE FRESH PREP SLICER/SHREDDER ATTACHMENT

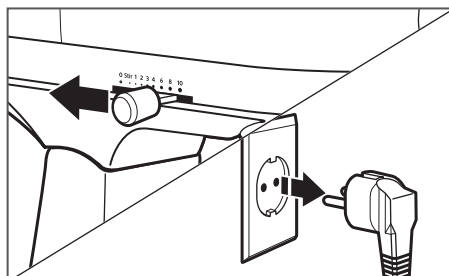


1 Turn the Stand Mixer off and unplug.

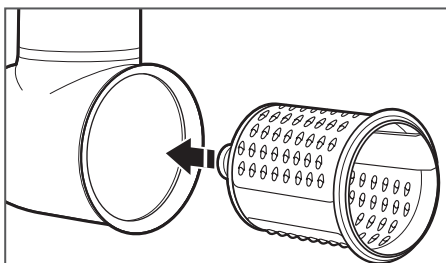


2 Slide the blade you want to use into the housing. You will hear a click when the blade snaps into place properly on the drive shaft.

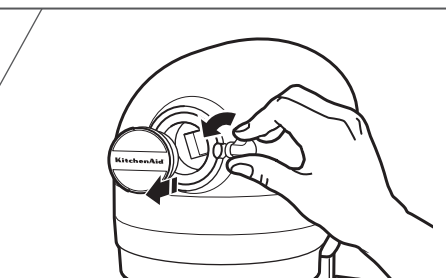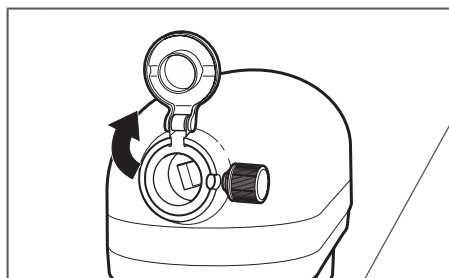

3 For Stand Mixers with a hinged attachment hub cover: Flip up to open.
For Stand Mixers with a removable attachment hub cover: Turn the attachment knob counterclockwise to remove attachment hub cover.

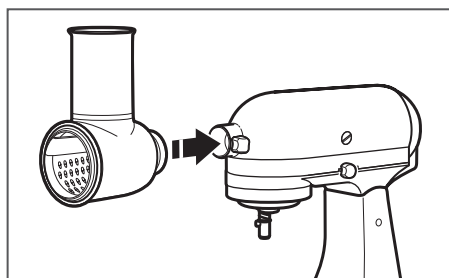

4 Insert the attachment shaft housing into the attachment hub, making certain the power shaft fits into the square hub socket. If necessary, rotate the attachment back and forth. The pin on the attachment housing fits into the notch of the hub rim when in the proper position.

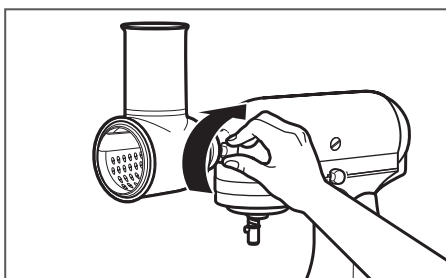


5 Tighten the Stand Mixer attachment hub knob until the attachment is completely secured to the Stand Mixer. Make sure that the hub knob is properly seated in the retention hole in the attachment.

USING THE STAND MIXER ATTACHMENT


USING THE FRESH PREP SLICER/SHREDDER ATTACHMENT

NOTE: For best results, feed only one item at a time into the feed tube (ex. carrot).


Do not feed items into the feed tube by hand; always use the food pushers. If food remains in the Fresh Prep Slicer/Shredder attachment after running, turn the Stand Mixer to "0" (Off), remove the remaining items, and place back into the feed tube to shred or slice again.

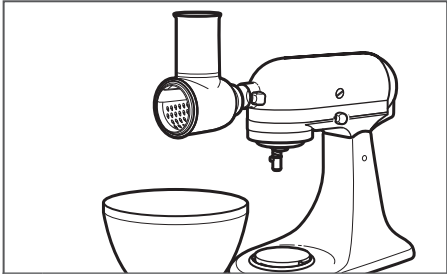


- 1** Place a large bowl under the Fresh Prep Slicer/Shredder attachment to catch food as it comes out.

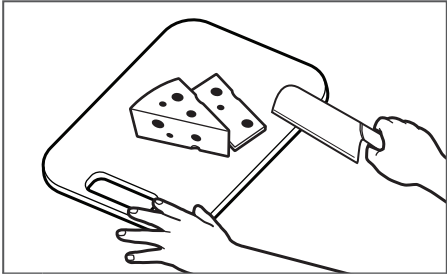

- 2** Cut food so that it fits in the feed tube.

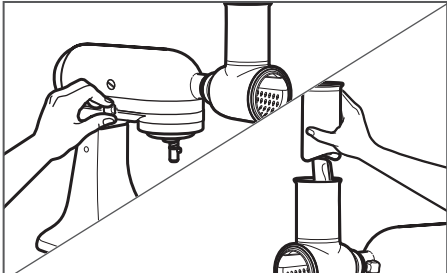

- 3** Turn the Stand Mixer to Speed 4, then use the appropriate food pusher to feed the food item into the feed tube.

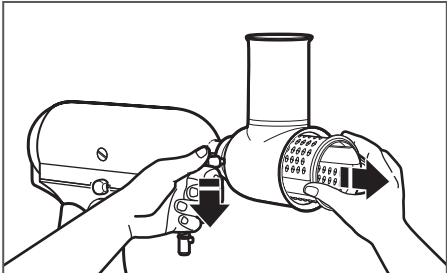


- 4** Push down on the release lever and pull out the blade, in order to change to a new blade.


CARE AND CLEANING

CLEANING THE FRESH PREP SLICER/SHREDDER ATTACHMENT

IMPORTANT: The housing of the Fresh Prep Slicer/Shredder attachment must be hand washed only using warm, soapy water. The Fresh Prep Slicer/Shredder attachment blades and accessories are dishwasher safe, top rack only.

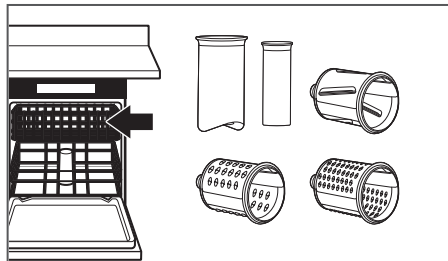

- 1** After using the Fresh Prep Slicer/Shredder attachment, remove all blades and accessory items. Wash the blades and accessories in the dishwasher, top rack only.

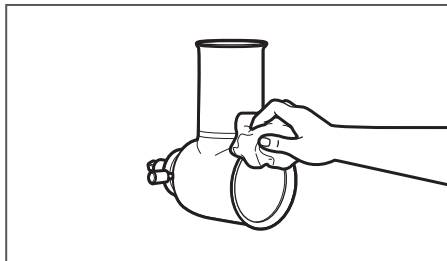

- 2** Clean the housing of the Fresh Prep Slicer/Shredder attachment by hand only. Wash with a soft, damp cloth. Dry thoroughly with a soft dry cloth. Do not wash in the dishwasher.

NOTE: For best cleaning, rinse blades immediately after use. If necessary, use a dishwashing brush.

TROUBLESHOOTING

If your Stand Mixer should malfunction or fail to operate while using the Fresh Prep Slicer/Shredder attachment, please check the following:

- Did you follow the preparation suggestions in the "Fresh Prep Slicer/Shredder attachment blade chart"?
- Did you choose a blade recommended for the type of food you are slicing/shredding?
- Is the Stand Mixer plugged in? Refer to the "Instructions" manual that came with your Stand Mixer to find possible solutions.

- Is the fuse in the circuit to the Stand Mixer in working order? Refer to the "Instructions" manual that came with your Stand Mixer to find possible solutions.

If the problem is not due to one of the above items, see the "Customer Service" section under "Warranty and Service".

Do not return the Fresh Prep Slicer/Shredder attachment or the Stand Mixer to the retailer, as they do not provide service.

WARRANTY AND SERVICE

KITCHENAID STAND MIXER ATTACHMENT WARRANTY

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa: 5KSMVSA, 5KSMEMVSC Two years full warranty from date of purchase.	The replacement parts and repair labour costs to correct defects in materials or workmanship. Service must be provided by an Authorised KitchenAid Service Centre.	A. Repairs when Stand Mixer attachment is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

CUSTOMER SERVICE

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorised Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

General hotline number:  00800 3810 4026

In other countries:

For all product-related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.co.uk
www.KitchenAid.eu

©2017 All rights reserved. KITCHENAID and the design of the Stand Mixer are trademarks in the U.S. and elsewhere.

KitchenAid

©2017 All rights reserved. KITCHENAID and the design of the Stand Mixer are trademarks in the U.S. and elsewhere.