


# What is in the Box?

Radio | mains adaptor | quick start guide | safety/warranty leaflet

## Features

- DAB+/FM RDS digital radio
- Bluetooth audio streaming from smartphone, tablet or laptop
- 40 radio station presets (20x DAB and 20x FM)
- AC adaptor included
- 50mm full range with bass port tube
- TFT LCD graphical display with adjustable display brightness
- 2 alarms timers (DAB/FM/Buzzer)
- Clock and sleep timer
- Stereo headphone output (3.5mm jack)
- Auxiliary input (3.5mm jack)
- USB charging of smartphone, tablet or similar device

## Controls

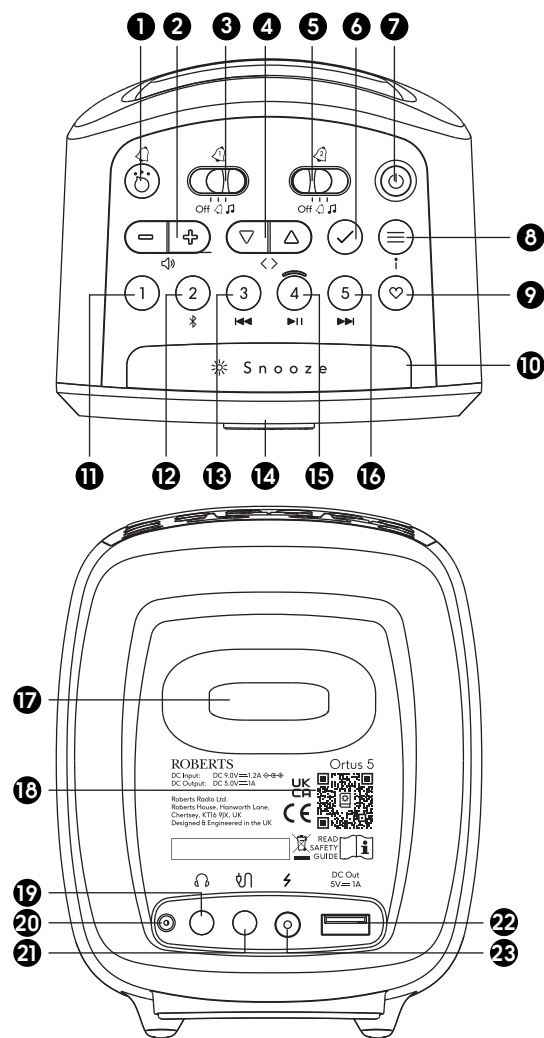


- |                               |                                    |
|-------------------------------|------------------------------------|
| 1 Mode button                 | 13 Preset 3/Skip backwards         |
| 2 Volume buttons              | 14 Display                         |
| 3 Alarm 1 slider              | 15 Preset 4/Play/Pause             |
| 4 Tuning & Navigation buttons | 16 Preset 5/Skip forward           |
| 5 Alarm 2 slider              | 17 Bass port                       |
| 6 Select button               | 18 QR code for online instructions |
| 7 Power/Sleep button          | 19 Headphone socket                |
| 8 Info/Menu button            | 20 External aerial                 |
| 9 Favourites button           | 21 Auxillary input socket          |
| 10 Brightness/Snooze button   | 22 USB 5V1A output charging port   |
| 11 Preset 1                   | 23 DC input socket                 |
| 12 Preset 2/Bluetooth pairing |                                    |

# STEP 1 - Plug in & play DAB radio

## A - Connect to the mains


Please read the safety leaflet provided before connecting your radio to the mains.

- 1 Place your radio on a flat surface.
  - 2 Fully extend the **aerial** located on the bottom right hand corner.
  - 3 Plug the cable from the mains adaptor into the **DC power input socket**. Plug the mains adaptor into a wall socket and switch on the socket.
  - 4 A start up screen will be displayed and a scan of the Band III DAB channels will be carried out.
  - 5 When a signal has been found, the current time will appear on the display.
- Note:** If no signals are found it may be necessary to relocate your radio to a position giving better reception and carry out a scan for new stations.

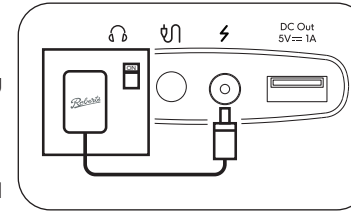

## B - Select a DAB radio station


- 1 If needed, press and release the **Mode** button until the DAB mode is selected.
  - 2 Press the **Tuning** buttons to step through the list of available DAB stations.
  - 3 Press the **Select** button to select the station. Adjust the **Volume**.
  - 4 Some radio stations may have one or more additional broadcasts associated with them. If these are available they will appear immediately after the main station.
  - 5 Press the **Info/Menu** button to cycle through the various display options.
- The display options are station name, scrolling text, program type, multiplex name, channel/frequency, bit rate, signal strength, date.

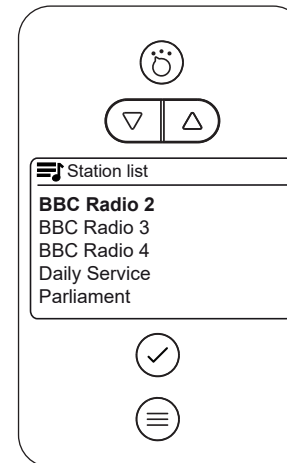

## C - Scan for DAB stations

As time passes new stations may become available or you may have moved to a different part of the country.

- 1 Press and release the **Mode** button until DAB is selected.
- 2 Press and hold the **Info/Menu** button and then using the **Navigation** buttons select 'Scan' by pressing the **Select** button.
- 3 Your radio will perform a scan of the Band III DAB channels. As new stations are found, they will be added to the list stored in the radio.

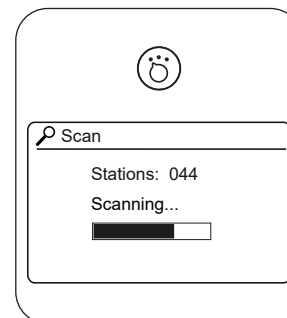


	A short press will switch your radio On or to Standby. A long press will access the sleep timer when the unit is playing		Press + to increase the volume level. Press - to increase the volume level.
	A short press will access each operating mode in turn. A long press will access the alarm settings.		Slide the switch (Alarm 1 or 2) to change the alarm status.
	A short press directly recalls station presets from 1-5. A long press will allow preset stations 1-5 to be directly saved. In other modes, a long press on '2' will disconnect Bluetooth to enable pairing and a short press on '3-5' offers audio controls		A short press will recall presets from 1-20. A long press will allow preset stations 1-20 to be saved.
	Press the up and down arrows to scroll menu items.		Press to change the display brightness setting from 0-7. When an alarm is sounding, press to snooze the alarm.
	Press to select the highlighted menu items.		A short press will display information relating to the music being played. A long press will access the current menu system. Press Info/Menu button to go back to a higher level menu or if an error is made.

# STEP 2 - Play FM radio

## A - Search tuning - FM

- 1 Fully extend the **aerial**.
  - 2 Press and release the **Mode** button until FM is selected.
  - 3 Short press the **Tuning** buttons to manually tune your radio. Long press the **Tuning** buttons to scan upwards or downwards. The radio will stop automatically when it finds a station of sufficient strength.
  - 4 If the signal is strong enough and there is RDS data present then the radio will display the station name. Adjust the **Volume**.
- Press the **Info/Menu** button to cycle through the various display options.
- The display options are station name, scrolling text, program type, frequency, audio type, date.

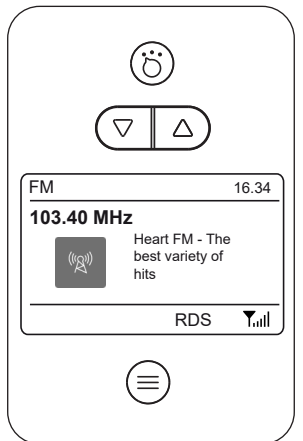

# STEP 3 - Presets

## Preset radio stations

There are 40 memory presets, 20 for DAB and 20 for FM. Presets are remembered in the event of a power failure.

### To store a preset


- 1 Tune to the required radio station.
- 2 Long press on the **Favourites** button
- 3 Use the **Tuning** buttons to scroll to an unused preset or a preset you wish to change.
- 4 Press **Select** to store. 'Preset Saved' will be displayed.

Buttons 1-5 enable quick access to the first five presets on the favourites list. A long press on buttons 1-5 will store a tuned in radio station.

### To recall a preset

- 1 Choose DAB or FM mode.
- 2 Short press on the **Favourites** button.
- 3 Use the **Tuning** buttons to scroll to the desired preset.
- 4 Press **Select** button to select it.

If you want to select Preset 1-5 from the list, short press on button 1-5.

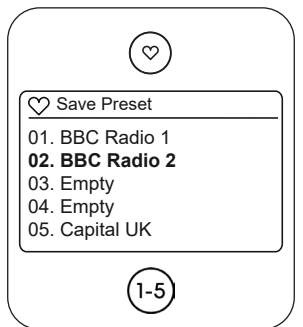

# STEP 4 - Bluetooth

## Connecting Bluetooth devices


- 1 Ensure **Bluetooth** is enabled on your smart device.
- 2 Ensure your radio is switched on. Press and release the **Mode** button until Bluetooth is selected.
- 3 The radio will show that it is 'PAIRING'.
- 4 On your smart device select 'Ortus 5'. Once the connection is established, you may now play your music. Adjust the volume on your Bluetooth device or on your radio.

## Playing audio

- 1 The audio player in your smart device may be able to respond to the **Play/Pause**, **Next** or **Previous** track on the radio.
  - 2 Press button 4 to pause playback. Press the control again to resume playback.
  - 3 Short press button 3 or 5 to skip to next or previous tracks. Long press button 3 or 5 to scan forwards or backwards.
- Note:** Not all player applications or devices may respond to all of these controls.

## Connect a different device

- 1 To connect a different device, long press on button 2 to disconnect the current paired device. Your radio will become discoverable by other devices.
- 2 To clear all Bluetooth pairings, long press on the **Info/Menu** button, select 'CLEAR PAIRING', then select 'Yes' to confirm.

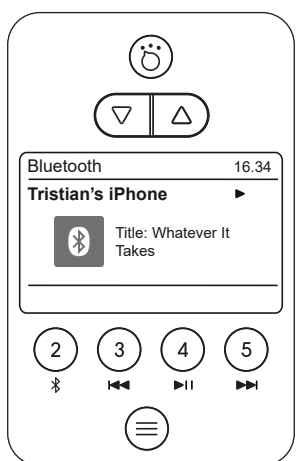

continued overleaf...

# STEP 5 - Alarms


When in standby mode or on, the display will show a clock and the alarm state.  
Long press the **Mode** button to access alarm settings, and turn alarms on/off by toggling the **Alarm1/2** slider switches.

- 1 Long press on the **Mode** button to enter the alarm settings. **Select** either 'Alarm 1' or 'Alarm 2' to make changes.
- 2 To set the 'Time' for the alarm to come on, press **Select** and then use the **Tuning** buttons. Press **Select** to set the hour. Repeat for setting the minutes.
- 3 Choose 'Days' to set the days from 'Daily' (the alarm will sound everyday), 'Once' (the alarm will sound once), 'Weekdays' (the aram will sound on Monday-Friday) or 'Weekends' (the alarm will sound on Saturday and Sunday).
- 4 Choose whether the alarm mode is to be 'Off', 'Buzzer' (🔔) or 'Radio' (📻) by sliding the alarm slider switch.
- 5 If the alarm slider is set to either 'Off' or '🔔', the 'Mode' in the menu list can be set to 'DAB' or 'FM' along with a radio 'Preset'. Select either 'Last Listened' or one of the saved presets '01-20' ('Empty' cannot be selected).
- 6 Next, select the 'Volume' to set the alarm volume level from 1-32. The volume level will increase gradually upto the set level.
- 7 Use the **Slider** switch to turn the alarms on/off.

The alarm volume can be changed during a sounding alarm.

## Snooze


Snooze the alarm for 9 minutes by pressing **Snooze** button.  
Press the **Standby** button when snoozing to cancel the alarm, or move the sounding alarm slider to the Off position.

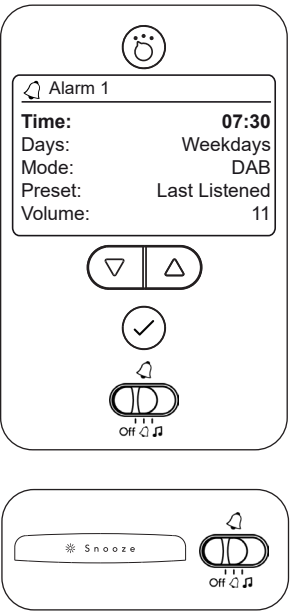

# STEP 6 - Menu options

## Menu options

- 1 Long press the **Info/Menu** button to access your radio's menu system.
- 2 Press the **Tuning** buttons to show menu options.
- 3 Press **Select** button to select menu options.
- 4 To exit a menu, press the **Info/Menu** button as needed.

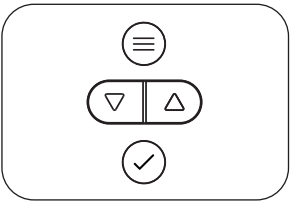

## DAB menu

When in DAB mode, long press the **Info/Menu** button to access the following DAB menu options. Press the **Tuning** buttons followed by the **Select** button to select an option.

**Recall Preset** - Access the favourites list.

**Save Preset** - Access the favourites list.

**Station List** - Displays the available DAB stations.

**Scan** - Choose 'Scan' to scan the band III DAB channels.

**Manual tune** - Choose 'Manual Tune' and then choose the desired DAB channel. The signal strength will be displayed.

**Prune** - Choose 'Yes' to remove any stations that are no longer available.

**DRC** - Choose from 'High', 'Low' or 'Off'. The DRC facility can make quieter sounds easier to hear when your radio is used in a noisy environment. **Note:** Not all DAB broadcasts use the DRC function.

**Station order** - Choose 'Station Order' and then choose either 'Alphanumeric' or 'Ensemble'.

**Sleep** - Your radio can be set to turn off after 15-120 minutes has elapsed.

**Alarms** - Access the alarm settings.

**System Settings** - Access the system settings.

## FM menu

When in FM mode, long press the **Info/Menu** button to access the following FM menu options. Press the **Tuning** buttons followed by the **Select** button to select an option.

**Recall Preset** - Access the favourites list.

**Save Preset** - Access the favourites list.

**Scan Setting** - Choose 'Scan Setting' and then choose 'Distant' (your radio will scan for both weak and strong signals) or 'Local' (your radio will scan for stations with good reception).

**Audio Setting** - Allows selection of 'Auto' or 'Mono'. 'Auto' enables stereo to be played through headphones if a strong enough signal is present. If a station has a weaker signal and alternates between stereo and mono playback, selecting 'Mono' forces the signal to play mono.

**Sleep** - Your radio can be set to turn off after 15-120 minutes has elapsed.

**Alarms** - Access the alarm settings.

**System Settings** - Access the system settings.

## System settings

Apply a long press on the **Info/Menu** button to access the current menu options. Rotate the control to 'System Settings' and press to select.

**Time/Date** - Your radio will usually set the time using the DAB signal. Choose 'Time/Date' and the options include:

Set 12/24 Hour | Auto Update |

Set Time/Date | Set Date Format

**Brightness** - Adjust the brightness setting for both the 'On Level' and 'Standby Level' from 1-7. Brightness can also be changed directly by pressing the **Snooze** button to set each level when in their respective modes.

**Language** - Choose a desired language from the list.

**Factory Reset** - to completely reset your radio to its initial state perform a factory reset. Choose, 'Factory Reset' then 'Yes'. All user entered settings will be erased.


**SW Update** - Software updates for the radio may be available in the future. Do not update unless recommended by customer support.

**SW Version** - The software display cannot be altered and is just for your reference. Choose 'SW Version'.

# Other information

## Aux In

- 1 Connect a stereo lead from the output of your external audio source, such as a CD player or phone, into the 3.5mm Auxillary Input socket on the rear of the unit.
- 2 Press the **Mode** button until 'Aux In' mode is shown on the display.
- 3 Press play on the connected audio device. If using its headphone output for the connection, set its volume to a level between two-thirds and maximum in order to get a strong audio signal without too much distortion. Adjust the volume on the radio as required.
- 4 After use, disconnect your player in order to listen to your radio conventionally.

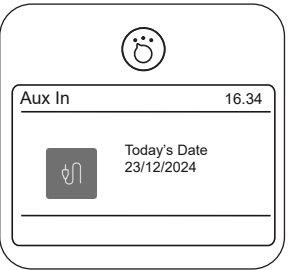

## Sleep


With the unit on, long press the **Power** button to turn it off after a preset time has elapsed.

Select the sleep time between 15-120 minutes using the **Tuning** buttons, then press **Select**.

An active sleep timer is shown on the display.


To cancel the sleep timer, enter the 'Sleep' menu and select 'Sleep Off' or press the **Power** button to switch your radio off.

Note: For quick access to the sleep timer, press and hold the **Power** button to cycle through the time options. To select a time, release the **Power** button.

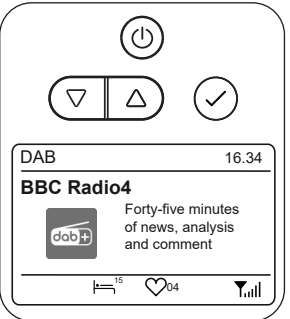

## USB Charging

You can v your mobile device (e.g. MP3 player, mobile phone etc.) through the USB socket on this unit with a USB cable (not supplied).  
The maximum current for USB charging is 1A.

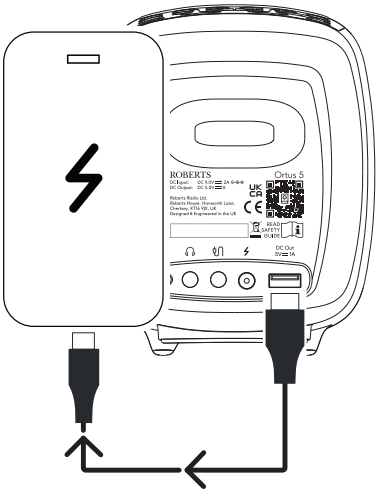

## Specifications

### Power requirements

Mains (adaptor):  
100 - 240V ~ 50/60Hz  
DCin: 9.0V1.2A  
DC Out: USB Type A. 5V/1A

### ErP - Standby Power

The device has a power standby mode with a power consumption of less than 0.8W. After 15 min of inactivity in Bluetooth or Aux modes, the device will switch to standby mode.

# ROBERTS

## Ortus 5

DAB+/FM RDS/Bluetooth Alarm Clock Radio



Please read this guide and the safety/warranty leaflet before use



## Circuit features

Headphone socket 3.5mm dia.  
Aerial System DAB/FM External aerial

Bluetooth standards A2DP, AVRCP, Bluetooth codecs supported SBC & AAC.  
Bluetooth BLE EIRP POWER (MAX.) -0.59dBm  
Bluetooth EDR EIRP POWER (MAX.) -3.15dBm

**Frequency coverage** FM 87.5 - 108MHz, DAB 174.928 - 239.200MHz  
Bluetooth 5.2 frequencies 2.402 - 2.480GHz

### Product markings

DC Power input 9.0V/1.2A USB output 5V/1A  
~ This symbol indicates AC voltage. ■■■ This symbol indicates DC voltage.

### Mains adaptor

Manufacturer of AC Adaptor: Hung Kay, Model: SHKP18-0901200dB, Input voltage: AC100 - 240V, Input AC frequency: 50/60Hz, Output voltage: DC9.0V, Output current: 1.2A, Output power: 10.8W, Average active efficiency: ≥ 82.38%, Efficiency at low load (10%) 70.7%, No-load power consumption: < 0.1W

Please handle with care. The leather-cloth finish may be susceptible to damage if mistreated. Avoid all contact with any abrasive material, chemical substances or cleaning solutions. Your radio may be wiped with a clean lightly damp cloth. **Please ensure that the product is unplugged from the mains socket outlet before attempting this procedure.**

Designed & Engineered in the UK  
Roberts Radio Ltd, Roberts House, Hanworth Lane, Chertsey, KT16 9JX, UK  
GlenDimplex Europe Ltd, Airport Road, Cloughram, Co. Dublin, K67VE08, Ireland

Issue 1  
2025-02-13



ROBERTS RADIO LIMITED  
www.robertsradio.com  
© 2025 Roberts Radio Limited

