

**HUMAX Freeview Play HD Recorder**  
**Model: FVP-5000T**

# Product Manual

# Contents

<b>Important Safety Information .....</b>	<b>4</b>	<b>Media.....</b>	<b>22</b>
<b>Product Conformity .....</b>	<b>5</b>	Direct Access to Media Files	
<b>For Your Safety .....</b>	<b>6</b>	Playing Media Files	
<b>Installation Guide.....</b>	<b>7</b>	Playing Files by Storage	
Accessories		<b>Mobile Apps .....</b>	<b>25</b>
Product Overview		<b>Settings .....</b>	<b>27</b>
Connections		General Settings	
Remote Control		Network Settings	
On-screen Setup		PVR Settings	
<b>Watching TV.....</b>	<b>11</b>	System Settings	
Freeview Home Page		Channel Settings	
Players		<b>Appendix.....</b>	<b>32</b>
Top Picks		Specification	
Programme Information		Trouble Shooting	
Live TV		HUMAX Customer Support	
Previous or Next Programmes		Glossary	
<b>Smart Search .....</b>	<b>17</b>	Universal Remote Control	
<b>TV Guide .....</b>	<b>18</b>	Open Source Software Notice	
<b>Recording .....</b>	<b>20</b>		
Ways to Record			
Recording Conflict			
Playing Recorded Programmes			




# Notice

Thank you for purchasing a HUMAX product. Please read this product manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this product manual close to your product for future reference. The information in this product manual is subject to change without notice.

Copyright (Copyright © 2017 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

## Meaning of Symbols

	To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.
	This symbol indicates dangerous voltage inside the product that presents a risk of electric shock or personal injury.
	This symbol indicates important instructions accompanying the product.

## Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following headlines that indicate hazardous situations.

### Warning

Indicates a hazardous situation which could result in serious injury

### Caution

Indicates a situation which could damage the equipment or other apparatus

### Note

Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

## Warranty

The warranty does not cover parts which may become defective due to misuse of the information contained in this manual.

## 'WEEE' Instructions

This product should not be disposed with other household waste at the end of its working life. Please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled disposal.

### Domestic users:

Please contact either the retailer where you purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

### Business users:

Contact your supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

## Trademarks

- Manufactured under license from Dolby Laboratories. Dolby, Dolby audio and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia interface are trademarks and registered trademarks of HDMI Licensing LLC.

**HDMI™**

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

**Note:** The model name is located on the bottom of this product.

## Product Conformity

### SIMPLIFIED EU DECLARATION OF CONFORMITY

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

Hereby, HUMAX declares that the radio equipment type [FVP-5000T] is in compliance with Directive 2014/53/EU and relevant directives.

The full text of the EU declaration of conformity is available at the following internet address:

- **United Kingdom** : <http://www.humaxdigital.com/uk/ec.php>
- **Germany** : <http://de.humaxdigital.com/ec>

### Wireless equipment use information

#### 1. In France

Authorization for outdoor usage is limited to Channels 1~7 (2.400 ~ 2.454 GHz).

#### 2. In Italy

For outdoor usage a general authorization is required from the national spectrum authorities.

#### 3. In Latvia

For outdoor usage an authorization is required from the Electronic Communications Office.

#### 4. 5GHz Radio Local Area Networks (RLANs) Band only indoor use.

#### 5. This equipment may be operated in all European Union member countries and Turkey.



Radio Frequency Specification	
Frequency mode (band)	Wi-Fi b/g/n (20/40MHz)
RF output power	Maximum power level is not exceeding 20dBm
Frequency range (MHz)	2.4GHz

### And

Radio Frequency Specification	
Frequency mode (band)	Wi-Fi a, n(20/40MHz), ac(20/40/80MHz)
RF output power (EIRP)	Maximum power level is not exceeding 23dBm (for TPC) / 20dBm (for without TPC)
Frequency range (MHz)	5150MHz to 5350MHz

### And

Radio Frequency Specification	
Frequency mode (band)	Wi-Fi a, n(20/40MHz), ac(20/40/80MHz)
RF output power	Maximum power level is not exceeding 14dBm
Frequency range (MHz)	5725MHz to 5875MHz

## For Your Safety

### Safety Instructions

#### 1. POWER SUPPLY

- Operate this product only from the type of power supply shown on the marking label. If you do not know the type of power supplied to your home, contact your local power company.
- Disconnect the power supply before you start any maintenance or installation procedures.

#### 2. OVERLOADING

- Make sure that the wall outlet, extension cord and adapter have a sufficient power rating for the appliance. If not, this can cause an electric fire shock.

#### 3. LIQUID

- Do not expose this product to liquids. Do not put objects filled with liquid on the product.

#### 4. CLEANING

- Disconnect the product from the wall outlet before you clean it.
- Use a moist cloth to clean the product. Do not use solvents. Wipe the surface gently with a soft cloth as it may get scratched.

#### 5. VENTILATION

- Make sure that the slots on top of the product are not blocked. It is necessary to have a sufficient airflow into the unit.
- Do not put electronic equipment on the product.
- Do not put objects on the product. This will block the ventilation or cause damage to the surface.

#### 6. ATTACHMENTS

- Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

#### 7. LIGHTNING, STORM OR NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

#### 8. EXTRANEOUS OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

#### 9. REPLACEMENT OF PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorised substitution may result in additional damage to the unit.

#### 10. CONNECTION TO THE SATELLITE DISH LNB/CABLE TV SIGNAL/AERIAL

- Disconnect the power supply before you connect or disconnect the cable from the satellite dish/cable TV signal/aerial. If not, this can cause damage to the LNB/cable TV line/aerial.

#### 11. CONNECTION TO THE TV

- Disconnect the power supply before you connect or disconnect the cable from the TV. If not, this can cause damage to the TV.

#### 12. LOCATION

- Place the product indoors to avoid exposure to lightning, rain or sun. Do not place it near a radiator or heat register.
- Keep at least 10 cm clearance from any other appliances susceptible to electromagnetic influences such as a TV or a VCR.
- If you place the product on a rack or a bookcase, make sure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
- Do not place the product on an unstable surface where it can fall. A falling product can cause serious injury to a personnel and serious damage to the appliance.

#### 13. ENVIRONMENT

- Attention should be drawn to the environmental aspects of battery disposal.
- Care is required for the use of this apparatus in tropical and/or moderate climates.

## Cautions and Warnings

#### 1. TO AVOID DAMAGE OF POWER CORD OR PLUG

- Do not modify or process the power cord or plug arbitrarily.
- Do not bend or twist the power cord.
- Make sure to disconnect the power cord while you hold the plug.
- Keep heating appliances as far as possible from the power cord to prevent the cover vinyl from melting.
- The mains plug, as a disconnection device, shall remain readily accessible by the user.
- All-pole main switch shall remain readily operable. (For products with power switch)

#### 2. TO AVOID ELECTRICAL SHOCK

- Do not open the main body.
- Do not insert metal or inflammable objects inside the product.
- Do not touch the power plug with wet hands.
- Disconnect the power cord in case of lightning.
- Unplug the power cable before you install the aerial cable.

#### 3. TO AVOID DAMAGE OF PRODUCT

- Do not use the product when it is out of order. If you continue to use the product when defective, this may cause serious damage. Make sure to contact the customer service centre if the product is out of order.
- Do not insert metal or alien substance into the slots for the modules. It may cause damage to the product and reduce its life span.
- Do not overly pile objects on the product. It may cause cracks, deformation and discoloration.

#### 4. TO AVOID DAMAGE OF HDD

- Do not move the product or turn the power off suddenly while the hard disk drive is running.
- The company shall not be liable for any corruption of data on the hard disk drive caused by carelessness or misuse of the user.


## Accessories



Remote Control  
/ Batteries



Product Manual



Quick Setup Guide



HDMI Cable




Ethernet Cable




AC Adaptor

**Note:** Accessories may vary according to area.

## Product Overview

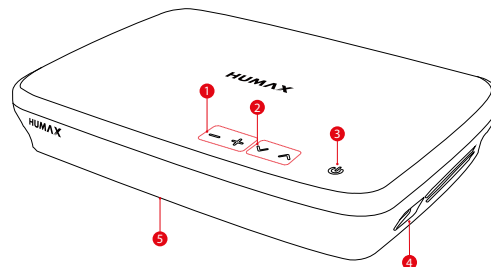

- 1 VOLUME:** Changes the audio volume.
- 2 CHANNEL:** Changes the channel or page.
- 3 STANDBY:** Switches between operation and standby modes.
- 4 USB:** Connect a USB memory device.
- 5 LED:** Lights red in standby mode, blue in operation mode and purple while recording.

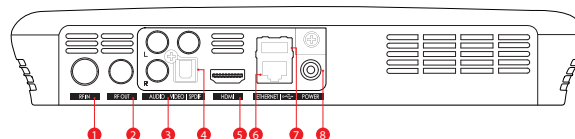


- 1 RF IN:** Connect to a TV antenna.
- 2 RF OUT:** Connect to the TV or VCR using an RF cable.
- 3 VIDEO/AUDIO:** Use a RCA cable to connect to the TV.
- 4 SPDIF:** Use an SPDIF cable to connect to the digital audio device.
- 5 HDMI:** Use a HDMI cable to connect to the TV.
- 6 ETHERNET:** Connect a LAN cable.
- 7 USB:** Connect a USB memory device.
- 8 POWER:** Connect the AC adaptor.

**Note:** The image may differ from the actual product.

## Connections

This section describes how to connect your product to match your particular devices and to gain optimum signal quality.

**Warning:** Connect all devices before you plug any power cords into the wall outlet. Always turn off the product, TV and other devices before you connect or disconnect any cables.

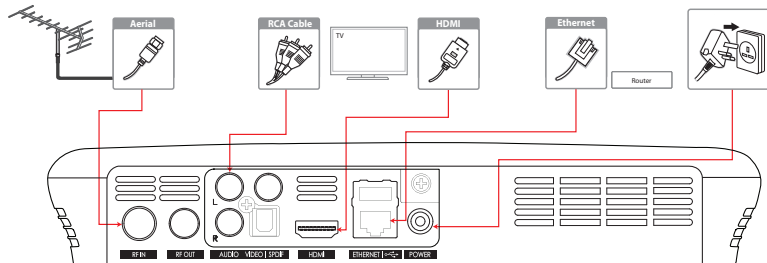

**Note:**

- If you encounter any problems setting up your product, please contact your local retailer or HUMAX Customer Service.
- Connecting your TV directly to the audio/video output of the product will assure a more vivid picture and enhance your viewing enjoyment.

### HDMI CEC

HDMI CEC (Consumer Electronics Control) lets you to control the TV and HDMI CEC supported devices through the HDMI cable.

If your TV supports HDMI CEC, it will turn on or off automatically when the product is turned on or off.

## Connecting the Aerial

Connect the aerial to the **RF IN**.

## Connecting the TV

### 2-1 Using a HDMI cable

For the best picture quality, use a HDMI cable to connect to the TV.

### 2-2 Using a RCA cable

Use a HDMI or RCA cable to connect to your TV set.

- For the best quality, use a HDMI cable.
- Use a RCA cable if you do not have a HDMI connection on your TV set.

## Connecting the Internet

### 3-1 Connecting to the LAN

1. Use the Ethernet cable to connect the product and the LAN router.
2. Set the options for the LAN.  
(Go to **FreeviewPlay > SETTINGS > Network Settings** to set the network options)

### 3-2 Connecting to the Wireless LAN

Your product has a built-wireless network connection.

Go to **FreeviewPlay>SETTINGS> Network Settings>Configure WLAN** and set the options for the wireless LAN.


**Note:**

- We recommend the network connection over a direct LAN.
- Make sure that the distance between the Wireless LAN access point and the product is not too far away. This may lower the quality of service.

## Powering On

Plug the AC power adaptor to the wall socket.


# Remote Control

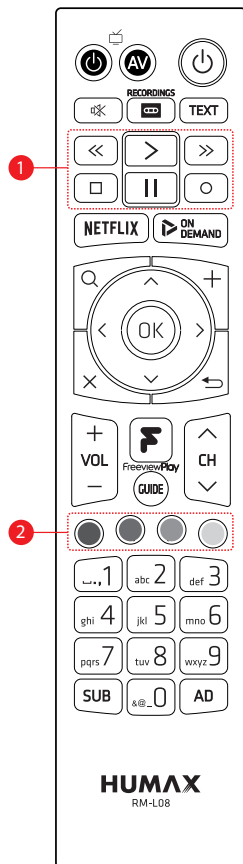

	TV STANDBY	Turns TV on/off
	AV	Changes the input sources
	STANDBY	Switches between operation and standby modes
	MUTE	Mutes audio
	RECORDINGS	Goes to recording library
	TEXT	Enters the digital text service
1	Playback Control Buttons	<< Fast Rewind, > Play, >> Fast Forward, □ Stop,    Pause, ○ Record
	NETFLIX	Goes to Netflix portal
	ON DEMAND	Catch up with shows you may have missed
	SEARCH	Runs Smart Search
	PLUS	Accesses additional functions on-screen
	ARROW Buttons	Moves the cursor up, down, left or right
	OK	Selects a menu or confirms a selection
	EXIT	Exits all On-Screen Display (OSD) screens
	BACK	Returns to the previous channel or the previous screen
	VOL +/-	Changes the audio volume
	FreeviewPlay	Goes to Home screen
	GUIDE	Displays the programme guide
	CH +/-	Changes the channel or page
2	COLOUR Buttons	For interactive applications
	NUMERIC	(0-9)
	SUB	Sets the subtitle language
	AD	Displays the closed caption

## Inserting Batteries

Insert the batteries matching the plus(+) and minus(-) at each end.

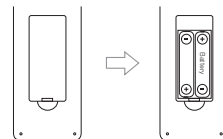

**Note:** If the remote control batteries are low, the **STANDBY** button and the **TV STANDBY** button will blink twice whenever you press the **FreeviewPlay** button.

## Controlling TV

Your remote control is compatible with almost TV set. To control your TV using this remote control, you need to set it up for your TV. See page 40 to make the remote control universal.



## On-screen Setup

The installation wizard operates automatically when you power on the product for the first time or do factory default in menu.

**Note:** If you exit the installation wizard without fully completing the channel searching procedure, you may not have all of the channels available. In this case, go to **FreeviewPlay>SETTINGS>Channel Settings>Search Channels** and search for more channels.

### 1. Preferred Language

Select your preferred language.  
Press **OK** to continue.



### 2. Channel Search

This is where your aerial will automatically pick up any available channels. Select **NEXT** and press **OK** to start searching. Save the found channels once the search is complete.

**Note:** You can also search channels manually. See the full Product Manual online for more info.



### 3. Network Connection

Make sure your Ethernet cable is connected to your box and router. The internet connection should be made automatically once you select **NEXT** and press **OK**. If you're using Wi-Fi, select **NEXT** and press **OK** to continue and follow the on-screen instructions.




### 4. Privacy Policy, Terms and Conditions

Please read through the privacy policy and terms & conditions to use HUMAX services. Don't forget, we will always treat all your personal information as private and confidential. Agreeing will help us improve our products, software and services in the future. Select **NEXT** and press **OK** to continue.




### 5. Power Saving Mode

Setting power saving mode to **On** will consume less power in standby mode (0.5W) but increase system start times. If you use loop-through or will use other devices to interact with the recorder in standby mode, please set this feature to **Off** now. You can choose to enable/disable this feature at any time within the settings. Select **NEXT** and press **OK** to continue.

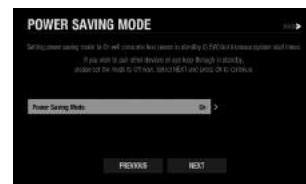

### 6. Setup Complete

Congratulations. You should see a summary of how many channels your box has picked up within your area. The on-screen setup is now complete. Select next to go to the home screen. You can now select channels, browse the TV guide, view on-demand and more. Select **FINISH** and press **OK**.

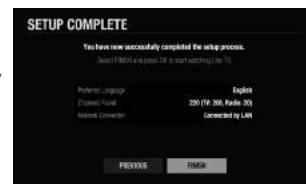


Freeview Home Page

You can go to the home by pressing the **FreeviewPlay** button wherever you are. From the home, you can reach TV Guide, Players, Top Picks, Recordings, Media and Settings. As long as your product is connected to the Internet, you can enjoy trending and recommended content from Freeview and Humax, plus various TV apps.

- Press the ◀/▶ button to browse the menus.
- Press the ▼ button to access the trending content and TV apps.


**Note:** You have to connect the product to the Internet and agree to the privacy policy and the terms & conditions to enjoy all services from Freeview Play and HUMAX apps.

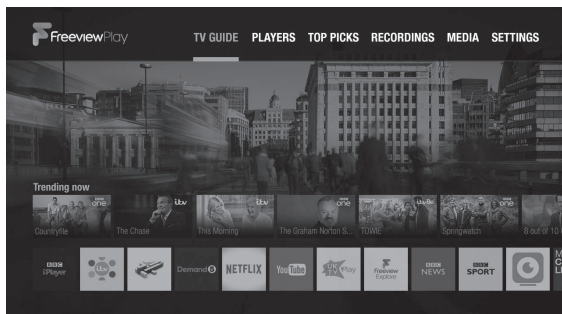

## Players

You can easily enjoy Freeview Play catch up players and TV apps from the Player screen.

- Press the **FreeviewPlay** button and select **PLAYERS**.

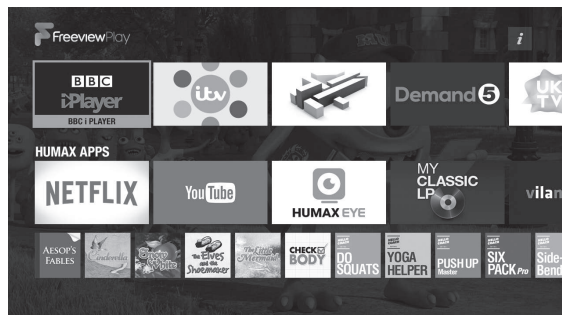

*Note:*

- Apps may differ depending on the region or service providers.
- You have to connect the product to the Internet and agree to the privacy policy and the terms & conditions to enjoy all services from **Freeview Play** and HUMAX apps.
- TV APPS are subject to change without notice. HUMAX is not responsible for the content or the discontinuity of the services.

## Top Picks

Access **On Demand**, **On Now**, and **Recordings** from the top picks menu. View recommended and featured content curated by Freeview Play placed in easy to see categories.

- Press the **Freeview Play** button and then select **TOP PICKS**.


### Note:

- You have to connect the product to the Internet and agree to the privacy policy and the terms & conditions to enjoy all services from Freeview Play and Humax apps.
- From December 2017, you will experience recommendations for your own. New Top Picks will provide more personalized recommendations with reference to your watching patterns.

## On Demand

View and select Freeview recommended On Demand content categorized by genre, making it easy to search content. Catch up on shows you may have missed by pressing the **On Demand** button.


- Select content and play it right on your TV.

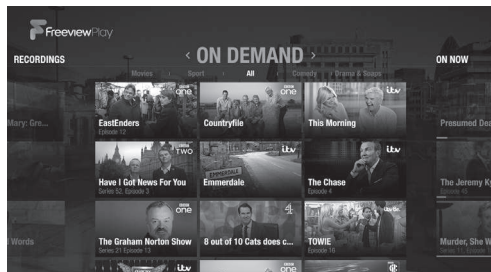

## On Now

Quickly see what's on now on the featured channels. No need to switch around channels to see what's on.


- Select a channel and watch it right on your TV.
- Press the **PLUS** button (+) to replace channels.

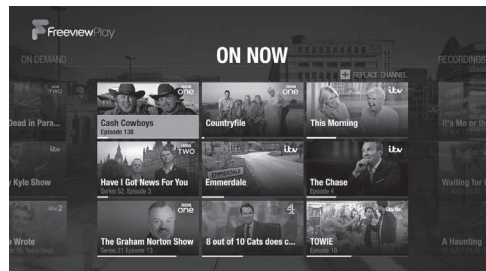

## Recordings

Simply see the recordings you have made along with partially watched recordings split into two groups Recently Added and part watched in Continue Watching.

- Select a recorded file and play it right on your TV.

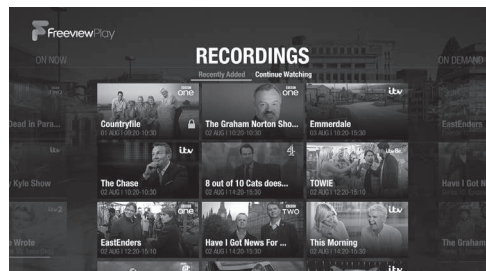


## Programme Information

View channel and programme information, see what's on later or watch Catch-up programmes when available.

### Simple guide & i-plate

Whenever you change a channel, the simple guide will display the show, channel and the programme information. To see more information, press the **OK** button while watching Live TV. Then, the i-plate information will display.

- Press the **▲/▼** button to see another channel.
- Press the **◀/▶** button to see the previous or next programme on the current channel.
- Press the **OK** button to display the programme detail.
- Press the **BLUE** button to display the channel list.
- Press the **BACK** or **EXIT** button to close the i-plate.

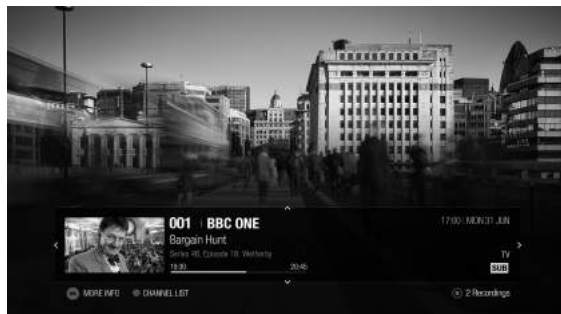


Programme Detail

Find out more information about the programme you are watching with programme detail.

- 1. Press the **OK** button while watching live TV. The i-plate will display.
- 2. Press the **OK** button again while displaying the i-plate.

With programme detail, you can watch an episode of a catch-up programme or set reminders or recordings for future programme.

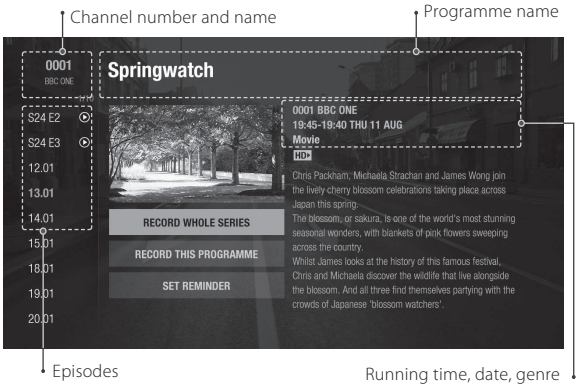


Episode Icons	
	Reminder (blue), Scheduled recording (red)
	Playback possible
	Recording in progress
	Series recording

Programme Icons	
	HD programme
	Parental guidance programme
	Blocked by digital recording management
	Encrypted programme
	Locked programme
	Dolby audio
	Programme with audio description
	Programme with subtitle
	Split programme
	Available in HD

TV Options

You can change the TV options for audio and video output. Press the **PLUS** button (+) while watching Live TV to change the resolution and display format or to switch on the audio description and subtitles.

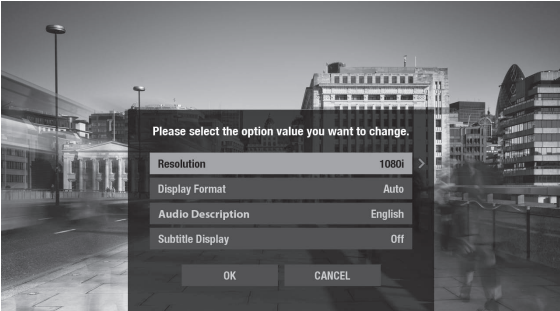

## Live TV

Whilst watching live TV interact and access additional information.

### Watching live TV


You can enjoy watching plenty of live TV channels in real time.

- Press the **CH▲/▼** button to change a channel. You can also enter the channel number directly.
- Press the **OK** button and then **BLUE** button to display a channel list. You can see the programme name as well as the channel number and name.
- Press the **PLUS** button while displaying a channel list. If you change a channel group, all the channels only in the selected group will be listed.



### Pausing and Rewinding live TV

Your Freeview Play recorder supports time shifted recording (TSR) that allows you to pause a live programme and return later where you left off. The TSR function temporarily records the programme you are watching to the hard disk drive automatically for up to 2 hours.

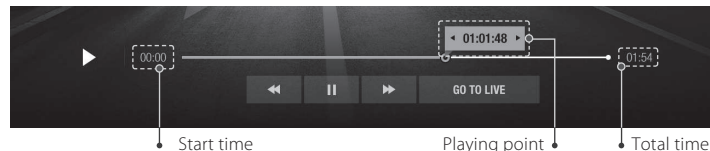

#### Note:

- Pausing Live TV will work after 10 seconds of changing to a channel.
- Each time you change channels the TSR will clear and start again.

To pause the programme

1. Press the **PAUSE** button.
2. Press the **PLAY** button to watch from the pausing point.  
Pressing the Pause starts a time gap between Live TV and the point you pressed pause.

To watch missed scenes

1. Press the **FAST REWIND** button.
2. Press the **PLAY** button at the point where you want to start watching.

To skip scenes

Press the **FAST FORWARD** button when there is a time gap between the current watching point and the live broadcasting point.

If you reach the live broadcasting point while fast forwarding, the programme automatically plays at normal speed.

## Previous or Next Programmes

Watch a previous programme, schedule recordings or set reminders for your favourites.

### What's on later

You can see the next programmes for the next 8 days.


1. Press the **GUIDE** button to go to the TV guide.
2. Press the **►** button to see the next programmes.  
Long press the **►** button to move to a certain day.
3. Select a programme and press the **OK** button to schedule a recording or reminder.



## Catch-up programmes

You can watch selected Catch-up programmes from the last 8 days even though you missed your favourites.

1. Press the **GUIDE** button to go to the TV guide.
  2. Press the **◀** button to see catch-up programmes. Long press the **◀** button to move to a certain day.
  3. Select a programme and press the **OK** button to watch the programme.
- Catch-up programme is accessible only when the network is connected and that programme is available on Catch-up from the broadcaster.

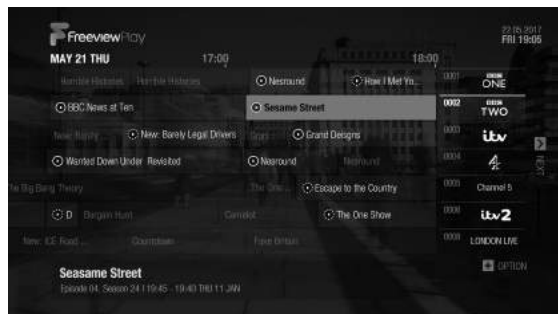


## Smart Search

You can search for your favourites from Live TV, Catch-up, Recordings and on-demand. Just enter a key word. Whenever you enter a text, you can see the suggested keywords and related content from TV guide, TV apps and external drives.

Your product will categorize the content by On Demand, channels, past or future programmes, recordings, apps or network server. With the categorized content, you can search for your favourites at a glance and watch it right on your TV.

- Press the **SEARCH** button and then enter a key word.

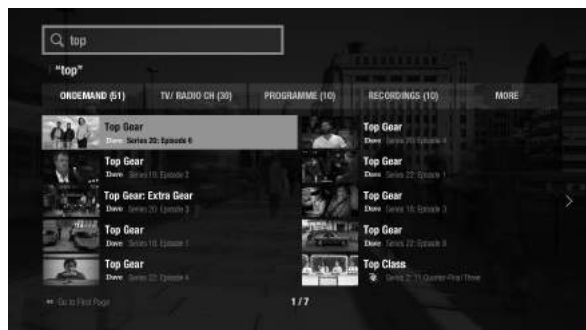

**Note:** Enter at least three characters to search programmes or media files. If you enter less than three characters, channels and Apps are searched.



## TV Guide

You can see the programme schedule of each channel, and schedule recordings or reminders for future programmes.

- Press the **GUIDE** button.
- Use the arrow buttons on the remote control to navigate in the Guide.
- Select a programme from next or catch-up programmes and press the **OK** button to display the programme details.



## Watching Live TV

Select a programme and press the **OK** button to watch live TV. Alternatively, you can enter the channel number directly.

**Note:** Press the **CH ▲/▼** button to change a page.

### Changing Channel Group (TV, Radio, HDTV)

1. From the guide press the **PLUS** button (+) and select **CHANGE GROUP**.
2. Select the channel group and press the **OK** button.

### Changing Programme Genre

1. From the guide press the **PLUS** button (+) and select **GENRE SEARCH**.
2. Select the genre and press the **OK** button.

You can see the channels categorised for each genre.

### Quick Navigation

1. From the guide press the **PLUS** button (+) and select **JUMP TO DATE**.
2. Select a date and press the **OK** button.

Alternatively, you can long press the **◀/▶** buttons to move to a certain date.

Seeing What's on Later

Press the ► button to see the next programmes.



Setting Reminders or Recordings

- 1. Select a programme and press the OK button.
- 2. Select an episode in the left column.
- 3. Select **RECORD WHOLE SERIES**, **RECORD THIS PROGRAMME** or **SET REMINDER** and press the OK button.


	Reminder (blue)		Recording in process
	Recording (red)		Series recording

Note:

- If the programme conflicts with another programme, adjust the scheduling appropriately.
- If the channel is locked, you will be prompted to enter your password. The default password is 0000. If you have forgotten your password, please contact your local distributor.

Watching Catch-Up Programmes

- 1. Press the ◀ button to go back in the Guide to see programmes available in Catch-Up.
  - 2. Select a programme and press the OK button.
- If the programme has been recorded or is available on Catch-up you can play it back.

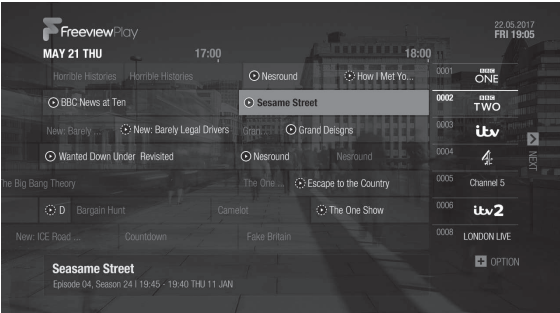

**Note:** Catch-up programmes are accessible only when the network is connected and that programme is available on Catch-up from the broadcaster.

## Ways to Record

Your product has triple tuners and a hard disk drive built-in which allows you to record up to 4 programmes simultaneously while watching a fifth channel. Here are some simple ways to record.

**Note:**

- When recording four programmes you may have a limited number of channels you can view Live.
- The HDD capacity differs depending on the product.

### Instant Recording

While watching a programme press the **RECORD** button to record to the end or press **STOP** when you want to finish.

### Manually Extend Recording

While the programme is recording press the **RECORD** button, set the duration or select till the end of the programme or the next.

**Note:**

- Recording will continue until the end of the current programme. If it ends within ten minutes, the recording will continue until the end of the next programme.
- Recording continues for two hours if there is no programme information.

## TV Guide

Press the **GUIDE** button and select a programme you want to record from any channel. Press the **RECORD** button and you will be prompted to record a single episode or series.

### Additional Programme Detail

Press the **OK** button while watching a programme, then an information bar will appear at the bottom of the screen. Press **OK** again for expanded information including future programmes to record from a left hand list. Select a programme date and press **OK** to record.

### Scheduled Recordings or Reminders

You can schedule recordings or reminders manually.

1. Press the **FreeviewPlay** button. Select **RECORDINGS** and **SCHEDULE**.
2. Select **ADD A SCHEDULE**.
3. Set a schedule manually.
4. Select **OK** and press the **OK** button.

### Editing Schedule

You can delete or reschedule the scheduled programmes.

1. Press the **FreeviewPlay** button. Select **RECORDINGS** and **SCHEDULE**.
2. Select a scheduled programme.
3. Press the **PLUS** button (+).
4. Select **Delete** or **Reschedule**.

**Note:** You can set the padding time to record programmes with extra recording time. Press the **FreeviewPlay** button and then the **▲** arrow button to select **SETTINGS**. Select **PVR Settings** and then **Recording Options**.

## Recording Conflict

When you attempt to schedule programmes a lot, the guide will suggest alternative recording times avoiding recording clashes.

### Recording Conflict

A recording conflict occurs:

- **Case 1** when you try to start a new recording while recording.
- **Case 2** when a new recording conflicts with the previously scheduled recordings.

Select one of the recordings to cancel.

### Tuning Conflict

A tuning conflict occurs when a scheduled recording is about to start while you are watching another channel.

A record notice will pop up 30 seconds before the scheduled recording starts.


- **YES:** The channel will change at the start time and the recording will start.
- **NO:** The scheduled recording will be cancelled.

## Playing Recorded Programmes

You can watch the recordings stored in the built-in hard disk drive. The recordings are categorized by groups so that it will be easy for you to find the programme you want.

### Playing Recordings

1. Press the **FreeviewPlay** button and select **RECORDINGS**.
2. Select one from the recording category list and press the **OK** button. The recorded programmes will be listed in the right column.
3. Select a recording and press the **OK** button. You can play back the programme, delete it or record whole series if the programme is part of a series.

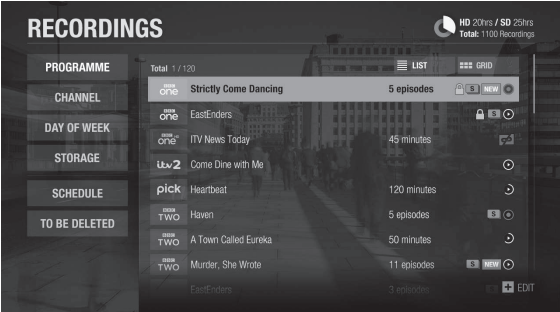

### Recordings Icons

	New recording		Recording in process
	Series recording		Watching paused
	Failed recording		Watching completed
	Locked Programme		


Media

You can play video, music, photo files from the connected storage devices or home network devices on your TV. Make sure that the USB storage device or network is connected correctly.

Press the **FreeviewPlay** button. Select **MEDIA**.

Direct Access to Media Files

- 1. Select **VIDEO**, **PHOTO** or **MUSIC**.
- 2. Select a storage or network server.  
The recently played files appear.

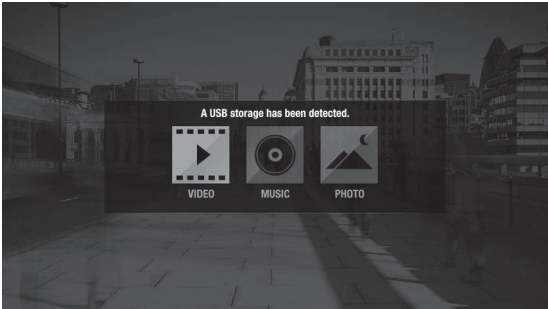

Note:

- You cannot play the recently played files from the external storage which is already disconnected.
- HUMAX is not responsible for any data loss or file damage.
- Some playback control buttons may not function depending on the contents.

Supported File Formats

- **Video:** MP4, VOB, AVI, ASF, MKV, MPEG-2TS
- **Photo:** JPEG, PNG, BMP, GIF
- **Music:** MP3

**Note:** Certain files may not play depending on file formats or video and audio codec.

Playing Media Files

Playing Video

Select a video file and press the **OK** button.



	Play		Fast rewind
	Pause		Fast forward
	Stop		

Changing Subtitle Option

- 1. Select **SUB** and press the **OK** button when the play bar is on the screen.
- 2. Set the subtitle option.

**Note:** Subtitle may not be available for some video files played over the network.

Playing Photo

Select a photo file and press the **OK** button. Photo slideshow starts.



>	Play		Pause
↶	Exit slideshow	+	Play mode


Changing Play Mode

You can set the slideshow speed or background music during slideshow. Press the **PLUS** button (+).

- **Slideshow Speed:** Select the display time per photo in slideshow.
- **Music Play:** Select **On** to play music files during slideshow.

Playing Music

Select a music file and press the **OK** button. All files in the group will play successively.

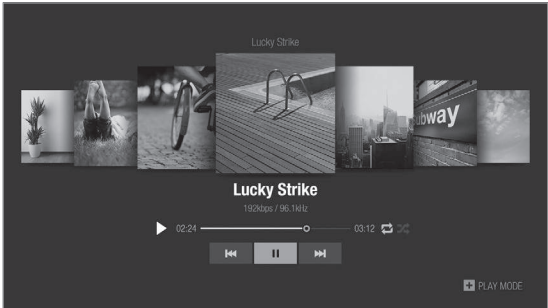

>	Play		Pause
↶	Exit music player	+	Play mode

Changing Play Mode

You can set the playback options for listening to music. Press the **PLUS** button (+).

- **Repeat Option:** Set the repeat option in the playlist.
- **Play Mode:** Select **Normal** or **Shuffle**.

## Editing Files

You can delete, copy, move files and change the storage.  
Select a file and press the **PLUS** button (+).

Delete	Delete the file.
Copy	Copy the file to the storage you want.
Move	Move the file to the storage you want.
Select	Select a file.
Select All	Select all files.

### Note:


- When you copy or move a file to an external storage device, the file is copied to its root folder.
- Files may not be copied or moved if the storage is full or the file size is too large.
- Files on a network server cannot be edited.

## Playing Files by Storage

### Playing Files from Storage Device

You can play files from the storage devices such as internal HDD and USB storage devices.

1. Select a storage device.
2. Select **VIDEO**, **MUSIC** or **PHOTO**.
3. Select files you want to play.

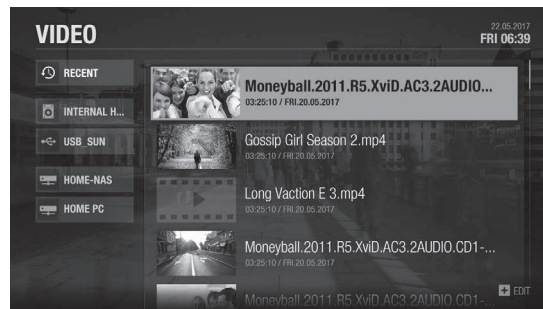

### Note:

- Use USB storage devices formatted by ext3, FAT or NTFS only.
- Do not disconnect the USB storage device during playback, the files or the USB storage device may be damaged.
- It is recommended to use the USB storage devices requiring external power supply.
- If the USB storage device is connected in standby mode, it will automatically be recognized when the product is turned on.
- HUMAX cannot guarantee compatibility with all USB storage devices and assumes no responsibility for any loss of data.

## Playing Files from Home Network Devices

Your HUMAX product is a home network device capable of sharing media files with other home network devices such as the PC, NAS or another HUMAX PVR when they are connected to the same home network.

You can play the video, music or photo files saved in your home network devices on your product when the home network device is connected to the same home network.

### Connecting to Home Network

1. Press the **FreeviewPlay** button.
2. Press the **▲** arrow button to select **SETTINGS**.
3. Select **Network Settings**.
4. Set the options for the LAN or Wireless LAN.

**Note:** See page 28 for connecting to the network.

### Playing Files from Home Network Devices

1. Select a home network device.
2. Select **VIDEO**, **MUSIC** or **PHOTO**.
3. Select files you want to play.

#### **Note:**

- The list of supported home network media servers will appear automatically.
- Home network media server software such as Window Media Player 12 must be installed and executed on the PC to share media files stored in the PC. The media files must be stored in the library folder of the PC.
- Refer to the instructions of your operating system for setting up home network server.

### Playing Files from SAMBA Server

1. Select a **SAMBA** server.
2. Enter the ID and Password of the PC to access to the shared folders.
3. Play the files from the SAMBA server on your TV.

**Note:** Make sure that the settings in your Windows7 PC is ready to connect to the SAMBA server. Refer to the instructions of your operating system for setting up SAMBA server.

## HUMAX Mobile Apps

You can enjoy almost features on your mobile device as well as on your HUMAX product.

### Downloading Mobile App

1. Go to Google play or iTunes App Store to download HUMAX Mobile Apps.
2. Search by keyword HUMAX.
3. Install the HUMAX Apps on your mobile device.

#### **Note:**

- HUMAX Apps may not guarantee best performance for all mobile devices.
- Both HUMAX product and mobile device should be connected to the same network.
- Some features are not available outside home network.
- HUMAX mobile apps require Android 4.0 and later, and iOS 6 and later.

### TV Remote

You can control your HUMAX product right from your mobile devices just as using the actual remote control.



Phone	Remote	Use all buttons on the actual remote control.
	Keyboard	Enter the text conveniently.
Tablet	Simple	Use main buttons.
	Full	Use all buttons on the actual remote control.



### Live TV



You can stream live TV directly to your mobile devices. When you have to move to another room in the middle of watching TV at home, you can continue watching live TV by bringing it into your mobile devices. Watch live TV, play back recordings, schedule recordings or reminders and more from HUMAX Live TV app.

#### Note:


- You need to register and sign in to myhumax.net to use this feature. For more information, go to <https://www.myhumax.net>.
- Pay channels might be limited.
- Live TV app performance may not guarantee depending on the broadcast environment.

### Pairing

To use live TV app, you need to pair it with HUMAX product first.

1. Tap HUMAX Live TV App on your mobile device to open. A pairing message appears.
2. Select the product to pair with the mobile device.
3. Enter the registration code. To retrieve a registration code, go to **HOME > SETTINGS > PVR Settings > Remote Recording** and then select **Retrieve Registration Code**.

**Note:** If no HUMAX product is detected, check your wireless network settings.

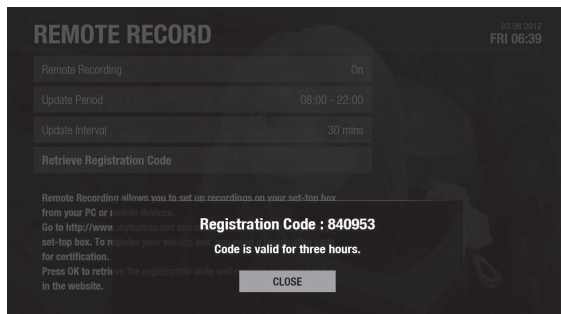


### Setting a reminder or recording

You can schedule recordings or reminders on your HUMAX product remotely using your mobile device.

**Note:** You need to register and sign in to myhumax.net to use this


1. Sign in to with myhumax.net ID and password.
2. Tap **GUIDE** to go to TV Guide.
3. Select a future programme.
4. Tap **Record this programme** or **Set reminder**.

You can schedule recordings for whole series if the programme is part of a series.

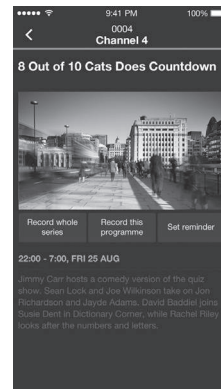


### Sending a watching programme to your TV

You can send your watching programme on your mobile device to a big screen.

1. Tap anywhere while watching to display the icons on the screen.
2. Tap the icon  and select your HUMAX product. The programme plays on your TV.

### Bringing a content into your mobile device

You can bring the live programme from your TV to your mobile device so that you can see it from anywhere in your home.

1. Tap anywhere while watching to display the icons on the screen.
2. Tap the icon  to bring the programme from your TV to your mobile device.

## General Settings

Press the **FreeviewPlay** button. Select **SETTINGS** and then **General Settings**.

### Parental Control

- **Guidance Policy:** You can set the guidance on the recordings or Internet contents during the watershed which is the time period (21:00 to 05:30) for adult contents.
- **Change Password:** Enter a new password.
- **Block Channel Settings:** Set On if you want to block access to the Channel Settings you have previously made.

**Note:**

- Enter the password to view the blocked programmes.
- The default password is 0000. If you have forgotten your password, please contact your local distributor.

### Language Setting

You can set the preferred language for audio and subtitle.

### Video Setting

You can set the screen ratio, display format and screen resolution.

### Audio Setting

- **S/PDIF:** You can select the digital audio signal output.
- **HDMI:** You can select the digital audio signal for HDMI output.
- **Audio Description:** You can set to narrate the on-screen visuals which is used for visually impaired viewers.
- **Lip-Sync Delay:** You can adjust the sound difference between audio and video.

**Note:** Not all channels will provide audio description. For further information, contact the broadcaster.

### On-screen Display

- **Info Display Time:** You can set the duration the Simple Guide is displayed whenever you change the channel.
- **Subtitle Display:** You can set to display the subtitle automatically or not.
- **Subtitle Font:** You can set the subtitle font.
- **Hard of Hearing:** You can set to show the closed captions.
- **Transparent Background:** You can turn on or off the transparency on background. If set to **On**, you can continue to watch live TV even while displaying any other information.

### Privacy Policy, Terms & Conditions

You can agree or disagree to send HUMAX your watching information. Your watching information will be helpful for HUMAX to improve products, software and services.

## Network Settings

Press the **FreeviewPlay** button. Select **SETTINGS** and then **Network Settings**.

**Note:** To fully enjoy the services, it is recommended to connect the product to the Internet.

### Configuring LAN

1. Select **Configure LAN** for wired connection.
2. Select your IP configuration type between **DHCP** and **Manual**.
  - **DHCP:** If you use a router or modem that has a DHCP (Dynamic Host Configuration Protocol) server function, select **DHCP**. The IP address will be automatically assigned.
  - **Manual:** If there is no DHCP server on the network and you want to set the IP address manually, select **Manual**. Enter the values for IP Address, Netmask, Gateway Address and DNS Address.
3. Select **APPLY** to connect to the selected network and press the **OK** button.

**Note:**

- When entering the IP address manually, enter 3 digits in a row.
- The network is connected by wired LAN when both wireless and wired LAN are activated.
- HUMAX recommends the network connection over a wired LAN.

### Configuring Wireless LAN

1. Select **Configure WLAN** for wireless connection.
2. Select the wireless LAN network and press the **OK** button.
3. Press the **BACK** button to save.

**Note:** If you choose a locked wireless network, you need to enter the password to proceed. The network password is case-sensitive and cannot contain spaces.

### Network Connection Status

You can view the connection status of the local area network or the Internet. Select **RETRY** if either network is disconnected.

## Network Server

- **Network Server:** Set to **On** to share the live broadcast, recordings and media files saved in the internal HDD with other products that support Home Network-Digital Media Player.
- **Rename Server:** Enter a new name to change the server name.
- **Server Status:** You can see the information on network servers.
- **Server Activation Time:** When **Server Activation Time** is set to **On**, the network server remains active during the time period you have entered even when the product is in standby mode. You can share live broadcasts, recordings and media files without turning the product on.

## File Share

- **SAMBA Server:** When **SAMBA Server** is set to **On**, the internal HDD can be accessed as a network disk drive from your PC. You can copy the video, music, photo files in the internal HDD to the PC storage.
- **FTP Server:** When **FTP Server** is set to **On**, you can copy the video, music, photo files in the internal HDD to the PC storage using the FTP client programme.
- **Password:** If Password is set, you can access the internal HDD only by entering the password.
- **Download Folder:** When **Download Folder** is set to **Enable**, you can copy the video, music, photo files in the PC to the download folder in the internal HDD.

## PVR Settings

Press the **FreeviewPlay** button. Select **SETTINGS** and then **PVR Settings**.

### Remote Recording

You can set up recordings on your product from your PC or mobile devices. To use this feature, you need to register your product in the website.

1. Go to <https://www.myhumax.net> and create an account and register your product.
2. To register your product, you need a registration code for certification. Select **Retrieve Registration Code** and press the **OK** button.
3. Enter the registration code in the website.
  - **Remote Recording:** Set to **On** to use the remote recording feature.
  - **Update Period:** Set the period to receive the recording schedule from the HUMAX server.
  - **Update Interval:** Set the update interval.

### Recording Options

- **Start Padding Time / End Padding Time:** You can set the recording padding time to add extra recording time to the start and end of all your scheduled recordings.  
**Note:** The start and end times set will override the broadcast Accurate recording.
- **Auto Delete:** Set to **On** to add old recordings to the list of **TO BE DELETED**.

### Playback Options

- **Series Play:** Set to **On** to play back all episodes of a programme successively.
- **Instant Replay Time:** Select the replay time.
- **Skip Forward Time:** Select the skip time.

### Storage

You can check the capacity of each storage or format the storage when necessary.

- **Internal HDD:** Run the HDD test or format the storage.
- **External Devices:** To remove the storage, select **Remove Storage Safely** first.

**Note:** All data in the storage will be deleted after formatting.

## System Settings

Press the **FreeviewPlay** button. Select **SETTINGS** and then **System Settings**.

### System Information

You can view the system information. Select **CHECK NEW SOFTWARE** to see if new software is available.

### Power Timer

You can set the time the product powers on or powers off.

### Power Management

- **Automatic Power Down:** Select **On** to enter standby mode automatically if no user interaction occurs for 4 hours.
- **Power Saving Mode:** Select **On** to reduce the power consumption in standby to below 0.5W. If set to **Off**, the product will continue to transmit a signal even in standby.

#### **Note:**

- A message will display 2 minutes before the product enters standby mode. If you ignore this message, the product enters standby mode automatically.
- When set to **On** the product will not supply the loop through aerial signal to any connected device.

### HDMI-CEC

You can set your TV to turn on or off automatically when the product is turned on or off.

### Factory Default

You can restore your receiver to factory settings.


Shortly after you complete the factory default, the installation wizard will appear automatically.

**Warning:** Note that once you perform factory default, all user configured data will be reset.

# Channel Settings

Press the **FreeviewPlay** button. Select **SETTINGS** and then **Channel Settings**.

## Setting Favourite Channels

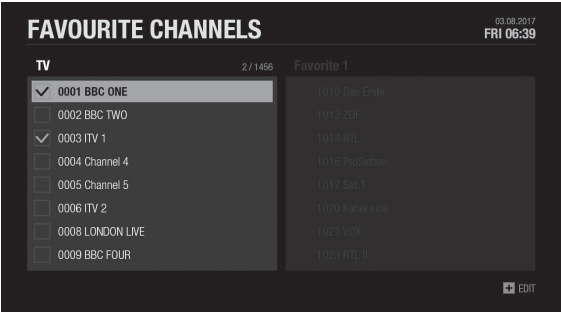

**Note:** Press the **EXIT** button to exit. Press the **BACK** button to return to the previous screen.

Select the channels from the left column and press the **PLUS** button (+).


Add to favourite	Add to favourite channels.
Change Group	List channels in another channel group.
Select / Deselect All	Mark or release all channels.

Select the channels from the right column and press the **PLUS** button (+).

Remove	Remove from favourite group.
Move	Move the channel in the favourite group.
Change Favourite	Change to another favourite group.
Rename Favourite	Rename the favourite group.
Select / Deselect All	Mark or release all channels.

## Editing Channel List

You can delete, lock or rename channels in the channel list. Select a channel and press the **PLUS** button (+).

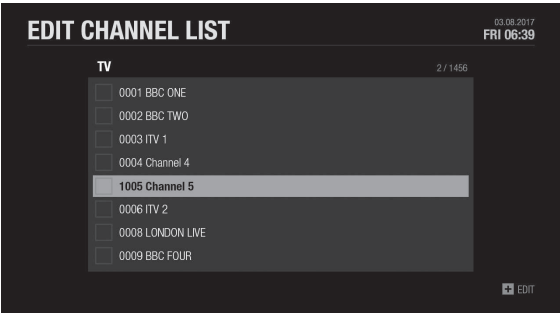

Delete	Delete channels from channel list.
Lock/Unlock	Lock channels to block access.
Rename	Change channel name.
Select/Deselect All	Mark or release all channels.
Change Group	To list the channels of another favourite group, press the <b>PLUS</b> button (+) and select <b>Change Favourite</b> . Select the group and press the <b>OK</b> button.

### Signal Test

You can check the signal strength and quality of the searched channels.

### Automatic Channel Search

You can search channels automatically without entering any other information as long as your aerial is connected. When the channel search is complete, select **SAVE** and press the **OK** button to save the results.

**Note:** Select **STOP** and press the **OK** button to stop the channel search. The searched channels will remain.

### Manual Channel Search

You can search channels manually by searching parameters.

- **Channel:** Select the channel.
- **Frequency:** Enter the frequency. The corresponding frequency value will be automatically displayed.
- **Transmission:** Select **DVB-T** or **DVB-T2**.
- **Bandwidth:** Select the bandwidth.
- **Network Search:** Select **On** or **Off**.

# Specification

Tuner & Demodulator	
Number of Tuners	3 Tuners
RF Input Connector	IEC 169-2, female
RF Loop though Connector	IEC 169-2, male
Input Frequency Range	470MHz ~ 862 MHz
Modulation	OFDM
Mode	DVB T: 2K, 8K DVB T2: 1K, 2K, 4K, 8K, 16K, 32K
FEC Mode	DVB T: 1/2, 2/3, 3/4, 5/6, 7/8 DVB T2: 1/2, 3/5, 2/3, 3/4, 4/5, 5/6
Guard Interval	DVB T: 1/4, 1/8, 1/16, 1/32 DVB T2: 1/4, 1/8, 1/16, 1/32, 1/128, 19/128, 19/256
Constellation	DVB T: QPSK, 16-QAM, 64-QAM DVB T2: QPSK, 16-QAM, 64-QAM, 256-QAM
Audio/Video Decoding	
Audio Decoding	MPEG/MusiCam Layer I & II
Audio Mode	Single channel/Dual channel/Joint stereo/Stereo
Video Decoding	MPEG-2 ISO/IEC 13818 Transport Stream Specification
Video Format	4:3, 16:9
Video Resolution	1080p, 1080i, 720p, 576p, 576i
Memory	
Flash Memory	512MB
RAM	DDR3 1GB

Audio/Video In/Out	
Video	RCA, HDMI/HDCP
Audio	Audio L/R, S/PDIF
Data In/Out	
USB	USB 2.0 Host (5 V $\Rightarrow$ 0.5A) x 2EA
File Format	JPEG, MP3
Hard Disk	
HDD	500GB/1TB/2TB
Power Supply	
Input Voltage	200V - 240V ~ 50/60Hz 0.8A
Type	Adaptor
Power Consumption	12V $\Rightarrow$ 2.5A (Standby under 0.5W)
Protection	Separate internal fuse. The input should be protected against lightning.
Physical Specification	
Size (w/h/d)	280 x 48 x 200 (mm)
Weight	1.03 kg

**Note:** The specifications are subject to change without notice.

## Trouble Shooting

Before contacting the customer service center, make sure to read the tips below carefully. If the problem persists after you complete the following procedure, please contact HUMAX customer service for further instructions.

### General

Problem	Possible Cause	What to Do
<b>No red or blue LED on the front panel of the product</b>	Mains adaptor unplugged. Mains socket switched off.	<ul style="list-style-type: none"> <li>Check the main power cable and make sure it is plugged into a suitable power outlet.</li> <li>Connect the power cable to a different power outlet.</li> </ul>
<b>No picture (Nothing shows on the TV)</b>	HDMI cable not securely connected. TV Set not on correct Input / Source	<ul style="list-style-type: none"> <li>Make sure that the product is powered on and in operation mode.</li> <li>Make sure that the AV or HDMI cable is firmly connected to the TV.</li> <li>Check if the channel is currently on air.</li> <li>Check that you TV is on the correct input / source for the HDMI / AV connection (refer to your TV manual for more details on how to change the input / source).</li> <li>Check the brightness of the TV.</li> </ul>
<b>No picture (No channels)</b>	Aerial is disconnected. Aerial is damaged/misaligned. Out of digital signal area. Aerial not positioned correctly.	<ul style="list-style-type: none"> <li>Make sure that the product is powered on and in operation mode. Press the <b>STANDBY</b> button.</li> <li>Make sure that the AV or HDMI cable is firmly connected to the TV and the product.</li> <li>Make sure that the aerial cable is properly connected to the product.</li> <li>Press the Input or Source button on the TV remote and select AV or HDMI mode depending on how your product is connected to the TV.</li> <li>Search channels again. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Channel Settings &gt; Automatic Channel Search</b>.</li> <li>Check if the channel is currently on air.</li> </ul>
<b>Poor Picture Sound quality</b>	Electro magnetics from electronic devices around the product can cause the issue. Poor/faulty HDMI cable	<ul style="list-style-type: none"> <li>Make sure there is no mobile phone or microwave oven near the product.</li> <li>Keep the power and the RF cables apart from each other.</li> <li>Adjust the antenna direction to get a better picture.</li> </ul> <p><b>Note:</b> If the antenna is covered with snow, the RF is weakened by heavy rain, or the aerial position is changed by strong wind, the condition of the sound and picture may temporarily be poor. However, the poor sound and picture quality due to weather conditions cannot be accepted as a malfunction of product.</p>



Problem	Possible Cause	What to Do
No sound	AV/HDMI cables are not connected properly or faulty. Volume is set to minimum or mute.	<ul style="list-style-type: none"> <li>Check that your AV or HDMI cable is connected correctly.</li> <li>Check the volume levels of your TV and the product.</li> <li>Check if the product or TV is on mute.</li> <li>Check audio type or soundtrack option. (where applicable)</li> </ul>
No volume control on HD channels	Check the HDMI Audio setting	<ul style="list-style-type: none"> <li>Go to <b>FreeviewPlay &gt; SETTINGS &gt; General Settings &gt; Audio Setting</b> - change the HDMI audio setting to Stereo.</li> </ul>
No response to remote control	Low batteries	<ul style="list-style-type: none"> <li>Remove and reinsert the batteries in the remote control.</li> <li>Replace the batteries in the remote control for a new set.</li> </ul>
No password information		<ul style="list-style-type: none"> <li>The default password is always 0000.</li> </ul>
Channel search does not work	Aerial is disconnected. Aerial is damaged/misaligned. Out of digital signal area. Aerial is not positioned correctly.	<ul style="list-style-type: none"> <li>Make sure that the aerial cable is properly connected to the product.</li> <li>[Terrestrial] Use the appropriate aerial capable of receiving VHF or UHF channels for your area.</li> </ul>
Cannot update the new software	Network is not set up.	<ul style="list-style-type: none"> <li>Check if the network is configured properly. You can check the network connection status by going to <b>FreeviewPlay &gt; SETTINGS &gt; Networks Settings &gt; Network Connection Status</b>.</li> <li><b>Note:</b> If your product stays connected to the network, everytime you turn off the product it will search for any updates available on air.</li> <li>To manually search for any updates available, go to <b>FreeviewPlay &gt; SETTINGS &gt; System Settings &gt; System Information</b> and then select <b>CHECK NEW SOFTWARE</b>.</li> <li>To update the software via USB,               <ol style="list-style-type: none"> <li>Download the latest software version and save it to an empty USB memory stick.</li> <li>Please make sure the software is saved in the root of the USB stick.</li> <li>Insert the USB memory stick into a rear USB port of the product.</li> <li>Go to <b>FreeviewPlay &gt; Settings &gt; System Settings &gt; System Information</b> and press the <b>OK</b> button on <b>Check New Software</b>.</li> <li>When the download progress stops it may take up to 5 minutes for it to restart so 'DO NOT TURN OFF the product'</li> <li>To confirm successful update, please go to <b>FreeviewPlay &gt; Settings &gt; System Settings &gt; System Information</b> and check <b>Software Version</b>.</li> </ol> </li> </ul>
Randomly Shuts itself off	Automatic Power Down Option On Timer is set	<ul style="list-style-type: none"> <li>Go to <b>FreeviewPlay &gt; SETTINGS &gt; System Settings &gt; Power Management</b> and then check if <b>Automatic Power Down</b> is set to <b>On</b>.</li> <li>Go to <b>FreeviewPlay &gt; SETTINGS &gt; System Settings &gt; Power Timer</b> and then check if <b>Power Off Timer</b> is set to <b>On</b>.</li> </ul>

## Appendix

### Recordings

Problem	Possible Cause	What to Do
Cannot schedule recordings or reminders	Conflict of recordings	<ul style="list-style-type: none"><li>Check that there is a previous schedule conflicting with a new schedule. Cancel one of the schedules.</li><li>This product has 3 tuners. This allows you to record up to 4 different channels and watch another program. There may be limitations on the 4th channel you can record or the live TV channel you try to view depending on the channels you are recording.</li></ul>
Cannot record programmes	Full HDD Conflict of recordings	<ul style="list-style-type: none"><li>The hard disk is full. Delete unnecessary programmes and make space for new recording.</li><li>Check if recording conflicts with another channel. Stop the current recording or wait until the recording is finished.</li><li>Check that the product is switched on when recording starts.</li><li>If you are missing first or end bits of the program, set the padding time. Go to <b>FreeviewPlay &gt; SETTINGS &gt; PVR Settings &gt; Recording options</b> and set the padding times.</li><li>Check if your product recognizes problems with the HDD. Go to <b>FreeviewPlay &gt; SETTINGS &gt; PVR Settings &gt; Storage</b>, select the storage, and run the HDD test.</li></ul>
Cannot change channels while recording.	Conflict of recordings	<ul style="list-style-type: none"><li>This product has 3 tuners. This allows you to record up to 4 different channels and view a 5th Live TV channel. The 4th channel recording and the 5th you are trying to view maybe limited to channels being in the same broadcast groups as the first 3 programmes you have set to record.</li></ul>
How to set the padding time		<ul style="list-style-type: none"><li>If you are missing first or end bits of the programme, set the padding time. Go to <b>FreeviewPlay &gt; SETTINGS &gt; PVR Settings &gt; Recording Options</b> and set the padding times.</li></ul>
How enter passive mode		<ul style="list-style-type: none"><li>Go to <b>FreeviewPlay &gt; SETTINGS &gt; System Settings &gt; Power Management</b> and set <b>Power Saving in Standby to On</b>.</li></ul>

### Playback

Problem	Possible Cause	What to Do
How to edit recorded programmes		<ul style="list-style-type: none"><li>Go to <b>FreeviewPlay &gt; RECORDINGS</b> and select a file. Press the <b>PLUS</b> button (+) and delete. If you want to delete more than 1 programme, press the <b>PLUS</b> button (+) and select <b>Select</b>. You can mark files and then delete, copy or move the multiple files.</li></ul>
How to edit media files?		<ul style="list-style-type: none"><li>Go to <b>FreeviewPlay &gt; MEDIA</b> and select <b>Internal HDD</b>. Select a file and press the <b>PLUS</b> button (+). You can delete, copy or move the file.</li></ul>

## Appendix

Problem	Possible Cause	What to Do
Does not recognize larger external HDDs.	HDD capacity is too large.	<ul style="list-style-type: none"> <li>HUMAX recommends to use external HDDs up to 1TB.</li> <li>If the external HDD is making a ticking sound or not being recognized, this may indicate that the electricity is not sufficient. Please connect the power cable of the external HDD or connect another USB cable to the product.</li> </ul>
How to read files from external HDD		<ul style="list-style-type: none"> <li>Go to <b>FreeviewPlay &gt; MEDIA</b> and select an external HDD. Select a file and press the <b>OK</b> button.</li> <li>Some files may not be played depending on the file format.</li> </ul>
How to delete root folder?		<ul style="list-style-type: none"> <li>You cannot delete the root folder that is to store the downloaded files.</li> </ul>

## Network

Problem	Possible Cause	What to Do
Cannot connect to the Internet	<p>Too far from the wireless router</p> <p>Walls or obstacles between the product and the router cause interference.</p> <p>Faulty Ethernet cable</p> <p>Wrong password</p>	<ul style="list-style-type: none"> <li>Check if the network is connected properly. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Network Settings</b> and select Network Connection Status.</li> <li>If wireless network is not available in your home, use an Ethernet cable to connect the product and the router.</li> <li>Turn off the product and the router and then on to refresh the network.</li> <li>Move the product closer to the wireless router or remove any obstacles from between them.</li> <li>If you use an Ethernet cable, change the Ethernet cable for another.</li> <li>Check if other network devices in the same network are connecting to the Internet okay.</li> <li>Check the network password.</li> </ul> <p><b>Note:</b> The home network environment may cause the Internet speed slow down.</p>
On Demand does not work.		<ul style="list-style-type: none"> <li>Check if the network is connected properly. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Network Settings</b> and select <b>Network Connection Status</b>. If not connected, refer to the troubleshooting guide for the network.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Network traffic may cause temporary loss of network connectivity.</li> <li>Poor network connection may cause On Demand run slowly.</li> </ul>

## Appendix

### Media

Problem	Possible Cause	What to Do
Cannot play YouTube video.	Some YouTube videos are played on PC only.	<ul style="list-style-type: none"><li>• Play another video to view.</li></ul>
Network server does not work	HUMAX product is not connected to the network or the network is not configured.  Home network devices are not connected to the network or the network is not configured.  PC/Router settings are not correct.	<ul style="list-style-type: none"><li>• Go to <b>FreeviewPlay &gt; SETTINGS &gt; Network settings</b> and check if <b>Network Server</b> is set to <b>On</b>. When the network server option is set to on, files stored in the internal HDD can be shared with other Home Network compliant devices in the same network.</li><li>• Make sure that the options to share media files are enabled on your PC.</li><li>• Check if any firewall settings on your PC or router blocks Home Network compatibility.</li></ul>
File share(SAMBA/FTP) does not work	Network connection error  File sharing options	<ul style="list-style-type: none"><li>• Check if the network is connected properly. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Networks Settings</b> and select <b>Network Connection Status</b>.</li><li>• Make sure that your product and PCs are in the same network.</li><li>• Make sure that the SAMBA server is activated. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Network Settings &gt; File Share</b> and set <b>SAMBA Server</b> to <b>On</b>.</li><li>• Make sure that the FTP server is activated. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Network Settings &gt; File Share</b> and set <b>FTP Server</b> to <b>On</b>.</li><li>• Check if the password is correct. Go to <b>FreeviewPlay &gt; SETTINGS &gt; Network Settings &gt; File Share</b> and set a new password.</li></ul>

### Others

Problem	Possible Cause	What to Do
Can I use a HUMAX product from other countries in UK?	Each country has their own broadcasting system. HUMAX product is made it possible for regional broadcasting environment.	<ul style="list-style-type: none"><li>• HUMAX products from other countries are not available in UK. Customer services may be limited.</li></ul>

**Cautions:** Electromagnetic interferences from other electronic devices or cables may cause malfunction to the HUMAX product.

# HUMAX Customer Support

More information on your product is provided in the HUMAX website.  
Should your product require warranty service, please contact HUMAX to obtain the appropriate authorization.

UK	
Tel:	0344 318 8800
Opening Hours:	Mon - Fri 09:00 – 17:30 (excluding Bank Holidays)
E-mail:	uksupport@humax-digital.co.uk
Website:	www.humaxdigital.co.uk
Language:	English

## Glossary

### **CVBS (Composite Video Baseband Signal)**

A technology for transmitting video signals via a cable. Mixes luminance (brightness) and the chrominance (colour) signals together.

### **Dolby Digital**

An encoding system that digitally compresses up to 5.1 discrete channels of audio (left front, centre, right front, left surround, right surround) into a single Bitstream. A low frequency effect (LFE) channel is included providing the sound needed for special effects.

### **DVB (Digital Video Broadcasting)**

A set of standards that define digital broadcasts using satellite, cable or terrestrial systems.

### **EPG (Electronic Program Guide)**

An electronic equivalent to a printed television listings magazine. It is an application used with digital set-top boxes and digital television sets to list current and scheduled programs that are or will be available on each channel, including a short summary or commentary for each Program. The information supplied in the EPG is sent and updated by the channel broadcaster.

### **Frequency**

The property of a signal measured in cycles per second (=Hz).

### **FTA (Free- To-Air)**

An unscrambled broadcaster allowing customers to view channels or services without paying any subscription.

### **HDD (Hard Disk Drive)**

The primary computer storage medium, which is made of one or more aluminum or glass platters, coated with a ferromagnetic material.

### **HDMI (High-Definition Multimedia Interface)**

An all-digital audio/video interface that supports standard, enhanced, or high-definition video, plus multi-channel digital audio on a single cable. It transmits all ATSC HDTV standards and supports 8-channel digital audio.

### **OTA (Over the Air)**

A standard for the transmission of software for equipment, through a broadcast system. Manufacturers reserve the right for deciding the release of the software for their products.

### **PVR (Personal Video Recorder)**

A video recorder that can record and play back programmes directly using the hard disk drive(s).

### **RGB (Red – Green – Blue)**

A technology for transmitting video signals via a cable. RGB is a system to represent red, green, and blue colours on a TV or monitor display. Red, green, and blue can be combined in various proportions to obtain any colour.

### **S/PDIF (Sony/Philips Digital Interface format)**

A standard format for the transfer of digital audio signals. It allows the transfer of digital audio between two devices without any conversion to and from analogue, which could degrade the signal quality.

### **S-Video (Super-Video)**

Sometimes referred to as Y/C video; a technology for transmitting video signals via a cable. It is a video signal transmission in which the luminance (brightness) and the chrominance (colour) signals are transmitted separately to achieve superior picture clarity.

### **TSR (Time Shifted Recording)**

A function that records the present program temporarily to support trick-play.

# Universal Remote Control

## Set the universal remote control by entering 3 digit code

1. Press the **TV STANDBY** and **OK** buttons at the same time for 3 seconds. The **TV STANDBY** button will light on.
2. Direct the remote control to your TV and enter the 3-digit code. The button will blink when each digit is entered and it will blink twice after the last digit is entered.
3. Once your TV turns off press the **OK** button to lock the code. Your TV will turn off when matched with the code.
4. The **TV STANDBY** button will blink three times if the universal remote control setting is successful.

**Note:**

- When no code is entered for 20 seconds, the universal setting mode will switch to normal mode.
- Try several setting codes and select the code that has the most functions.

## Set the universal remote control in searching manner

1. Press the **TV STANDBY** and **OK** buttons at the same time for 3 seconds. The **TV STANDBY** button will light on.
2. Direct the remote control to your TV and press the **CH ▲/▼** button to search the brand code of the TV.
3. Once your TV turns off press the **OK** button to lock the code. Your TV will turn off when matched with the code.
4. The **TV STANDBY** button will blink three times if the universal remote control setting is successful.

**Note:** If the code setting process is not completed, the previously set code remains as default.

Brand	Code
Acer	261, 278, 305
Acoustic Solutions	210, 312, 324, 370, 386, 428, 477
Akai	102, 006, 098, 144, 145, 111, 061, 043, 074, 148, 232, 280, 128, 122, 461, 109, 462, 489, 094, 084, 083, 065, 035, 034, 033, 028, 023, 011, 004, 002, 154, 321
Alba	006, 144, 134, 204, 087, 064, 036, 005, 108, 473, 455, 447, 388, 099, 084, 077, 072, 065, 059, 034, 023, 002
Bang & Olufsen	014
Beko	006, 144, 086, 145, 111, 064, 072, 172, 361, 405
BenQ	223, 328, 329
Black Diamond	444, 204, 211
Brionvega	006, 014, 062
Bush	102, 006, 144, 134, 204, 138, 087, 061, 043, 036, 005, 108, 376, 373, 370, 361, 355, 352, 327, 388, 430, 431, 432, 440, 448, 451, 473, 476, 477, 478, 002, 033, 035, 044, 045, 056, 059, 065, 066, 095, 133, 164, 210, 213, 229, 232, 250
cello	397, 410, 418, 419, 420
Crown	006, 144, 134, 204, 086, 145, 087, 111, 143, 064, 361, 135, 072, 071, 053, 033, 002
Daewoo	102, 006, 124, 444, 036, 441, 406, 341, 338, 271, 249, 195, 192, 190, 164, 133, 119, 091, 079, 066, 035, 034, 002
Dell	235, 278
DMTech	260, 438, 449, 454, 456
Ferguson	006, 120, 098, 103, 030, 204, 012, 020, 029, 046, 052, 054, 077, 292, 447, 476
Finlux	102, 006, 144, 145, 333, 327, 172, 122, 118, 094, 089, 084, 083, 070, 055, 035, 023, 018, 017, 014, 011, 010
Fujitsu	002, 011, 032, 035, 042, 137, 173, 187
Fujitsu General	002, 032, 035, 137
Fujitsu Siemens	172, 211, 230, 246, 268, 369
Funai	144, 134, 043, 275, 336, 369, 407
GoldStar	006, 144, 145, 111, 061, 001, 007, 020, 023, 027, 034, 035, 047, 067

Gooding	087
Goodmans	102, 006, 120, 144, 103, 134, 124, 444, 204, 087, 043, 036, 005, 478, 211, 232, 477, 250, 476, 271, 445, 355, 370, 373, 440, 376, 382, 383, 386, 002, 004, 011, 035, 047, 052, 054, 065, 066, 084, 091, 094, 119, 121, 133, 172, 195, 210
Graetz	144, 087, 061, 023, 053, 065, 211
Grundig	102, 006, 030, 087, 142, 005, 108, 498, 476, 448, 447, 445, 430, 405, 370, 271, 267, 250, 225, 135, 121, 010, 101, 096, 028, 077
Grunkel	211
Hannspree	262, 263, 264, 342, 401, 402, 463
Hantarex	006, 002, 094, 190, 260, 289
Hinari	006, 043, 036, 005, 002, 033, 059, 077, 443
Hisense	102, 092, 165, 254, 265, 366, 491
Hitachi	006, 098, 124, 204, 208, 005, 019, 037, 146, 152, 153, 163, 169, 193, 197, 007, 206, 210, 217, 227, 295, 296, 330, 377, 399, 424, 483, 020, 021, 023, 027, 035, 054, 056, 060, 076, 081, 083, 084, 085, 089, 091, 094, 018, 106, 107, 011
Humax	505, 299, 506, 507, 245, 319, 322, 411, 433, 479
Hyundai	164, 190, 192, 241, 244, 271, 291, 317, 338, 340, 341, 439
Inno Hit	036, 002, 011, 035, 045, 047, 094, 211
Irradio	006, 036, 002, 047, 065, 147
JVC	111, 036, 005, 129, 130, 015, 029, 065, 072, 137, 149, 207, 264, 362, 408, 496
Keymat	258, 300, 398, 436, 437
Lenoir	002, 214
LG	102, 006, 144, 145, 138, 061, 064, 248, 281, 354, 367, 368, 384, 396, 416, 417, 425, 426, 215, 209, 067, 047, 035, 034, 027, 023, 002, 001, 236, 257
Loewe	006, 064, 014, 048, 093, 094, 123, 131, 167, 414, 434
Logik	204, 001, 003, 029, 162, 195, 224, 292, 376, 464, 465, 466
Logix	134, 095

## Appendix

Luxor	098, 204, 061, 023, 033, 035, 047, 055, 056, 060, 083, 084, 122, 211
Manhattan	006, 134, 204, 164, 192, 237, 293
Marantz	102, 006, 071, 140, 277, 317
Marks and Spencer	420
Matsui	102, 006, 144, 030, 204, 087, 005, 080, 074, 153, 195, 097, 094, 369, 445, 077, 447, 065, 059, 056, 052, 044, 035, 033, 028, 011, 008, 004, 003, 002
Mitsubishi	102, 006, 204, 005, 019, 014, 015, 027, 093, 096, 191, 311
Mivar	034, 035, 047, 048, 094, 112
NEC	005, 002, 003, 025, 035, 040, 049, 066, 140, 239, 379
Nokia	098, 113, 111, 061, 023, 033, 049, 053, 055, 056, 066, 083, 084, 089, 122
Nordmende	006, 144, 103, 030, 020, 046, 054, 242, 280, 499
Onida	207, 226
Orion	102, 006, 144, 204, 467, 458, 457, 456, 448, 445, 443, 385, 218, 195, 131, 097, 094, 077, 071, 059, 050, 049, 003
Online	006, 036
Ormond	134, 204
Orsowe	094
Pacific	102, 144, 204, 208, 077, 256
Packard Bell	254, 293
Panasonic	006, 098, 061, 129, 038, 023, 063, 094, 187, 251, 294, 353, 359, 279, 306
Panavision	006, 070
Philco	006, 064, 014, 021, 072
Philips	102, 006, 061, 459, 435, 429, 395, 310, 302, 297, 247, 125, 110, 101, 073, 066, 054, 029, 014, 002
Phonola	102, 006, 014, 029, 034
Pioneer	006, 086, 061, 064, 020, 023, 024, 046, 073, 093, 136, 159, 233, 277, 286, 381
Pionier	086, 064, 327
Radiomarelli	006, 014, 094

Relisys	190, 192, 193, 194, 220, 221, 271, 310, 333, 338, 341, 355, 390
Saba	120, 098, 144, 103, 061, 014, 020, 023, 046, 052, 054, 090, 094, 335
Sagem	113, 080, 182, 253, 337
Samsung	102, 006, 043, 064, 108, 115, 231, 252, 276, 287, 332, 345, 350, 351, 372, 442, 474, 488, 490, 492, 228, 176, 175, 127, 095, 047, 035, 034, 033, 027, 023, 011, 009, 002
Sanyo	204, 064, 005, 019, 442, 370, 363, 358, 357, 356, 222, 200, 150, 140, 097, 053, 048, 035, 034, 033, 025, 023, 017, 011, 008, 003, 002, 240
Schaub Lorenz	098, 144, 086, 111, 061, 056, 066, 215, 256, 267
Schneider	102, 006, 144, 134, 204, 061, 208, 036, 451, 450, 293, 128, 097, 095, 065, 056, 054, 042, 035, 023, 010
SEG	006, 134, 204, 087, 043, 036, 005, 285, 211, 210, 119, 062, 056, 035, 034, 002
Sei-Sinudyne	006, 014, 032, 094, 097
Seleco	023, 032, 042, 055, 062, 065, 070, 075, 099
Sharp	005, 130, 216, 015, 029, 088, 094, 177, 274, 334, 365, 409, 166, 288
Siemens	006, 030, 028, 096, 101
SKY	006, 195, 271, 300, 307, 308, 340, 341, 342, 343, 344, 391, 400, 421
Sonoko	006, 043, 002, 035, 045
Sony	006, 301, 005, 446, 412, 393, 375, 360, 325, 255, 203, 185, 174, 058, 003
Strong	210, 211
Technika	422, 428, 465, 468, 480, 493
TechniSat	102, 131, 237
Technisson	144, 242, 361
Technosonic	102, 120, 091, 195, 256, 258, 436, 437, 451, 468
Telefunken	006, 120, 144, 103, 086, 320, 202, 105, 090, 082, 055, 054, 052, 046, 020, 016, 012, 348
Tevion	102, 006, 144, 134, 204, 208, 468, 405, 403, 376, 355, 327, 298, 246, 242, 232, 230, 172, 128

Thomson	006, 120, 103, 020, 046, 052, 054, 056, 082, 335
Toshiba	030, 204, 005, 115, 129, 092, 447, 364, 313, 304, 242, 212, 211, 183, 100, 039, 022, 020, 010, 009, 004, 236, 257
Tosumi	451
Vestel	006, 134, 204, 035, 211, 333, 370
Videocon	092
Viewsonic	307, 308, 323, 335, 349, 391, 394, 259, 331
Wharfedale	102, 006, 095, 189, 256, 327, 370, 452, 453, 477, 502
Yamaha	169, 314, 330, 184
Zanussi	032, 035
TV/VCR Combo	
Aiwa	445
Amstrad	026
Beko	086
Daewoo	444, 119
GoldStar	006
Grundig	102, 006, 030, 101, 445
Irradio	147
LG	027
Philips	102, 006
Saba	120
Samsung	442
Sanyo	442
Sharp	015
Thomson	120
United	445
TV/VCR/DVD Combo	
Grundig	448
Orion	448

If the code for your equipment is not listed, visit the following website and see **MDB1.3** for a complete list of supported codes.  
(<http://www.humaxdigital.com/global/support/rcucodelist.asp>)



# Open Source Software Notice

HUMAX products use certain open source operating system software distributed pursuant to GNU GENERAL PUBLIC License version 2 and GNU LESSER GENERAL LICENSE version 2.1 each as defined and published by the Free Software Foundation, Inc.

The following GPL and LGPL software source codes used in this product can be provided and this offer is valid for up to three years from the date of the original download of the software for the purchase of the product containing such software. Please contact us at [gnu@humaxdigital.com](mailto:gnu@humaxdigital.com).

## GNU Software

linux  
busybox  
r256progs  
r2570  
libncurses  
libm32  
libxfs2fs  
compiler  
intlutils  
parted  
xfsprogs  
dosfstools  
samba  
proftpd

## LGPL Software

libxfs  
ldlib  
libc  
libncurses  
libxfs2fs

## FreeType License (FTL) Software

FreeType is a software library to carry prominent notices stating that you must cause it to be prominently displayed in any product or package in which it is used, and to appear in all source code distributions of the software. It is licensed under the terms of the FreeType Project License (www.freetype.org). All rights reserved.

## OpenSSL License Software

OpenSSL is a software library to carry prominent notices stating that you must cause it to be prominently displayed in any product or package in which it is used, and to appear in all source code distributions of the software. It is licensed under the terms of the OpenSSL Project license (www.openssl.org). This product includes software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson. (tjh@cryptsoft.com). This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org).

Use, modification and redistribution of the Open Source Software is governed by the terms and conditions of the applicable Open Source License. The GNU General Public License (GPL v2) is shown below.

## The GNU General Public License (GPL) Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Boston, MA 02110-1301. USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software, and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply this to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to restrict you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must also give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights by two means: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients

to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations. Finally, any licensee of the program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or be released at all.

The precise terms and conditions for copying, distribution and modification follow.

## TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The Program, below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law; that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you". Activities other than copying, distribution and modification are not covered by this license; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy notice that you were informed by the disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, forming a work based on the Program, and you may distribute such copies or modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.  
b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that you provide no warranty for the modified version. You must also cause the modified version to be licensed under these conditions, and telling the user how to view a copy of this License. (Exception: if the program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably and independently licensed to others under separate terms that comply with the terms of this License, those sections may be included in the modified work provided that, in addition to the license for the whole, you provide for the separate licensing of those sections. These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably and independently licensed to others under separate terms that comply with the terms of this License, those sections may be included in the modified work provided that, in addition to the license for the whole, you provide for the separate licensing of those sections. These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably and independently licensed to others under separate terms that comply with the terms of this License, those sections may be included in the modified work provided that, in addition to the license for the whole, you provide for the separate licensing of those sections.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or  
b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost for doing so, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code form in the first place.) Subsequent to the receipt of the source code, you must make the offer to provide the source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated

interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distribution need not include any files that are normally distributed either source or binary form with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. If distribution of executable or object code is made by means of a copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source code together with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipient's exercise of the rights granted hereunder. You are not responsible for enforcing compliance by third parties to this License.

7. If you alter the program so that it no longer carries the name of the licensor, or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that control the distribution of the program. If you do not wish to be bound by these conditions of this License, if you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if you cannot do so because the patent law forbids distribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program. If the conditions are imposed on you by unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property rights claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the free software range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is to exercise this power. For instance, if you do not wish to be bound by these conditions of this License, you may not distribute the Program at all.

8. The distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographic distribution restriction excluding those countries where the Program is not permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

If you wish to incorporate parts of the Program into other programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, you must request permission from the author. For software which is not copyrighted, you may still request permission. For software which is not copyrighted, you may still request permission. For software which is not copyrighted, you may still request permission.

### NO WARRANTY

11. CAUSE THE PROGRAM IS LICENSED FREE OF CHARGE; THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE

QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY

REPAIRING, REPLACING OR CORRECTING ACTIONS. IN NO EVENT SHALL THE PROGRAM BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSING OF DATA STORED IN THE PROGRAM) OR FOR ANY FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS. EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software, which everyone can redistribute and change under these terms. To do so, attach the following notices to the program. It is safest to attach them to the start of the source code file, to most effectively convey the exclusion of warranty, and each file should have at least the "copyright" line and a pointer to where the full license is found.

The line to give the program's name and a brief idea of what it does. Copyright (C) yyyy, name of author This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version. This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details. You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. You may also wish to include a short electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode. Gnomovision version 69, Copyright (C) yyyy, name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; this is free software, and you are welcome to redistribute it under certain conditions; type, show 'w' and 'show 'c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than "show 'w' and 'show 'c'; they could even be mouse-clicks or menu items—whatever suits your program. You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names.

Yo, name of company, hereby disclaims all copyright interest in the program "Gnomovision" (which passes as copyright) written by James Hacker. signature of T. Coon, 1 April 1989 T. Coon, President of Foo Corp.

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subprogram/library, you may not use it more useful to permit the distribution of the program as a subprogram/library. This is what you want to do, use the GNU Library General Public License instead of this License.

### GNU Lesser General Public License (LGPL)

21 February 1999 Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. [This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number "2.1".]

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages—typically libraries—of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case. On the explanation of why we suggest this license for free software, see the section titled "Why the Lesser General Public License?" in the GNU GPL. We are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software and use pieces of it in new free programs, and that you are informed that you can do these things. To protect your rights, we need to make restrictions that forbid distributors to restrict you these rights to convey them to others. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it. For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the

rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must respect the other conditions listed below.

You may distribute the library and the programs you have written with it in two different ways:

- (1) you copyright the library, and (2) you offer this license, which gives you legal permission to copy, distribute and/or modify the library. To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original, as the distributor is prohibited from stating that what they have is the original.

There are two main reasons why the copyright and distribution permissions are given in this way:

  - (1) To protect your freedom, you must make sure that you or your close collaborator retain the copyright to the distribution which you put on the market. It must not be a matter of other people's freedom.
  - (2) To protect the freedom of those who receive the program, you must disclaim all warranties about it. They must know exactly what they are getting. They must be able to approach a lawyer if they are not satisfied with the results. Getting warranties for each copy is not a good idea. It would distract the recipients from the important legal issues, and it would probably be more of a burden on you.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

2. You may modify your copy or copies of the Library or any portion of it

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

3. You may opt to comply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices. Once this change is made in a given copy, it is irrelevant that that copy, or the ordinary GNU General Public License, is the basis of subsequent derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange. If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License. However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of a linked work.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked with the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law. If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. Executables containing this object code and/or the library will also have unrestricted distribution.

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays

2. The user hereby grants the Library the right to use the corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be made available to the user) and to make copies of the work (which must be linked with the Library, with the complete machine-readable source code that the user has used to make the work, and with the machine-readable source code of the Library) and to distribute the work, provided that the user does not distribute or make available to the user a modified version of the Library that is not executable containing the modified Library. (It is understood that the user may make a copy of the Library and make changes to it, but the user who changes the contents of definitions files in the Library will not necessarily be distributing the modified Library.)

3. The user hereby grants the Library the right to use the modified version of the Library as a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already installed on the user's computer system, and (2) uses the modified version only on the executable; and (2) will operate properly with a modified version of the library. If the user installs one, as long as the modified version is interface-compatible with the version of the Library already installed, it is acceptable. Accompany the user with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself

it may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

3. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations,

then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the license may conflict with the License. To avoid such conflicts, the license must make it clear that it does not apply to the Library or to any distribution of the Library. If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims. In the absence of such notice, your patent or other property right claims against the contributors of the software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide

ange of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is relieved to be a consequence of the rest of this license.

2. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this license incorporates the limitation as if written in the body of this license.

3. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

This version is given a distinguishing version number. If the Library specifies version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

4. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with those, write to the copyright holder, requesting permission. Their permission is not needed if you write to the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting

3. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR REDISTRIBUTES THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

### How to Apply These Terms to Your New Libraries

to apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. One line to give the library's name and an idea of what it does. > Copyright (C) year name of author This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version. This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY.

NO WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail. You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter

odydyne, Inc., hereby disclaims all copyright interest in the library "Frob" (a library for tweaking knobs) written by James Random Hacker.  
Signature of Ty Coon, 1 April 1990  
Ty Coon, President of Vicor

# Warranty Certificate

## IMPORTANT:

Keep this Certificate together with the Original invoice or receipt in a safe place and show them to the retailer or place of purchase whenever a warranty repair is necessary.

• **Model No.:** \_\_\_\_\_

• **Serial No.:** \_\_\_\_\_

• **Date of Purchase:** \_\_\_\_\_

• **Dealer's Signature:** \_\_\_\_\_

• **Customer's Signature:** \_\_\_\_\_

**HUMAX thanks you for your recent HUMAX product purchase.**

For your benefit, we recommend that you record your serial number, found on the product, and other purchase information on this card and keep it with your personal records, along with proof of purchase. This information will allow us to better serve your needs.

## ■ HUMAX CONSUMER WARRANTY

HUMAX warrants this product to be free of defects in materials and workmanship, subject to the conditions set forth overleaf.

## ■ CONDITIONS

1. The HUMAX Warranty is valid for a period of one year from the date of first purchase.
2. In the event that this product fails to function properly during the warranty period, the retailer or distributor will make this product capable of operating for the purpose of which it was designed, without charging for labour and parts.
3. This warranty will be honoured only if the Warranty Certificate has been duly completed by the purchaser and is presented to the retailer with the original invoice or receipt.
4. This warranty does not cover shipping or transportation charges from you to us.
5. The obligations of HUMAX are limited to the repair of defect parts. Costs and risks of transport to the retailer as well as removal and installation of the product, and any other costs directly or indirectly related to its repair, are not covered by the warranty.
6. All warranty repairs performed by non-authorized repair shops will not be reimbursed and if such repairs damage this product such damage will not be covered by this warranty.
7. This warranty is not applicable in cases other than defects in materials or workmanship and, in particular, does not cover:
  - a. periodic check-ups, adjustments, maintenance or conversions as well as replacement of parts due to normal wear and tear;
  - b. damage caused by accidents, negligence, modifications, use of non-HUMAX parts, improper use, installation or package;
  - c. damage caused by lightning, water, fire, acts of war, public disturbances, incorrect mains voltages, incorrect ventilation or any other cause beyond the control of the HUMAX.
  - d. products where the label bearing the serial number has been removed, defaced or is illegible.
8. This warranty is offered to any person who has legally obtained possession of this product within the warranty period.
9. HUMAX's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall HUMAX be liable for special, incidental, consequential or indirect damages.

.....✂

UK

Tel:	0344 318 8800
Opening Hours:	Mon - Fri 09:00 – 17:30 (excluding Bank Holidays)
E-mail:	uksupport@humax-digital.co.uk
Website:	www.humaxdigital.co.uk
Language:	English

# Need some extra help?

## Customer support

For help with installing or setting up your new Freeview Play Recorder, feel free to call us on **0344 318 8800** (Mon-Fri 9-5pm).

Alternatively visit **[uk.humaxdigital.com/support](http://uk.humaxdigital.com/support)** where you can find FAQs, software updates, user manuals, etc.

MANUAL/FVP5000T/100GB



20000-00639