

SONY

Television

Getting Started [1]

- Recommended Topics [2]
 - Using the remote control microphone [3]
 - Displaying the picture in a small screen [4]
 - Installing apps from the Google Play Store [5]
 - Adjusting the picture quality [6]
 - Adjusting the sound quality [7]
 - Performing acoustic auto calibration [8]
- Using the Help Guide [9]
- Remote control [10]
 - Using the remote control [11]
 - Functions of the remote control buttons [12]
 - Upper buttons on the remote control [13]
 - Middle buttons on the remote control [14]
 - Lower buttons on the remote control [15]
- Connecting terminal [16]
- Using voice recognition features [17]
 - Using the remote control microphone [18]
 - Using the built-in MIC (only TVs with a built-in MIC) [19]
- Keeping the TV updated [20]
- Introducing Android TV™ [21]
 - Displaying the picture in a small screen [22]
 - Installing apps from the Google Play Store [23]
 - Moving apps to a USB memory device [24]
 - Viewing Internet media [25]
 - Enjoying safe apps and video streaming services (Security & restrictions) [26]
- Basic Operations [27]
 - Home menu [28]
 - Using the TV menu [29]
 - Using the Quick Settings [30]
 - Selecting inputs [31]
 - Changing the picture and sound quality to your preferences [32]
 - Adjusting the picture quality [33]

- [“Picture” advanced settings](#) [34]
- [Adjusting the sound quality](#) [35]
- [“Sound” advanced settings](#) [36]
- [Performing acoustic auto calibration](#) [37]
- [How the LED lights up](#) [38]
- [Accessibility features](#) [39]
- [Specifications](#) [40]
- [Support Site](#) [41]
- [Trademark information](#) [42]

Watching TV [43]

- [Watching TV programmes](#) [44]
 - [Using the programme guide](#) [45]
 - [Configuring channel settings](#) [46]
 - [Receiving digital broadcasts](#) [47]
 - [Receiving satellite broadcasts](#) [48]
 - [Sorting or editing the channels](#) [49]
 - [Using interactive broadcast TV services](#) [50]
 - [Understanding the information banner icons](#) [51]
- [Useful features when watching TV](#) [52]

Recording TV Programmes [53]

- [Recording to a USB HDD device](#) [54]
 - [Registering a USB HDD device](#) [55]
 - [One-touch recording](#) [56]
 - [Timer recording](#) [57]
 - [Information about using a USB HDD device for recording](#) [58]
- [Watching/deleting recorded content](#) [59]
- [Understanding the symbols displayed in the recorded title list](#) [60]

Using the TV with Other Devices [61]

- [USB devices](#) [62]
 - [Playing content stored on a USB device](#) [63]
 - [Information about USB devices used for storing photos and music](#) [64]
 - [Supported files and formats](#) [65]
 - [Photos](#) [66]
 - [Music](#) [67]
 - [Videos](#) [68]
 - [Audio sampling rates \(for videos\)](#) [69]
 - [External subtitles](#) [70]

- [Blu-ray and DVD players](#) [71]
 - [Connecting a Blu-ray or DVD player](#) [72]
 - [Watching Blu-ray and DVD discs](#) [73]
- [TV box](#) [74]
 - [Connecting a TV box](#) [75]
 - [How to control the TV box using the TV remote control](#) [76]
- [Displaying the iPhone/smartphone or iPad/tablet app screen on the TV](#) [77]
- [Computers, cameras, and camcorders](#) [78]
 - [Connecting a computer and viewing stored content](#) [79]
 - [Connecting a camera or camcorder and viewing stored content](#) [80]
 - [Computer video signal specifications](#) [81]
- [Audio system \(such as an AV receiver or sound bar\)](#) [82]
 - [Outputting audio from an audio system](#) [83]
 - [Connecting an audio system](#) [84]
 - [Adjusting an audio system](#) [85]
 - [Using the TV as a centre speaker \(only models with TV centre speaker mode\)](#) [86]
 - [Pass-through audio formats supported with eARC](#) [87]
- [Bluetooth devices](#) [88]
 - [Connecting a Bluetooth device](#) [89]
 - [Adjusting the AV sync setting](#) [90]
 - [Supported Bluetooth profiles](#) [91]
- [BRAVIA Sync-compatible devices](#) [92]
 - [BRAVIA Sync overview](#) [93]
 - [Using features available for BRAVIA Sync-compatible devices](#) [94]
 - [Adjusting BRAVIA Sync settings](#) [95]
- [Viewing pictures in 4K from compatible devices](#) [96]
 - [Viewing pictures in 4K resolution](#) [97]
 - [Settings for viewing pictures in 4K resolution with higher quality](#) [98]
- [BRAVIA Connectivity Guide](#) [99]

[Connecting to a Network](#) [100]

- [Connecting to a network using a LAN cable](#) [101]
- [Connecting to a network using a wireless connection](#) [102]
 - [Using Wi-Fi to connect the TV to the Internet/Network](#) [103]
 - [Using Wi-Fi Direct to connect to the TV \(no wireless router required\)](#) [104]
- [Home network features](#) [105]
 - [Adjusting home network settings](#) [106]

- [Playing content from a computer](#) [107]
- [Playing content from a media server](#) [108]

[Settings](#) [109]

- [Watching TV](#) [110]
- [Display & Sound](#) [111]
- [Network & Internet](#) [112]
- [Accounts & Sign-In](#) [113]
- [Apps](#) [114]
- [Device Preferences](#) [115]
- [Remotes & Accessories](#) [116]
- [Timers](#) [117]

[Troubleshooting](#) [118]

- [Start here](#) [119]
 - [Self diagnostics](#) [120]
 - [Software updates](#) [121]
 - [If a full reset \(restart\) of the TV is required](#) [122]
 - [Frequently Asked Questions for Troubleshooting](#) [123]
- [Picture \(quality\)/screen](#) [124]
 - [No colour/Dark picture/Colour is not correct/Picture is too bright.](#) [125]
 - [Distorted picture./The screen flickers.](#) [126]
 - [The screen suddenly changes to a video you do not recognise while watching TV.](#) [127]
 - [There are banners/tickers at the top or bottom of the screen.](#) [128]
 - [High resolution HDR pictures are not displayed.](#) [129]
 - [A message about an app asking for permission to access a TV function is displayed.](#) [130]
 - [OLED panel \(only models equipped with an OLED panel\).](#) [131]
 - [The screen becomes darker after a certain period of time. \(only models equipped with an OLED panel\).](#) [132]
 - [The message \[Panel refresh did not finish\] is displayed. \(only models equipped with an OLED panel\).](#) [133]
 - [You are concerned about an image retention. \(only models equipped with an OLED panel\).](#) [134]
 - [A white line appears on the screen. \(only models equipped with an OLED panel\).](#) [135]
- [Keyboard](#) [136]
- [Broadcast reception](#) [137]

- Check these things first to troubleshoot your TV reception. [138]
- Block noise or an error message appears and you cannot watch broadcasts. [139]
- Ghosting or double images appear. [140]
- Only snow noise or a black picture appears on the screen. [141]
- There is picture or sound noise when viewing an analogue TV channel. [142]
- Some channels are blank. [143]
- Poor reception or poor picture quality with digital broadcasts. [144]
- You cannot view digital channels. [145]
- Not all analogue channels are tuned. [146]
- You cannot view satellite channels. [147]
- Some digital channels are missing. [148]
- You want to tune your satellite dish. [149]
- Sound [150]
 - No sound but good picture. [151]
 - Audio noise. [152]
 - No audio or low audio with a home theatre system. [153]
 - Distorted sound. [154]
 - You want to output sound from both the headphones/Bluetooth audio device/audio system and the TV speakers. [155]
 - You are concerned about a delay between the picture and sound. [156]
 - No TV sounds such as operation sound or audio response. [157]
 - You cannot establish an eARC connection. [158]
 - You cannot use voice search with the built-in MIC (only TVs with a built-in MIC). [159]
 - You can hear a slight noise from the TV speakers (only models with TV centre speaker mode). [160]
- Network (Internet/home)/apps [161]
 - The TV cannot connect to the Internet/Network. [162]
 - The picture and/or sound quality from streaming apps is poor. [163]
 - Your TV cannot connect to the server. [164]
 - You can connect to the Internet, but not to certain apps and services. [165]
- Remote control/accessories [166]
 - The remote control does not operate. [167]
 - You want to disable the remote control backlight. (only remote controls that feature backlight). [168]
- Power [169]
 - The TV cannot be turned off using the remote control. [170]
 - The TV turns off automatically. [171]

- [The TV turns on automatically.](#) [172]
- [After turning on the TV, it turns off immediately. \(only models equipped with an OLED panel\).](#) [173]
- [The TV does not turn on.](#) [174]
- [Connected devices](#) [175]
 - [No picture from a connected device.](#) [176]
 - [You cannot select a connected device in the Home Menu.](#) [177]
 - [Certain programmes on digital sources display a loss of detail.](#) [178]
 - [Photo images or folders take time to display.](#) [179]
 - [You cannot find a connected BRAVIA Sync HDMI device.](#) [180]
 - [You cannot turn off the TV box using the TV's remote control.](#) [181]
 - [An external device \(such as a TV box\) cannot be controlled using the TV's remote control. \(TV box control compatible models only\).](#) [182]
 - [Some media files in the USB device or server are not displayed.](#) [183]
 - [Operation cuts out, or a device does not work.](#) [184]
 - [Some paid content cannot be played.](#) [185]
- [USB HDD recording](#) [186]
 - [You cannot use a USB HDD device.](#) [187]
 - [The USB HDD device cannot be registered.](#) [188]
 - [Recording cannot be performed./Recording failed.](#) [189]
 - [Recorded content disappeared.](#) [190]
 - [You want to delete recorded content, but the delete icon is not displayed.](#) [191]
 - [The USB HDD device operates even though it is not turned on.](#) [192]
- [LED](#) [193]
 - [You want to disable the LED so that it does not light up or blink.](#) [194]
 - [The Operational response LED blinks in red.](#) [195]

[Index](#) [196]

[1]

Getting Started

[Recommended Topics](#)

[Using the Help Guide](#)

[Remote control](#)

[Connecting terminal](#)

[Using voice recognition features](#)

[Keeping the TV updated](#)

[Introducing Android TV™](#)

[Basic Operations](#)

[Accessibility features](#)

[Specifications](#)

[Support Site](#)

[Trademark information](#)

[2] Getting Started

Recommended Topics

[Using the remote control microphone](#) This feature is available for TVs in which the included remote control has a MIC button.

[Displaying the picture in a small screen](#)

[Installing apps from the Google Play Store](#)

[Adjusting the picture quality.](#)

[Adjusting the sound quality.](#)

[Performing acoustic auto calibration](#)


[3] Recommended Topics | Recommended Topics

Using the remote control microphone

Remote controls that support voice search have a MIC button, and a built-in microphone. By speaking into the microphone, you can search for various content.

1 Press the MIC button on your remote control.

The LED on the remote control will light up.

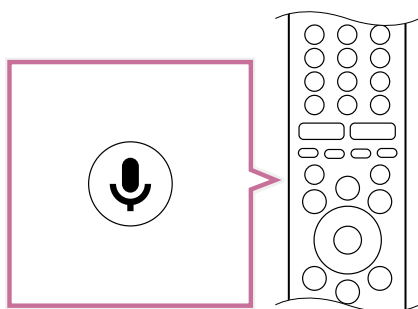



2 Speak into the microphone.

Speech examples may be displayed depending on your model.




Search results are displayed when you speak into the microphone.

Hint

- When  (microphone) on the Home Screen is selected, whether the remote control microphone or the built-in MIC is used depends on your region/country/language/situation.
- Depending on the search results, if you press  (Up) button on the remote control, more search results will be displayed.

Screenshot example when there are more search results

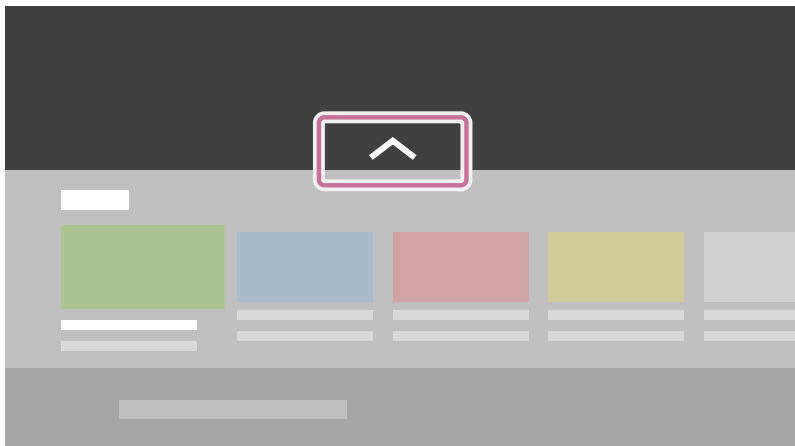

When you cannot search using your voice

Register the voice remote control that has the MIC button to the TV again by pressing the HOME button and selecting [Settings] — [Remotes & Accessories] — [Remote control] — [Connect via Bluetooth].

Note


- An Internet connection is required to use voice search.
- The type of remote control supplied with the TV, and the availability of a remote control with a built-in microphone varies depending on your model/region/country. An optional remote control is available in some models/regions/countries.

[4] Recommended Topics | Recommended Topics

Displaying the picture in a small screen

You can display the picture that you are watching (TV programmes or content from HDMI-connected devices) as a small screen in the corner.

The position of the small screen varies depending on your TV.

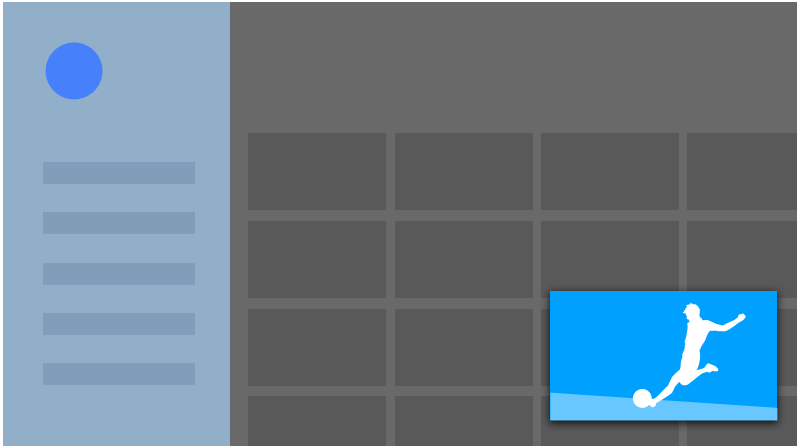

Displaying the picture as a small screen

- 1 When watching a TV programme, press the TV button, select [TV control] or [Remote control] in [TV menu], and then select [Picture-in-picture].

When watching content from external input, press the **i+** (Info/Text reveal) button and select **Picture-in-picture icon**.

The current picture is displayed as a small screen in the corner.


Note

- The small screen is displayed on top of the last app used. However, the app that is displayed may vary depending on certain conditions.
- Operations such as changing the channel is disabled while watching with a small screen.
- TV programme, external input such as an HDMI device, apps that play back movies, or some apps that play back pictures or music cannot be displayed at the same time.
- The position of the small screen is automatically adjusted. You cannot set it manually.

Closing the small screen or returning it to full screen

1 Press the HOME button to display the Home Menu.


A message for the small screen is displayed at the top of the screen.

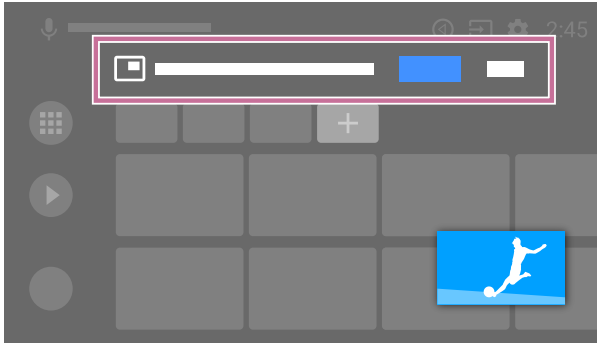

2 In the small screen display message, select [Open].

3 Use the buttons under the small screen to close the small screen or return to full screen.

The image below is a visual representation and may vary from the actual screen.

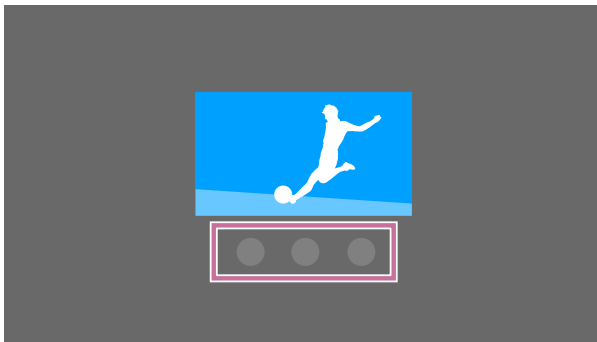

[5] Recommended Topics | Recommended Topics

Installing apps from the Google Play Store

You can install apps from the Google Play Store to the TV, just like you do with smartphones and tablets.

Note

- You can only install apps that are compatible with TVs. They may differ from apps for smartphones/tablets.
- An Internet connection and Google account are required to install apps from the Google Play Store.

Hint

- If you do not have a Google account or want to create a shared account, create a new account by accessing the following website.

<https://accounts.google.com/signup>

The website above may vary depending on your region/country. It is also subject to change without notice. For details, refer to the Google homepage.

- We recommend that you create a Google account on a computer or mobile device.

- 1 Press the HOME button, select  (Apps icon) from the Home menu, and select Google Play Store from the apps list.**

If the supplied remote control has an APPS button, you can press the APPS button to display the apps list.


- 2 Select an app to install.**

After downloading, the app is automatically installed and added. Its icon appears in the list of installed apps, allowing you to launch it.

About paid apps

There are free apps and paid apps in the Google Play Store. To purchase a paid app, a prepaid Google Play gift card code or credit card information is required. You can purchase a Google Play gift card from various retailers.

To delete an app

- 1 Press the HOME button, select  (Apps icon) from the Home menu, select Google Play Store from the apps list, and select My Apps.**

If the supplied remote control has an APPS button, you can press the APPS button to display the apps list.

- 2 Select an app to be deleted, and then uninstall the app.**

Related topics

- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)
- [Moving apps to a USB memory device](#)


[6] Recommended Topics | Recommended Topics

Adjusting the picture quality

You can configure various settings related to the TV display such as colour and brightness for picture quality, or screen size.

Note

- The actual display may vary or some settings may not be available depending on your model/country/region and the content you are watching.

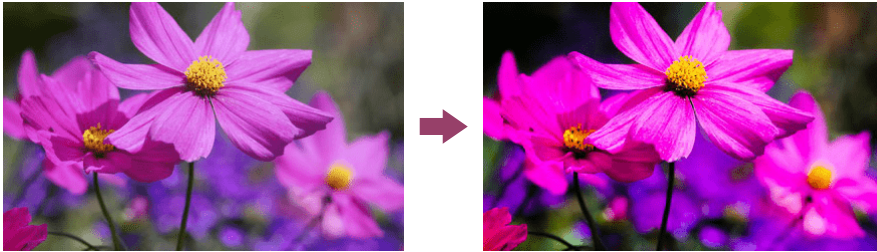

Press the HOME button, then select [Settings] — [Display & Sound] — the desired option.

You can change the following settings.

Picture

Adjust the picture settings such as Brightness, Colour, and Hue.

Basic

You can set the following.

Picture mode

Change the picture quality according to the content you are watching such as movies or sports.

For details, refer to [“Picture” advanced settings](#).

Reset picture settings for ***

Reset the picture settings for the current picture mode to the factory default.

Auto picture mode

Automatically selects the picture mode based on the content being viewed.

*** calibrated mode

Adjusts the picture to a quality close to that intended by the content creator when watching supported video streaming content and supported apps.

Light sensor

Optimises brightness according to ambient light.

Brightness

Adjust the backlight to display the brightest whites and deepest blacks.

For details, refer to [“Picture” advanced settings](#).

Colour

Adjust the colour saturation level and Hue.

For details, refer to [“Picture” advanced settings](#).

Clarity

Adjust the picture clarity and reduce roughness.

For details, refer to [“Picture” advanced settings](#).

Motion

You can set the following.

Motionflow

Refines moving images. Increases the number of image frames to display videos smoothly. If you select [Custom], you can adjust [Smoothness] and [Clearness].

Film mode

Optimises picture quality based on video content, such as movies and computer graphics.

Smoothly reproduces the motion of filmed images (images recorded at 24 frames per second) such as movies.

Video signal

You can set the following.

HDR mode

Picture that is suitable for a High Dynamic Range signal.

HDMI video range

Select the signal range for HDMI input.

Colour space

Change the colour reproduction range.

Adv. colour adjustment

You can set the following.

Adv. colour temperature: Basic

Finely adjust the colour temperature for each colour.

Adv. colour temperature: Multi point (**p)

Optimally preset at shipping. Use this setting for professional adjustment. When adjusting, we recommend using a colour analyser.

Per colour adjustment

Adjust Hue, Saturation, and Lightness for each colour.

Screen

Adjust the aspect ratio and viewable screen area.

Wide mode

Adjust the picture size.

4:3 default

Automatic sizing for 4:3 pictures.

Auto display area

Automatically adjusts the viewable screen area based on the signal.

Display area

Adjust the viewable screen area.

Screen position

Adjust the vertical and horizontal screen position.

Vertical size

Stretch the picture vertically.


[7] Recommended Topics | Recommended Topics

Adjusting the sound quality

You can configure various settings related to the TV's sound such as sound quality and sound mode.

Note

- The actual display may vary or some settings may not be available depending on your model/country/region, TV settings, and the connected device.

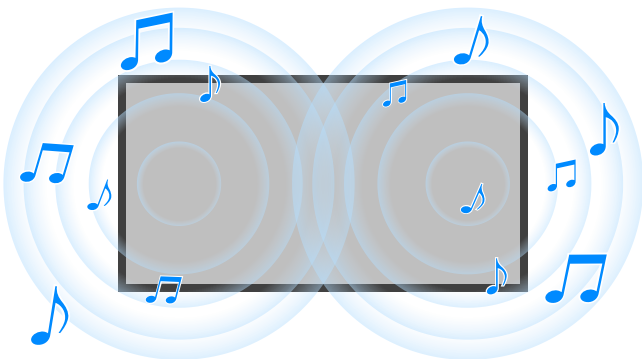

Press the HOME button, then select [Settings] — [Display & Sound] — the desired option.

You can change the following settings.

Sound

Adjust settings by input such as the TV or HDMI, and other common settings, to enjoy various sound effects.

You can configure settings such as those below.

Sound mode

Select modes such as [Cinema], [Music], or [Dolby Audio] based on your environment and preferences.

Sound customisation

Finely adjust the sound quality for each sound mode in models with Sound mode.

Volume level

Adjust the sound level of current input.

Advanced auto volume

Keeps the volume level constant for all programmes and inputs.

Balance

Adjust the speaker balance.

TV position

Output sound from the TV speakers according to the position of the TV.

Acoustic auto calibration

Adjust audio output based on your watching environment. For details, refer to [Performing acoustic auto calibration](#).

Reset

Return all sound settings to factory default settings.

Audio output

Adjust for headphones and audio system.

You can configure settings such as those below.

Speakers

Select TV or external speakers.

TV centre speaker mode

Use the TV speaker as the centre speaker of the home theatre system.

Audio system prioritisation

If enabled, this automatically switches the audio output to a BRAVIA Sync-compatible audio system when the TV is turned on.

Home theatre control

Turns your audio system on, and allows you to control it.

Sound mode sync

The sound field of the specified audio system will switch automatically when the TV's sound mode changes.

A/V sync

Adjust audio and video timing while using a Bluetooth A2DP audio device or a specific audio system connected with HDMI cable.

eARC mode

If [Auto] is selected, high quality audio is output when an eARC supported device is connected to an HDMI port labelled "ARC".

Digital audio out

Configure the output method when outputting digital audio. This setting is available only when [Speakers] is set to [Audio system].

Digital audio out volume

Applied for PCM only. The volume levels between PCM and compressed audio will differ.

Dolby Digital Plus output

Select output for Dolby Digital Plus for audio systems supporting Dolby Digital Plus and ARC. If you use ARC and optical audio out, select [Dolby Digital]. (Dolby Digital Plus will be muted over optical audio out.)


[8] Recommended Topics | Recommended Topics

Performing acoustic auto calibration

You can correct the audio to the best acoustics for your watching environment by using the remote control microphone to measure a test sound from the TV. (This setting may not be available depending on the model.)

Models that support acoustic auto calibration have the following setting.

[Settings] — [Display & Sound] — [Sound] — [Acoustic auto calibration]

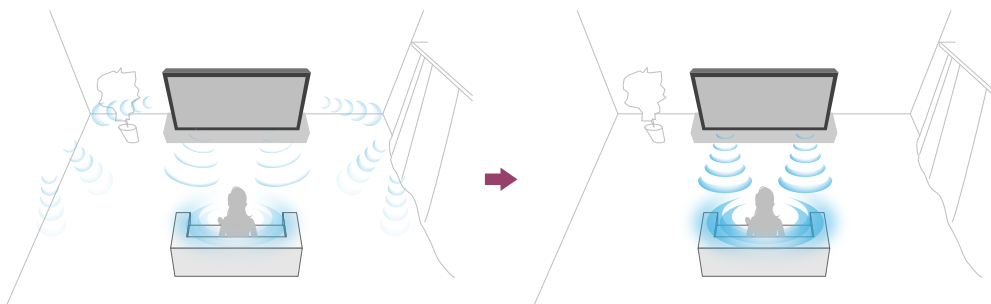

Note

- Calibration effects will vary depending on your watching environment.
- A loud test sound will be played from the TV during measurement.

- Do not block the microphone opening at the end of the remote control during measurement.
- Do not move the remote control during measurement. Doing so may result in incorrect measurement.
- Perform the calibration when your surroundings are quiet. Noise may result in incorrect measurement.
- Acoustic auto calibration cannot be performed if you are using a sound bar. Change to the following setting.


[Settings] — [Display & Sound] — [Audio output] — [Speakers] — [TV speakers]

1 Press the HOME button, then the following settings.

[Settings] — [Display & Sound] — [Sound] — [Acoustic auto calibration] — [Calibration setup]

2 Measure by following the on-screen instructions.

The acoustics will be corrected automatically based on the measurement results of your watching environment.

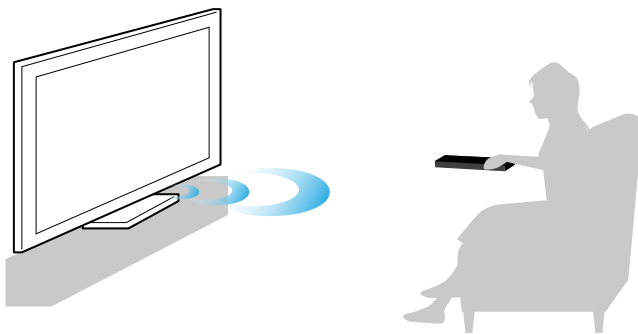

Hint

Acoustic auto calibration may fail in the following cases.

- If the remote control is moved during measurement
- If there are sounds other than the test sound (such as noise) during measurement

[9] Getting Started

Using the Help Guide

This Help Guide explains how to use this TV. You can also refer to the Setup Guide for descriptions about TV installation, and the Reference Guide for parts descriptions, specifications, and wall mounting of this TV.

Help Guide versions

There are two versions of the Help Guide: the built-in version and the online version. The online Help Guide includes the latest information.

The online Help Guide is automatically displayed when the TV is connected to the internet, otherwise the built-in Help Guide is displayed.

Note

- To use the latest features described in the Help Guide, you may need to update the TV's software. For details about software updates, see the [Software updates](#) page.
- The names of settings in the Help Guide may differ from those displayed on the TV depending on the TV's release date or your model/country/region.
- The images and illustrations used in the Help Guide may differ depending on your TV model.
- Design and specifications are subject to change without notice.
- The Help Guide contains descriptions common across all models/regions/countries. Some descriptions of features do not apply depending on your model/region/country.

Hint

- To see if your TV is equipped with one of the functions described in the Help Guide, refer to the Reference Guide or the Sony website.
- This Help Guide is written for all regions/countries. Some descriptions contained in this Help Guide do not apply to some regions and countries.

Related topics

- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)

[10] Getting Started

Remote control

[Using the remote control](#)

[Functions of the remote control buttons](#) This section explains the remote control buttons in three separate blocks.

[11] Remote control | Remote control


Using the remote control

You can operate many of the TV's features by using the ▲ (Up) / ▼ (Down) / ◀ (Left) / ▶ (Right) and -⏏- (Enter) buttons.


The shape and buttons of the remote control varies depending on your model/country/region.

The included remote control varies depending on your model. For descriptions of the remote control buttons, refer to the [Functions of the remote control buttons](#).

- 1 Use the ▲ (Up), ▼ (Down), ◀ (Left) and ▶ (Right) buttons to “focus” on the desired item.

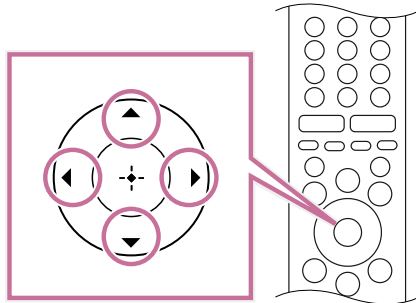

- 2 Press the centre of the -⏏- (Enter) button to select the item currently in focus.

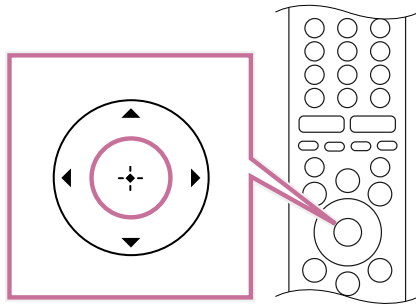

To return to the previous screen

Press the BACK button.

Hint

- If you move or operate the remote control in a dark room, the remote control will light up. (Backlight remote controls only)
- For other information, see the related topics below or “Frequently Asked Questions” on the Sony Support Site.

[Frequently Asked Questions for Troubleshooting](#)

Related topics

- [Functions of the remote control buttons](#)
- [Using the remote control microphone](#)
- [The remote control does not operate.](#)
- [Connecting to a Network](#)
- [You want to disable the remote control backlight. \(only remote controls that feature backlight\).](#)

[12] Remote control | Remote control

Functions of the remote control buttons

[Upper buttons on the remote control](#)

[Middle buttons on the remote control](#)

[Lower buttons on the remote control](#)

[13] Functions of the remote control buttons | Functions of the remote control buttons | Functions of the remote control buttons

Upper buttons on the remote control

The included remote control, as well as the arrangement of the buttons and the button names, vary depending on your model/country/region.

● (MIC)

Speak into here to use the microphone in the remote control. There is an LED above the microphone.

⏻ (Power)

Turn on or turn off the TV (standby mode).

Number Button

Use with the 0-9 buttons to select digital channels.

≡ (Text)

Display text information.

ℹ (Info/Text reveal)

Display information.



NETFLIX (Only on limited region/country/TV model)

Access the “NETFLIX” online service.

Google Play

Access the “Google Play” online service.

Related topics

- [Middle buttons on the remote control](#)
- [Lower buttons on the remote control](#)

[14] Functions of the remote control buttons | Functions of the remote control buttons | Functions of the remote control buttons

Middle buttons on the remote control

The included remote control, as well as the arrangement of the buttons and the button names, vary depending on your model/country/region.



Colour buttons

Execute corresponding function at that time.

GUIDE

Display the digital programme guide of TV or TV box. For details, refer to [Using the programme guide](#) page.

REC LIST

Display the Rec list of USB HDD, or DVR after setting [TV box setup].

APPS

Display a list of installed apps.

↶ (Input select)

Display and select the input source, etc. For details, refer to [Selecting inputs](#) page.

🎤 (Microphone)

Talk to Google Assistant or search for various content with your voice. Google Assistant is not available in certain languages and countries.

For details, refer to [Using the remote control microphone](#) page.

⚙️ (Quick Settings)

Display Quick Settings. For details, refer to [Using the Quick Settings](#) page.

▲ (Up) / ▼ (Down) / ◀ (Left) / ▶ (Right) / -⏏- (Enter) (Navigation D-Pad)

On screen menu navigation and selection.

BACK

Return to the previous screen.

HOME

Display the TV Home Menu. For details, refer to [Home menu](#) page.

TV

Switch to a TV channel or input and display the TV menu. For details, refer to [Using the TV menu](#) page.

Related topics

- [Upper buttons on the remote control](#)
- [Lower buttons on the remote control](#)

[15] Functions of the remote control buttons | Functions of the remote control buttons | Functions of the remote control buttons

Lower buttons on the remote control

The included remote control, as well as the arrangement of the buttons and the button names, vary depending on your model/country/region.



+/- (Volume)

Adjust the volume.


(Jump)

Jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.

(Mute)



Mute the sound. Press again to restore the sound.

Hint

- The accessibility shortcut service can be turned on or off by pressing and holding  (Mute).

CH +/- (Channel)

In TV mode: Select the channel.

In Text mode: Select the  (Next) or  (Previous) page.

AUDIO

Select multilingual source sound or dual sound for the programme currently being viewed (depending on programme source).

(Subtitle setting)

Turn subtitles on or off (when the feature is available).

HELP

Display the Help menu. Help Guide can be accessed from here.

◀◀ (Fast rewind) / ▶▶ (Play) / ▶▶ (Fast forward) / || (Pause)

Operate media contents on the TV and connected BRAVIA Sync-compatible device.

REC

Record the currently viewed programme on the USB HDD, or DVR after setting [TV box setup] (only on limited region/country/TV model).

EXIT

Return to the previous screen or exit from the menu. When an Interactive Application service is available, press to exit from the service.


Related topics




- [Upper buttons on the remote control](#)
- [Middle buttons on the remote control](#)




[16] Getting Started




Connecting terminal


The types and shapes of connectors available vary depending on your TV.
For the location of the connectors, refer to the Setup Guide (printed manual).

Terminal	Description
	<p>USB HDD REC</p> <p>Connects to the USB HDD device or Digital still camera/Camcorder/USB storage media.</p>

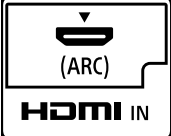Terminal	Description
	<p>AV IN</p> <p>Connects to VCR/Video game equipment/DVD player/Camcorder/External Box.*¹</p> <p>For a composite connection, use an Analogue Extension Cable (not supplied).</p> <p>*¹ For an external device which has only SCART AV OUT, use a SCART-RCA adaptor and Analogue Extension Cable.</p> <p>For more about the shape of the Analogue Extension Cable, refer to Connecting a Blu-ray or DVD player.</p>
	<p>🎧 (Headphone)</p> <p>Connects to the headphone jack to listen to sound from the TV. Supports 3-pole stereo mini jack only.</p> <p>Note</p> <ul style="list-style-type: none"> You cannot output sound from both the headphone and the TV speakers at the same time.
	<p>HDMI IN</p> <p>Connects to HDMI device. HDMI interface can transfer the digital video and audio on a single cable. To enjoy high quality 4K contents, connect a Premium High Speed HDMI Cable(s) and set the [HDMI signal format] to [Enhanced format].</p> <p>Note</p> <ul style="list-style-type: none"> Updating the software will enable the HDMI IN port to support 4K 120 Hz depending on your model. <p>For HDMI IN ports that support 4K 120 Hz, [Enhanced format (Dolby Vision)] is available for [HDMI signal format] in addition to [Standard format] and [Enhanced format].</p>

Terminal	Description
	<p>HDMI IN (ARC)</p> <p>To connect an audio system that supports eARC (Enhanced Audio Return Channel) or ARC (Audio Return Channel), connect to the HDMI port labelled “ARC” on the TV. It is a feature that sends audio to an audio system that supports eARC/ARC through an HDMI cable. If the audio system does not support eARC/ARC, you need to connect with DIGITAL AUDIO OUT (OPTICAL).</p> <p>Note</p> <ul style="list-style-type: none"> • When connecting with eARC, use an HDMI cable with Ethernet. • Updating the software may enable eARC support for the ARC port depending on your model. <p>To check if eARC is supported, check if [eARC mode] is in [Settings] — [Display & Sound] — [Audio output].</p>
	<p>DIGITAL AUDIO OUT (OPTICAL)</p> <p>Connects to an audio system with optical audio input.</p> <p>When connecting an audio system not compatible with ARC using an HDMI cable, you need to connect an optical audio cable to the DIGITAL AUDIO OUT (OPTICAL) to output digital sound.</p>
	<p>ㄗ (RF input)</p> <p>Connects to Cable/Antenna/External Box.</p> <p>Note</p> <ul style="list-style-type: none"> • When connecting the cable to the Cable/Antenna input, finger tighten only, over tightening the connection can damage the TV.

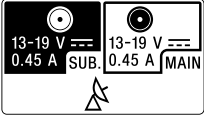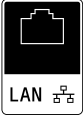Terminal	Description
	<p>(Satellite input)</p> <p>Connects to satellite input.</p> <p>Connection steps: SUB. → MAIN → Antenna.</p> <p>For SUB. jack, connect only when you are using twin tuner mode except for Single Cable Distribution EN50494 (depends on model).</p>
	<p>LAN</p> <p>Connect to a Router.</p> <p>Connect to the Internet using a LAN cable.</p>
	<p>CAM(Conditional Access Module)</p> <p>Provides access to pay TV services. For details, refer to the instruction manual supplied with your CAM.</p> <p>Note</p> <ul style="list-style-type: none"> • Do not insert the smart card directly into the TV CAM slot. It must be fitted into the Conditional Access Module provided by your authorised dealer. • CAM is not supported in some countries/areas. Check with your authorised dealer. • A CAM message may appear when you switch to a digital programme after using the Internet video. • Do not remove the dummy card or cover (availability depends on TV model) from the TV CAM slot other than to insert a smart card fitted in CAM.

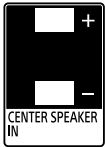Terminal	Description
	<p>CENTER SPEAKER IN</p> <p>To use your TV speakers as the centre speaker, connect the output of your AV receiver to the CENTER SPEAKER IN on your TV.</p> <p>Note</p> <ul style="list-style-type: none">• Before connecting cables, disconnect the AC power cord (mains lead) of both the TV and AV receiver.• Make sure the [Speakers] is set to [Audio system].• To prevent hiss when not connecting the CENTER SPEAKER IN to an AV receiver, disable [TV centre speaker mode].



[17] Getting Started

Using voice recognition features



Using the remote control microphone This feature is available for TVs in which the included remote control has a MIC button.

Using the built-in MIC (only TVs with a built-in MIC)



[18] Using voice recognition features | Using voice recognition features


Using the remote control microphone



Remote controls that support voice search have a MIC button, and a built-in microphone. By speaking into the microphone, you can search for various content.

- 1 Press the MIC button on your remote control.

The LED on the remote control will light up.

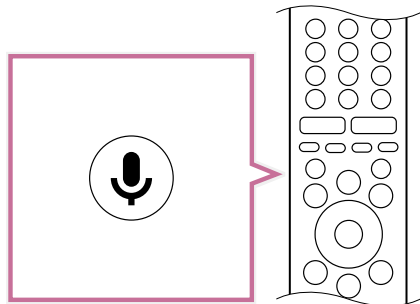



2 Speak into the microphone.

Speech examples may be displayed depending on your model.




Search results are displayed when you speak into the microphone.

Hint

- When  (microphone) on the Home Screen is selected, whether the remote control microphone or the built-in MIC is used depends on your region/country/language/situation.
- Depending on the search results, if you press  (Up) button on the remote control, more search results will be displayed.

Screenshot example when there are more search results

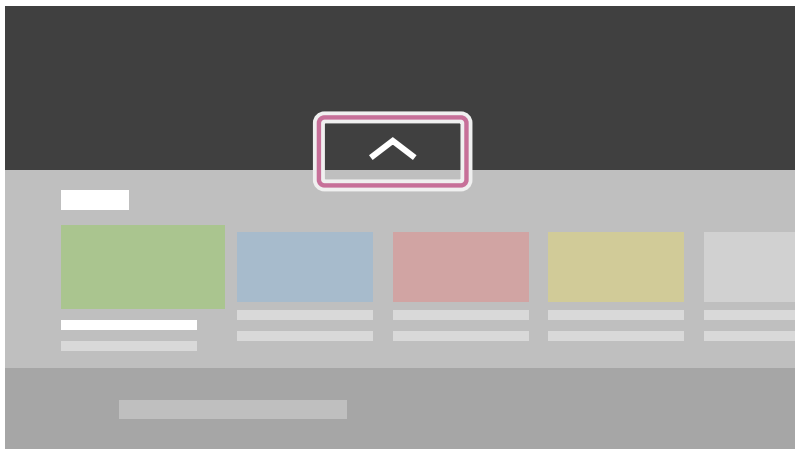

When you cannot search using your voice

Register the voice remote control that has the MIC button to the TV again by pressing the HOME button and selecting [Settings] — [Remotes & Accessories] — [Remote control] — [Connect via Bluetooth].

Note

- An Internet connection is required to use voice search.
- The type of remote control supplied with the TV, and the availability of a remote control with a built-in microphone varies depending on your model/region/country. An optional remote control is available in some models/regions/countries.

[19] Using voice recognition features | Using voice recognition features

Using the built-in MIC (only TVs with a built-in MIC)

The built-in MIC may not be available depending on your region/country/language.

For details about languages that support the built-in MIC feature, refer to the following Sony support website.


<https://www.sony.net/tv-hf/aep/>

Hint

- The URL is subject to change without notice.


You can do the following hands-free when you face the TV and say “Ok Google”.

- Voice search
- TV operation

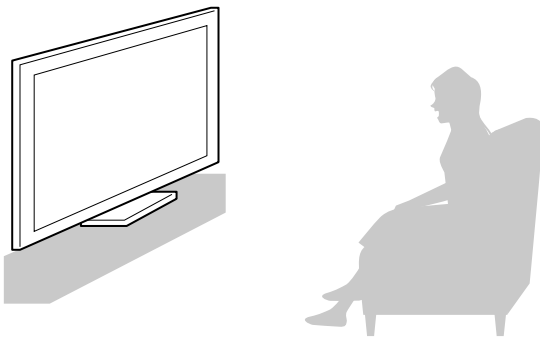

Face the TV and say, “Ok Google”.

When the voice function LED blinks white, start speaking to the TV.

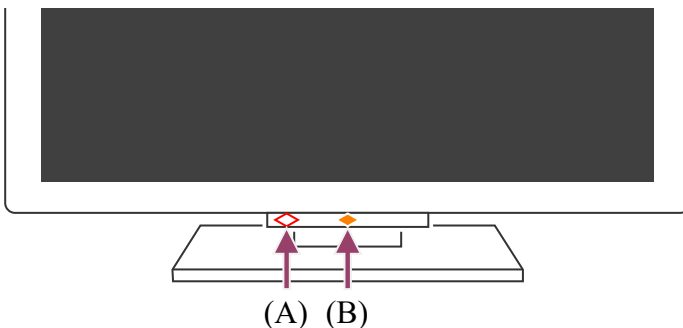

(A) The voice function LED is located at the left side of the TV bottom.

(B) The LED located at the bottom centre of the TV lights up amber when ["Ok Google" detection] is enabled.

To use the built-in MIC, enable the following setting.

- 1 Press the HOME button, select [Settings] — [Device Preferences] — [Google Assistant] — ["Ok Google" detection].

Note

- An Internet connection is required to use the built-in MIC.

Hint

- When the built-in MIC is enabled, the built-in MIC LED lights up in amber even when the TV is turned off (you can also set it so it does not light up).

Related topics

- [Connecting to a Network](#)
- [How the LED lights up](#)
- [You want to disable the LED so that it does not light up or blink.](#)

[20] Getting Started

Keeping the TV updated

The TV acquires data such as programme guides while it is in standby/networked standby mode. To keep your TV updated, we recommend that you turn off the TV normally by using the power button on the remote control or TV.

[21] Getting Started

Introducing Android TV™

[Displaying the picture in a small screen](#)

[Installing apps from the Google Play Store](#)

[Moving apps to a USB memory device](#)

[Viewing Internet media](#)


[Enjoying safe apps and video streaming services \(Security & restrictions\)](#)

[22] Introducing Android TV™ | Introducing Android TV™

Displaying the picture in a small screen

You can display the picture that you are watching (TV programmes or content from HDMI-connected devices) as a small screen in the corner.

The position of the small screen varies depending on your TV.

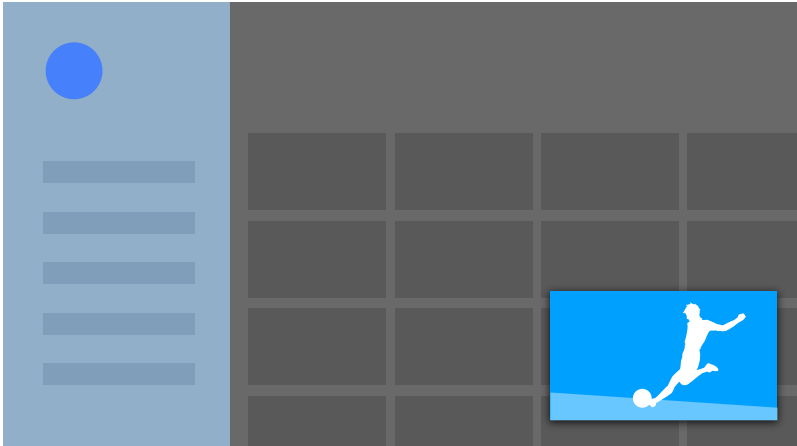

Displaying the picture as a small screen

- 1 When watching a TV programme, press the TV button, select [TV control] or [Remote control] in [TV menu], and then select [Picture-in-picture].

When watching content from external input, press the **i+** (Info/Text reveal) button and select **▣** (Picture-in-picture icon).

The current picture is displayed as a small screen in the corner.


Note

- The small screen is displayed on top of the last app used. However, the app that is displayed may vary depending on certain conditions.
- Operations such as changing the channel is disabled while watching with a small screen.
- TV programme, external input such as an HDMI device, apps that play back movies, or some apps that play back pictures or music cannot be displayed at the same time.
- The position of the small screen is automatically adjusted. You cannot set it manually.

Closing the small screen or returning it to full screen

- 1 Press the HOME button to display the Home Menu.


A message for the small screen is displayed at the top of the screen.

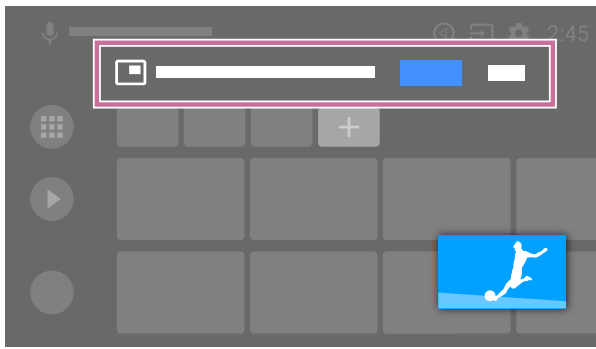

2 In the small screen display message, select [Open].

3 Use the buttons under the small screen to close the small screen or return to full screen.

The image below is a visual representation and may vary from the actual screen.

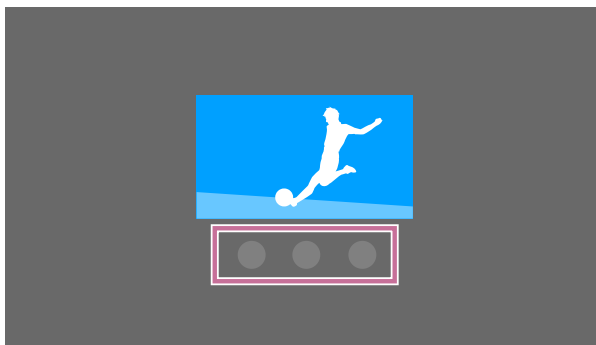

[23] Introducing Android TV™ | Introducing Android TV™

Installing apps from the Google Play Store

You can install apps from the Google Play Store to the TV, just like you do with smartphones and tablets.

Note

- You can only install apps that are compatible with TVs. They may differ from apps for smartphones/tablets.
- An Internet connection and Google account are required to install apps from the Google Play Store.

Hint

- If you do not have a Google account or want to create a shared account, create a new account by accessing the following website.
<https://accounts.google.com/signup>

The website above may vary depending on your region/country. It is also subject to change without notice. For details, refer to the Google homepage.

- We recommend that you create a Google account on a computer or mobile device.

- 1 Press the HOME button, select  (Apps icon) from the Home menu, and select Google Play Store from the apps list.**

If the supplied remote control has an APPS button, you can press the APPS button to display the apps list.


- 2 Select an app to install.**

After downloading, the app is automatically installed and added. Its icon appears in the list of installed apps, allowing you to launch it.

About paid apps

There are free apps and paid apps in the Google Play Store. To purchase a paid app, a prepaid Google Play gift card code or credit card information is required. You can purchase a Google Play gift card from various retailers.

To delete an app

- 1 Press the HOME button, select  (Apps icon) from the Home menu, select Google Play Store from the apps list, and select My Apps.**

If the supplied remote control has an APPS button, you can press the APPS button to display the apps list.

- 2 Select an app to be deleted, and then uninstall the app.**

Related topics

- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)
- [Moving apps to a USB memory device](#)

[24] Introducing Android TV™ | Introducing Android TV™

Moving apps to a USB memory device

You can move downloaded apps to a USB memory device to increase the space available in the TV.

Note

- When you format a USB memory device, all data saved in the USB memory device will be deleted. Back up your important data before formatting.
- Performing this procedure formats the USB memory device for exclusive use with the TV. Therefore, you may be unable to use the USB memory device with a computer, etc.
- Some apps cannot be moved to a USB memory device.

- 1 Connect a USB memory device to the TV.**
- 2 Press the HOME button, select [Settings] — [Device Preferences] — [Storage] — the desired USB memory device.**
- 3 Format it as an internal storage device.**
- 4 When formatting is finished, press the HOME button, then select [Settings] — [Apps].**
- 5 Select the app that you want to move to the USB memory device.**
- 6 Select the USB memory device from the used storage. The app is moved to the USB memory device.**

Hint

- Repeat steps 4 to 6 to move additional apps to the USB memory device.

To remove a USB memory device

- 1 Press the HOME button, select [Settings] — [Device Preferences] — [Storage] — the desired USB memory device, and then select the option to remove it.**

Note

- The USB memory device is used only for saving apps. To use the USB memory device for other purposes, you must format it again.
- If you delete an app in the USB memory device using a computer, you will be unable to launch it from the TV.

- If you remove a USB memory device from the TV, you will be unable to use the apps that were moved to the USB memory device.
- You cannot specify a USB memory device as the installation location of an app. First install the app on the TV as normal, and then move it to the USB memory device.

[25] Introducing Android TV™ | Introducing Android TV™

Viewing Internet media

You can use video streaming services such as YouTube™ and Netflix to watch Internet content. The available services vary depending on your country and region. You can launch these services by selecting their tiles in the Home Menu.

Note

- An Internet connection is required to watch Internet content.

Related topics

- [Enjoying safe apps and video streaming services \(Security & restrictions\)](#)
- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)
- [Home menu](#)

[26] Introducing Android TV™ | Introducing Android TV™

Enjoying safe apps and video streaming services (Security & restrictions)

You can ensure safe use of the TV by setting installation restrictions on apps that are downloaded from unknown sources, or age restrictions on programmes and videos. (Some features do not apply depending on your model/region/country.)

You can set the following [Parental controls] features so that children can safely use the TV.

- Restrict TV channels and use of external inputs
- Restrict use of apps
- Restrict TV usage time

- 1 Press the HOME button, then select [Settings] — [Device Preferences] — then options such as [Security & restrictions] or [Parental controls] — [Channels & External inputs], [Apps] or [Screen time].

Note

- If you change the [Security & restrictions] settings, your device and personal data are more vulnerable to attack by unknown apps from sources other than Play Store. You agree that you are solely responsible for any damage to your device or loss of data that may result from using these apps.
- If you forget the restricted profile PIN, you must reset the TV to its original factory settings. Make sure you do not forget the PIN.

Hint

- Other separate restrictions may be available depending on the app. For details, refer to the app's Help.

[27] Getting Started

Basic Operations

[Home menu](#)

[Using the TV menu](#)

[Using the Quick Settings](#)

[Selecting inputs](#)


[Changing the picture and sound quality to your preferences](#)

[How the LED lights up](#)

[28] Basic Operations | Basic Operations

Home menu

The screen displayed when you press the HOME button on the remote control is called the Home Menu. From the Home Menu, you can search for content and select recommended content, apps, and settings.

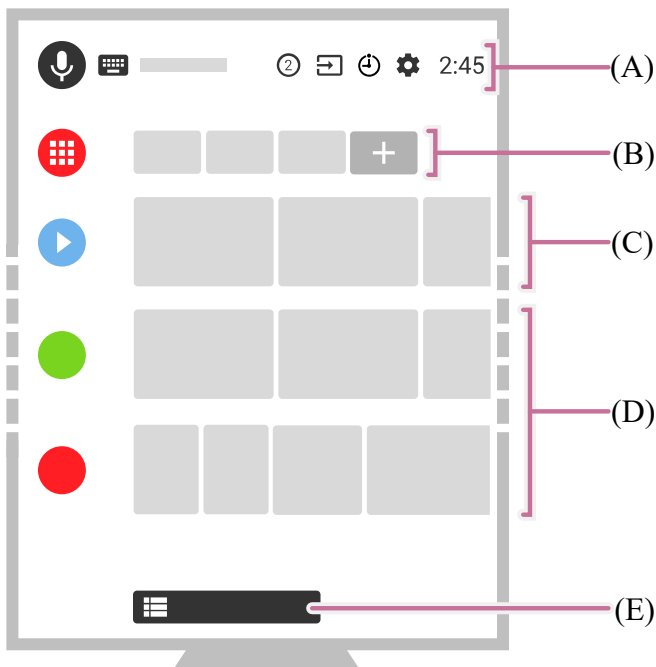

Search, Notifications, Inputs, Timers, and Settings (A)

(Microphone) / (On-screen keyboard): Use the microphone on the remote control, the built-in MIC or the on-screen keyboard displayed on the TV to input keywords and search for various content. When (microphone) on the Home Screen is selected, whether the remote control microphone or the built-in MIC is used depends on your region/country/language/situation.

For voice search, refer to the [Using the remote control microphone](#) page.

(Notifications): Displayed when there is a notification such as a connection issue. This also includes notifications from BRAVIA such as software updates and low battery levels in the remote control. The number indicates the number of notifications.

(Inputs): Switches the input device connected to the TV.

(Timers): Configure the [On timer] and [Sleep timer].

For details, refer to the [Timers](#) page.

(Settings): Configure various TV-related settings.

For details, refer to the [Settings](#) page.

Apps (B)

Display your favourite apps.

- If you select [Apps], a list of installed apps is displayed.
- Select [Add app to favourites] to add an app to favourites.
- If you select an added app and press and hold the (Enter) button on the remote control, you can change the sort order or remove a favourite.
- If you select a TV app, you can watch TV broadcasts or input.

Play Next (C)

Displays what you can watch next depending on the content.








Note

- If there is no applicable content, [Play Next] may not be displayed.

Channels (D)

The rows under Apps (B) are called “Channels”. Here, you can watch recommended content from video streaming services.

Hint

- The recent history of channels watched is displayed in [TV].
- You can add content to Play Next by selecting content on any channel and pressing and holding the  (Enter) button on the remote control.
- You can move some of the channels under “Channels (D)” in the Home Menu. Use the  (Up) /  (Down) buttons to move the focus to the round icon of the row you want to move, and press  (Left) button (or  (Right) button depending on the TV's display language) to be able to move the row up or down by pressing the  (Up) /  (Down) buttons.

Customise channels (E)

[Customise channels] is used to display or hide the selected channels.

Hint

- For other information, see “Frequently Asked Questions” on the Sony Support Site.
[Frequently Asked Questions for Troubleshooting](#)

[29] Basic Operations | Basic Operations

Using the TV menu

Press the TV button while watching a TV broadcast to display the [TV menu]. A channel list is displayed in [TV menu] and you can easily select programmes on other channels while watching TV.

You can add favourite channels when using the built-in tuner.



Note

- The displayed screen and menus may vary depending on what you are watching and your model/country/region.

1 Press the TV button while watching a TV broadcast.

The TV menu is displayed at the bottom of the screen.

2 Move the focus left or right and select the programme you want to watch.

If you move the focus down and select [TV control] or [Remote control], options available while you are watching will be displayed. You can also select options such as [Digital] or [Cable] to change the displayed Channel list. (The displayed options vary depending on what you are watching.)

Hint

- If you select [Add to Favourites] from the [TV control], you can add the channel you are watching to [Favourite channels].
- If you have the YouView app, you can press the TV button on the remote control to launch YouView. (U.K. models only)
- You can also use the TV button on the remote control to display the channel list of the TV box by following the procedure below.

Press the HOME button, then select [Settings] — [Watching TV] — [TV button shortcut].

Then, select the input that is connected to the TV box.


- If you configured a TV box in the initial setup, you can press the TV button to display the channel list of the TV box.

You can also operate the TV box with the control panel displayed when you select [Remote control].

TV box control compatible models have [TV box setup] in [Settings] — [Watching TV] — [External inputs].


[30] Basic Operations | Basic Operations


Using the Quick Settings

If you press the  (Quick Settings) button on the remote control, you can quickly access features such as [Picture mode], [Sleep timer], and [Picture Off] on the current screen, and settings such as [Speakers] depending on the connected devices. You can also display [Settings] from [Quick Settings].



Note

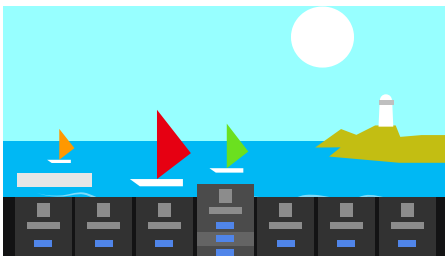- The menus displayed in the TV settings vary depending on your model/region/country.







- 1 Press the  (Quick Settings) button on the remote control.
- 2 Move the focus to change a setting or select it.

To change the settings that are displayed

- 1 Press the  (Quick Settings) button on the remote control.
- 2 Move the focus left or right, and select  (Edit).
- 3 Select the desired setting.
- 4 Select [Close].

Hint

- To change the order or hide a displayed item, press and hold the  (Enter) button on the remote control with that item highlighted, and [Move] and [Hide] will be displayed. If you select [Move], use  (Left) /  (Right) on the remote control to move the item to the desired position, and then press the  (Enter) button on the remote control.






- With [BRAVIA notifications] in Quick Settings, you can check if there are notifications such as software updates and low battery levels in the remote control.

[31] Basic Operations | Basic Operations

Selecting inputs

To use devices (such as a Blu-ray/DVD player or USB flash drive) connected to the TV, or to watch TV after such use, you will need to switch the input.





If you edit the items and add apps, you will be able to switch to those apps in the input selection screen.

- 1 Press the  (Input select) button repeatedly to select the connected device. Alternatively, press the  (Input select) button, use the  (Left) /  (Right) buttons to select a connected device, and then press the  (Enter) button.





Note

- If there are no devices connected to an HDMI input, the HDMI input may not be displayed in the [Input menu].

To edit the input items

- 1 Press the  (Input select) button.
- 2 Press the  (Right) button (or  (Left) button depending on the TV's display language) and select  (Edit).
- 3 Select the app/input/device you want to show or hide.
- 4 Select [Close].

Hint

- To change the order or hide a displayed item, press and hold the  (Enter) button on the remote control with that item highlighted, and [Move] and [Hide] will be displayed. If you select [Move], use  (Left) /  (Right) on the remote control to move the item to the desired position, and then press the  (Enter) button on the remote control.

- You can switch to TV broadcasting by simply pressing the TV button on the remote control.

Switching from the Home Menu

- 1 Press the HOME button, then select the input source from [Inputs].

[32] Basic Operations | Basic Operations

Changing the picture and sound quality to your preferences

[Adjusting the picture quality](#)

[“Picture” advanced settings](#)

[Adjusting the sound quality](#)

[“Sound” advanced settings](#)

[Performing acoustic auto calibration](#)


[33] Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences

Adjusting the picture quality

You can configure various settings related to the TV display such as colour and brightness for picture quality, or screen size.

Note

- The actual display may vary or some settings may not be available depending on your model/country/region and the content you are watching.

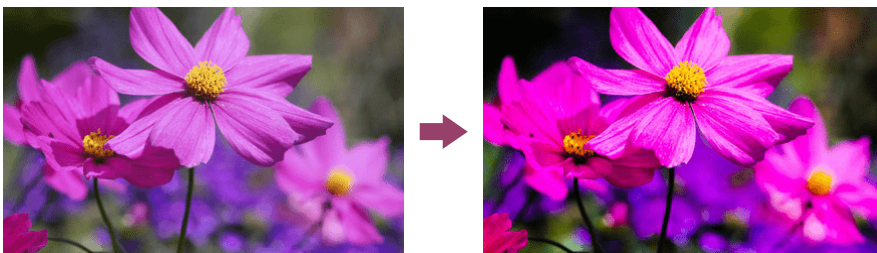

Press the HOME button, then select [Settings] — [Display & Sound] — the desired option.

You can change the following settings.

Picture

Adjust the picture settings such as Brightness, Colour, and Hue.

Basic

You can set the following.

Picture mode

Change the picture quality according to the content you are watching such as movies or sports.

For details, refer to [“Picture” advanced settings](#).

Reset picture settings for ***

Reset the picture settings for the current picture mode to the factory default.

Auto picture mode

Automatically selects the picture mode based on the content being viewed.

*** calibrated mode

Adjusts the picture to a quality close to that intended by the content creator when watching supported video streaming content and supported apps.

Light sensor

Optimises brightness according to ambient light.

Brightness

Adjust the backlight to display the brightest whites and deepest blacks.

For details, refer to [“Picture” advanced settings](#).

Colour

Adjust the colour saturation level and Hue.

For details, refer to [“Picture” advanced settings](#).

Clarity

Adjust the picture clarity and reduce roughness.

For details, refer to [“Picture” advanced settings](#).

Motion

You can set the following.

Motionflow

Refines moving images. Increases the number of image frames to display videos smoothly. If you select [Custom], you can adjust [Smoothness] and [Clearness].

Film mode

Optimises picture quality based on video content, such as movies and computer graphics.
Smoothly reproduces the motion of filmed images (images recorded at 24 frames per second) such as movies.

Video signal

You can set the following.

HDR mode

Picture that is suitable for a High Dynamic Range signal.

HDMI video range

Select the signal range for HDMI input.

Colour space

Change the colour reproduction range.

Adv. colour adjustment

You can set the following.

Adv. colour temperature: Basic

Finely adjust the colour temperature for each colour.

Adv. colour temperature: Multi point (**p)

Optimally preset at shipping. Use this setting for professional adjustment. When adjusting, we recommend using a colour analyser.

Per colour adjustment

Adjust Hue, Saturation, and Lightness for each colour.

Screen

Adjust the aspect ratio and viewable screen area.

Wide mode

Adjust the picture size.

4:3 default

Automatic sizing for 4:3 pictures.

Auto display area

Automatically adjusts the viewable screen area based on the signal.

Display area

Adjust the viewable screen area.

Screen position

Adjust the vertical and horizontal screen position.

Vertical size

Stretch the picture vertically.

[34] Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences

“Picture” advanced settings

This page introduces various settings for the features you can configure in [Picture] settings.

Note

- The actual display may vary or some settings may not be available depending on your model/country/region and the content you are watching.

[Picture mode] settings

Setting	Description
Vivid	Picture with enhanced edges and contrast.
Standard	Suitable picture for basic home use.
Cinema	Suitable picture for watching movies.
Game	Suitable picture for playing video games.
Graphics	Suitable picture for watching tables and characters.
Photo	Suitable picture for photo viewing.
Custom	Customise picture settings.
Dolby Vision Bright	Suitable picture for viewing in a bright room at home.
Dolby Vision Dark	Suitable picture for viewing in a dark room at home.

[Brightness] settings

Setting	Description
---------	-------------

Setting	Description
Brightness	Adjust the luminance level of the screen.
Contrast	Adjust the picture white level.
Gamma	Adjust the light and dark balance. Brighten or darken the brightness between white and black.
Black level	Adjust the picture black level.
Black adjust	Enhance the black in images for stronger contrast.
Adv. contrast enhancer	Automatically adjusts the contrast based on picture brightness.
Auto local dimming	Optimises contrast by adjusting brightness in individual sections of the screen.
X-tended Dynamic Range	Adjust peak luminance for the brightest whites and blackest blacks.
Peak luminance	Adjust peak luminance for the brightest whites.

[Colour] settings

Setting	Description
Colour	Adjust the colour saturation level.
Hue	Adjust the green and red tones.
Colour temperature	Adjust the colour temperature.
Live Colour	Improve the vividness of colours.

[Clarity] settings

Setting	Description
Sharpness	Adjust the picture detail.

Setting	Description
Reality Creation	Adjusts fineness and noise for realistic picture. If you select Manual, you can adjust Resolution.
Random noise reduction	Reduce repetitive random noise.
Digital noise reduction	Reduce video compression noise.
Smooth gradation	Create smooth gradations to reduce false contours on flat surfaces.

Hint

- For other information, see the related topics below or “Frequently Asked Questions” on the Sony Support Site.

[Frequently Asked Questions for Troubleshooting](#)

Related topics

- [Adjusting the picture quality](#)


[35] Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences

Adjusting the sound quality

You can configure various settings related to the TV's sound such as sound quality and sound mode.

Note

- The actual display may vary or some settings may not be available depending on your model/country/region, TV settings, and the connected device.

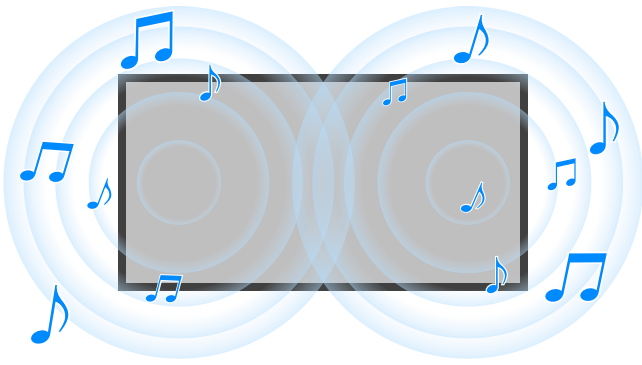

Press the HOME button, then select [Settings] — [Display & Sound] — the desired option.

You can change the following settings.

Sound

Adjust settings by input such as the TV or HDMI, and other common settings, to enjoy various sound effects.

You can configure settings such as those below.

Sound mode

Select modes such as [Cinema], [Music], or [Dolby Audio] based on your environment and preferences.

Sound customisation

Finely adjust the sound quality for each sound mode in models with Sound mode.

Volume level

Adjust the sound level of current input.

Advanced auto volume

Keeps the volume level constant for all programmes and inputs.

Balance

Adjust the speaker balance.

TV position

Output sound from the TV speakers according to the position of the TV.

Acoustic auto calibration

Adjust audio output based on your watching environment. For details, refer to [Performing acoustic auto calibration](#).

Reset

Return all sound settings to factory default settings.

Audio output

Adjust for headphones and audio system.

You can configure settings such as those below.

Speakers

Select TV or external speakers.

TV centre speaker mode

Use the TV speaker as the centre speaker of the home theatre system.

Audio system prioritisation

If enabled, this automatically switches the audio output to a BRAVIA Sync-compatible audio system when the TV is turned on.

Home theatre control

Turns your audio system on, and allows you to control it.

Sound mode sync

The sound field of the specified audio system will switch automatically when the TV's sound mode changes.

A/V sync

Adjust audio and video timing while using a Bluetooth A2DP audio device or a specific audio system connected with HDMI cable.

eARC mode

If [Auto] is selected, high quality audio is output when an eARC supported device is connected to an HDMI port labelled "ARC".

Digital audio out

Configure the output method when outputting digital audio. This setting is available only when [Speakers] is set to [Audio system].

Digital audio out volume

Applied for PCM only. The volume levels between PCM and compressed audio will differ.

Dolby Digital Plus output

Select output for Dolby Digital Plus for audio systems supporting Dolby Digital Plus and ARC. If you use ARC and optical audio out, select [Dolby Digital]. (Dolby Digital Plus will be muted over optical audio out.)

[36] Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences

"Sound" advanced settings

This page introduces various settings for the features you can configure in [Sound].

Note

- The actual display may vary or some settings may not be available depending on your model/country/region, TV settings, and the connected device.

[Sound mode] settings

Setting	Description
Standard	Optimise sound quality for general content.
Dialogue	Suitable for spoken dialogue.
Cinema	Optimise surround sound for movies.
Music	Lets you experience dynamic and clear sound, like that of a concert.
Sports	Simulates the larger space of a stadium or other venue.
Dolby Audio	Output sound processed by Dolby acoustic technology.

[Sound customisation]

Setting	Description
Surround	Virtually reproduce realistic surround sound.
Surround effect	Adjust the surround sound effect.
Equaliser	Adjust sound based on different frequencies.
Voice Zoom	Emphasise voice.
Dialogue enhancer	Emphasise voice when [Sound mode] is set to [Dolby Audio].

[Volume level]

Setting	Description
Volume offset	Adjust the sound level of the current input relative to other inputs.
Dolby Dynamic Range	Compensates for audio level difference between channels (only for Dolby Digital audio).

Setting	Description
MPEG audio level	Adjusts MPEG audio sound level.
HE-AAC Dynamic Range	Compensates for audio level difference between channels (only for HE-AAC audio).
HE-AAC audio level	Adjusts HE-AAC audio sound level.

Related topics

- [Adjusting the sound quality.](#)


[37] Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences | Changing the picture and sound quality to your preferences

Performing acoustic auto calibration

You can correct the audio to the best acoustics for your watching environment by using the remote control microphone to measure a test sound from the TV. (This setting may not be available depending on the model.)

Models that support acoustic auto calibration have the following setting.

[Settings] — [Display & Sound] — [Sound] — [Acoustic auto calibration]

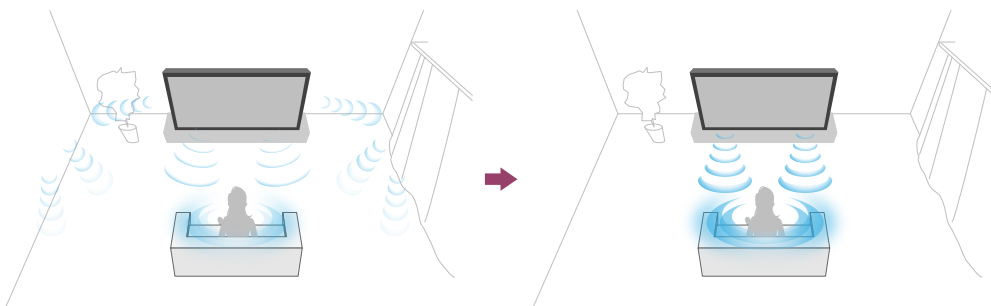

Note

- Calibration effects will vary depending on your watching environment.
- A loud test sound will be played from the TV during measurement.
- Do not block the microphone opening at the end of the remote control during measurement.

- Do not move the remote control during measurement. Doing so may result in incorrect measurement.
- Perform the calibration when your surroundings are quiet. Noise may result in incorrect measurement.
- Acoustic auto calibration cannot be performed if you are using a sound bar. Change to the following setting.


[Settings] — [Display & Sound] — [Audio output] — [Speakers] — [TV speakers]

1 Press the HOME button, then the following settings.

[Settings] — [Display & Sound] — [Sound] — [Acoustic auto calibration] — [Calibration setup]

2 Measure by following the on-screen instructions.

The acoustics will be corrected automatically based on the measurement results of your watching environment.

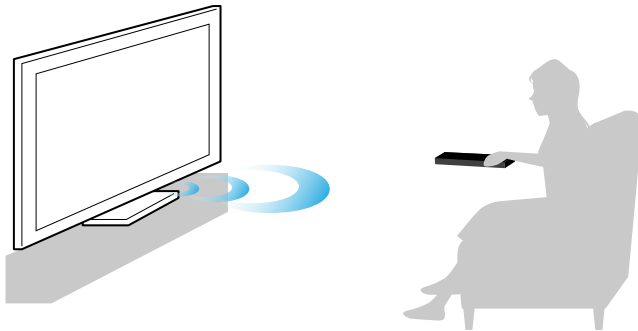

Hint


Acoustic auto calibration may fail in the following cases.

- If the remote control is moved during measurement
- If there are sounds other than the test sound (such as noise) during measurement

[38] Basic Operations | Basic Operations

How the LED lights up

You can check the status of the TV by looking at how the LED lights up.

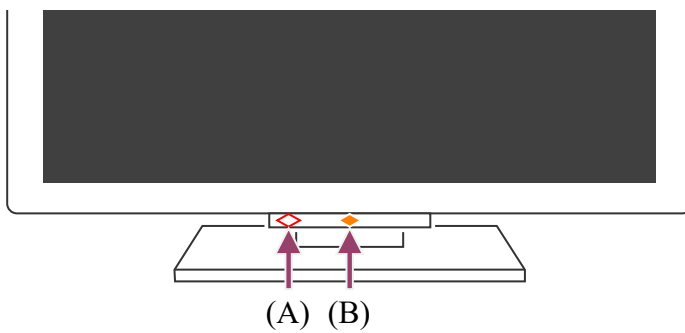

(A) Voice function LED (On the left side at the bottom of the TV. Only TVs with a built-in MIC.*)

(B) Operational response LED (In the centre at the bottom of the TV.)

Voice function LED

Turns “on” or “blinks” when “Ok Google” is detected and the TV is communicating with the server. The lighting pattern of this LED depends on the server communication status.

Operational response LED

Turns “on” or “blinks” in white when the TV is turning on, when receiving signals from the remote control, or when updating the software using a USB storage device.

When [“Ok Google” detection] is enabled, it turns “on” in amber. (only TVs with a built-in MIC*)

* The built-in MIC may not be available depending on your region/country/language.

Hint

- If [“Ok Google” detection] is enabled and then disabled, the voice function LED will “light up” in amber when the TV is turned on. (It will “turn off” when in standby/networked standby mode.)

Related topics

- [Using the built-in MIC \(only TVs with a built-in MIC\)](#)
- [You want to disable the LED so that it does not light up or blink.](#)
- [Home network features](#)
- [Software updates](#)
- [Timers](#)
- [Recording to a USB HDD device](#)


Accessibility features

This TV has accessibility features in [Accessibility] such as a text-to-speech function for on-screen text, zooming to make text easier to read, and subtitles.

Note

- Some features do not apply depending on your model/region/country.

Press the HOME button, then select [Settings] — [Device Preferences] — [Accessibility] to configure the user assistive features.

[Accessibility] has a shortcut function so you can turn it on or off by pressing and holding the  (Mute) button on the remote control for 3 seconds.

Hint

- To change the shortcut function, select [Accessibility shortcut] in [Accessibility], enable [Enable accessibility shortcut], and change the function in [Shortcut service].
- To use text-to-speech with the Help Guide, view the Help Guide in the Sony support website using a computer or smartphone.

<http://www.sony.eu/support/>

[40] Getting Started

Specifications

You can find the specification information on the Sony support website:

Please visit the product page of your TV and refer to Specifications. For more about the support website, see the [Support Site](#) page.



Note

- A Specifications page may not be available depending on your model. In such cases, please refer to the Reference Guide.

Related topics

- [Computer video signal specifications](#)

[41] Getting Started

Support Site

For the latest information and Online Help Guide, please visit the Sony support website:

<http://www.sony.eu/support/>

[42] Getting Started

Trademark information



- Vewd® Core. Copyright 1995-2020 Vewd Software AS. All rights reserved.



- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Wi-Fi®, Wi-Fi Alliance® and Wi-Fi Direct® are registered trademarks of Wi-Fi Alliance.
- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance.
- “BRAVIA”, BRAVIA and BRAVIA Sync are trademarks or registered marks of Sony Corporation.

- All other trademarks are the property of their respective owners.

[43]

Watching TV

[Watching TV programmes](#)

[Useful features when watching TV](#)

[44] Watching TV

Watching TV programmes

[Using the programme guide](#)

[Configuring channel settings](#)

[Using interactive broadcast TV services](#)

[Understanding the information banner icons](#)

[45] Watching TV programmes | Watching TV programmes

Using the programme guide

You can quickly find your preferred programmes.

- 1 Press the GUIDE button to display the digital programme guide.**
- 2 Select a programme to watch.**
The details of the programme are displayed.
- 3 Select [View] to watch the programme.**

Hint

- (TV box control compatible models only) If you perform the [TV box control setup] setting in [TV box setup] under [External inputs], you can display the programme guide of the TV box.
- If you have the YouView app, you can press the GUIDE button on the remote control while watching YouView to display the YouView Guide. (U.K. models only)

Related topics

- [How to control the TV box using the TV remote control](#)
- [An external device \(such as a TV box\) cannot be controlled using the TV's remote control. \(TV box control compatible models only\).](#)

[46] Watching TV programmes | Watching TV programmes

Configuring channel settings

[Receiving digital broadcasts](#)

[Receiving satellite broadcasts](#)

[Sorting or editing the channels](#)

[47] Configuring channel settings | Configuring channel settings | Configuring channel settings

Receiving digital broadcasts

- 1 Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Auto tuning].
- 2 Follow the on-screen instructions to tune in all available digital channels and store them in the TV.

To change the tuning range

Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Advanced settings] — [Tuning range] — [Normal] or [Extended].

[Normal]

Searches for available channels within your region/country.

[Extended]

Searches for available channels regardless of region/country.

Hint

- You can retune the TV by selecting [Auto tuning] and following the on-screen instructions after moving to a new residence, changing service providers, or to search for newly launched channels.

Related topics

- [Some digital channels are missing.](#)

[48] Configuring channel settings | Configuring channel settings | Configuring channel settings

Receiving satellite broadcasts

If you have a satellite dish installed, you can view satellite broadcasts by configuring the tuner settings.

- 1 Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Auto tuning] — [Set up] for subscribed satellite broadcasts.**
- 2 Follow the on-screen instructions.**

Related topics

- [You cannot view satellite channels.](#)

[49] Configuring channel settings | Configuring channel settings | Configuring channel settings

Sorting or editing the channels

You can sort the channel display according to your preferred order.

- 1 Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel list edit].**
If multiple items are displayed, select the one you want to edit.
- 2 Choose the channel you want to move to a new position.**
You can select to [Insert] or [Swap] the selected channel. To change it, select [Sorting type].
You can press the yellow button to select multiple channels.
- 3 Choose the new position where you want to move the selected channel.**

4 Select [Done] to apply the changes.

Note

- Available options may vary depending on your region/country.

[50] Watching TV programmes | Watching TV programmes

Using interactive broadcast TV services

To display text information

You can view text and text-based graphical information, including national news, weather information, and TV schedules. You can browse for information that interests you, and then select what information you want to display by entering a number.

- 1 Press the  (Text) button to display text information.


About the Digital Text Information Service

The digital text service offers rich content with smooth graphics and images. Various features are available, such as page links and easy-to-use navigation. The service is supported by numerous broadcasters. (The availability of this feature depends on your model/region/country.)

About the Digital Interactive Application Service

The interactive application service offers high-quality digital text and graphics, along with advanced options. The service is supported by broadcasters. (The availability of this feature depends on your model/region/country.)


Note

- The interactive service is only available if provided by the broadcaster.
- Available functions and screen content varies depending on the broadcaster.
- If subtitles are selected and you launch a digital text application via the  (Text) button, subtitles may, under certain circumstances, stop being displayed. When you exit the digital text application, subtitle display will resume automatically.

[51] Watching TV programmes | Watching TV programmes


Understanding the information banner icons

When changing the channel, an information banner appears briefly. The following icons may appear in the banner.

 :Data service (Broadcast application)


 :Radio service

 :Scrambled/Subscription service

 :Multilingual audio available

 :Subtitles available

 :Subtitles and/or audio available for the hearing impaired

 :Recommended minimum age for current programme(from 3 to 18 years)

 :Parental lock

AD :Audio available for the visually impaired

 :Spoken subtitle audio available

 :Multi-channel audio available

Related topics

- [Using interactive broadcast TV services](#)
- [Watching TV](#)

[52] Watching TV

Useful features when watching TV

Timers

Use a timer to turn the TV on and off.


For details, refer to [Timers](#).

Parental lock

Use [Parental controls] to set parental restrictions.

For details, refer to [Device Preferences](#).

(Subtitle setting)

Change the subtitle display by pressing the  (Subtitle setting) button when watching content with available subtitles.

Picture quality/sound quality adjustment

Adjust the picture quality and sound quality according to your preferences.

For details, refer to [Display & Sound](#).

Picture-in-picture

Operate the Home menu while the content you are watching is displayed in a corner of the screen.

For details, refer to [Displaying the picture in a small screen](#).

[53]

Recording TV Programmes

[Recording to a USB HDD device](#)

[Watching/deleting recorded content](#)

[Understanding the symbols displayed in the recorded title list](#)

[54] Recording TV Programmes

Recording to a USB HDD device

[Registering a USB HDD device](#)

[One-touch recording](#)

[Timer recording](#)


[Information about using a USB HDD device for recording](#)

[55] Recording to a USB HDD device | Recording to a USB HDD device

Registering a USB HDD device

Connect and register a USB HDD device to your TV to record digital broadcasts.

Connect the USB HDD device to the TV's USB port labelled "HDD REC" (if there is a blue USB port, that port supports HDD recording).

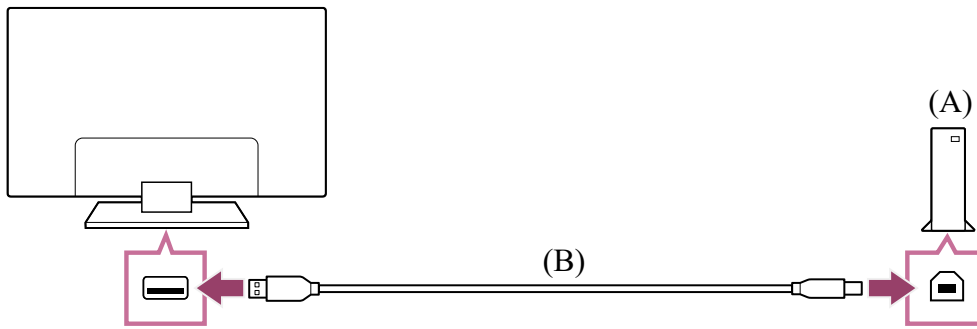

(A) USB HDD device

(B) USB cable (not supplied)

- 1 **Connect a USB HDD device to the USB port (blue) labelled “HDD REC” on your TV.**
- 2 **Turn the USB HDD device on.**
- 3 **Wait until the screen [USB drive connected] is displayed.**
- 4 **Select [Register for recording].**
- 5 **Follow the on-screen instructions to register the USB HDD device.**

Note

- If the message “Can’t detect a USB HDD for recording” is displayed during registration in step 4, follow the instructions in the message and check that the USB HDD device for recording is connected to the USB port (blue).
If the USB HDD device for recording is not recognised even after you have checked the connection, you must register the USB HDD device again because it is already registered as a device for purposes other than recording ([Device storage]). Refer to “The USB HDD device cannot be registered.” to register the USB HDD device again for recording.

Hint

- You can also register a USB HDD device to the TV by selecting [Settings] — [Watching TV] — [Recording device setup] — [HDD registration].

To deregister a USB HDD device

- 1 **Press the HOME button, then select [Settings] — [Watching TV] — [Recording device setup] — [HDD deregistration] — the device to deregister.**

Related topics

- [Information about using a USB HDD device for recording](#)

[56] Recording to a USB HDD device | Recording to a USB HDD device

One-touch recording

- 1 While viewing the programme to record, press the REC button.
- 2 In the displayed screen, set the end time for the recording.

To stop recording manually

- 1 Press the TV button, and select [TV control] or [Remote control].
- 2 Select [REC stop] on the displayed screen.

Related topics

- [Watching/deleting recorded content](#)

[57] Recording to a USB HDD device | Recording to a USB HDD device

Timer recording

- 1 Press the GUIDE button.
- 2 Select the desired programme in the programme guide, then select [Timer REC].
- 3 Select [Set Timer As an Event] or [Set timer].

To manually set the timer by specifying date, time and channel

- 1 Press the REC LIST button.
- 2 Select [Timer list/Timer settings] — [Set timer] — [Set timer manually].

3 Configure the timer setting.

4 Select [Set timer].

To check, modify or delete timer settings

Checking, modifying, or deleting timer settings is performed in [Recording timer list].

1 Press the REC LIST button.

2 Select [Timer list/Timer settings] — [Recording timer list], then change the settings.

Hint

- Up to 32 timer settings can be created.
- If the recording fails, the reason will be listed in [Recording error list]. Press the REC LIST button, then select [Recording error list] in [Timer list/Timer settings].
- In the programme guide, you can move the focus to the desired programme and press the REC button to set the timer recording for the programme.

Note

- Timer recording will not work when the AC power cord (mains lead) is unplugged.

Related topics

- [Watching/deleting recorded content](#)

[58] Recording to a USB HDD device | Recording to a USB HDD device

Information about using a USB HDD device for recording

- The USB HDD device must be used exclusively for recording. Use a separate USB HDD device for viewing photos and videos.
- Only USB HDDs larger than 32 GB are supported.
- Connection of a USB HDD device via a USB hub is not supported. Connect the device directly to the TV.
- Any data stored in the USB HDD device will be erased when it is formatted during the registration process. The USB HDD device cannot be used with a PC once it has been

registered to the TV. To enable use of the USB HDD device on a PC, format it on the PC. (Note that any data in the USB HDD device will be erased.)

- A maximum of 8 USB HDD devices can be registered.
- Only this TV will be able to play the data recorded on the USB HDD that has been registered to this TV.
- Recording is supported only for digital TV and radio broadcasts. Recording of data broadcasts is not supported.
- Scrambled/encrypted signals cannot be recorded.
- Recording cannot be performed in the following cases:
 - The TV cannot recognise the registered USB HDD device.
 - More than 1,000 programmes are recorded on the USB HDD device.
 - The USB HDD device is full.
- Automatic selection of the programme may not be possible while it is being recorded.
- Recording a programme is not possible unless its recording has been authorised.
- If using a Conditional Access Module (CAM), avoid using its parental rating protection, which may not work during recording. As an alternative, use programme block or the TV's own parental rating if it is supported by the broadcaster.
- In Norway, some programmes cannot be recorded due to legal restrictions.
- If the TV is subjected to impact during USB HDD recording, noise may occur in the recorded content.
- In no event shall Sony be liable for recording failure or any damage or loss of recorded content caused or associated with the TV's malfunction, signal interference, or any other problem.




[59] Recording TV Programmes

Watching/deleting recorded content

To watch recorded content

- 1 Press the **REC LIST** button, then select the content to be watched.

To delete recorded content

- 1 Press the **REC LIST** button.
- 2 Select the  (Delete icon) to the right of the programme you want to delete.
To delete multiple programmes, select  (Delete multiple icon) to the right of all the programmes you want to delete, and then select  (Delete icon).

For information about the meaning of the symbols in the recorded title list, see [Understanding the symbols displayed in the recorded title list](#).

Related topics

- [You want to delete recorded content, but the delete icon is not displayed.](#)

[60] Recording TV Programmes

Understanding the symbols displayed in the recorded title list

 :Unviewed recording

 :Protected recording

 :Currently recording

[61]

Using the TV with Other Devices

[USB devices](#)

[Blu-ray and DVD players](#)

[TV box](#)

[Displaying the iPhone/smartphone or iPad/tablet app screen on the TV](#)

[Computers, cameras, and camcorders](#)

[Audio system \(such as an AV receiver or sound bar\)](#)

[Bluetooth devices](#)

[BRAVIA Sync-compatible devices](#)

[Viewing pictures in 4K from compatible devices](#)

[BRAVIA Connectivity Guide](#)

[62] Using the TV with Other Devices

USB devices

[Playing content stored on a USB device](#)

[Information about USB devices used for storing photos and music](#)

[Supported files and formats](#)


[63] USB devices | USB devices

Playing content stored on a USB device

To record programmes to a USB storage device or watch recorded programmes, see [Recording TV Programmes](#).

Connecting a USB device


Connect a USB storage device to the USB port of the TV to enjoy photo, music, and video files stored on the device.

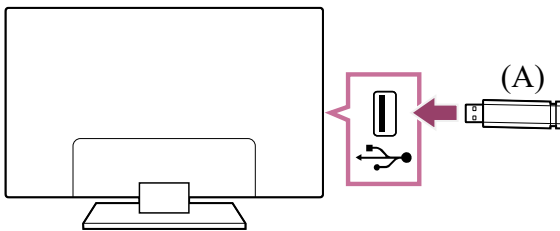

(A) USB storage device

Enjoy photos/music/movies stored on a USB device

You can enjoy photos/music/movies stored on a USB device on the TV screen.

- 1 If the USB device connected to the TV has a power switch, turn it on.
- 2 Press the HOME button, and select  (Apps icon) from the Home menu, then select [Media Player].
If the supplied remote control has an APPS button, you can press the APPS button.
- 3 Select the USB device name.
- 4 Select the folder, and select the file to play.

To check the supported file formats

- [Supported files and formats](#)

Note

- Some photo images or folders take time to display depending on the image dimension, file size, and number of files in a folder.

- Displaying the USB device may take some time because the TV accesses the USB device every time the USB device is connected.
- All USB ports on the TV support Hi-Speed USB. The blue USB port supports SuperSpeed (USB 3.1 Gen 1 or USB 3.0). USB hubs are not supported.
- While accessing the USB device, do not turn off the TV or USB device, do not disconnect the USB cable, and do not remove or insert recording media. Otherwise, data stored on the USB device may be corrupted.
- Depending on the file, playback may not be possible, even when using the supported formats.

Hint

- For other information, see “Frequently Asked Questions” on the Sony Support Site. [Frequently Asked Questions for Troubleshooting](#)

Related topics

- [Information about USB devices used for storing photos and music](#)
- [No picture from a connected device.](#)

[64] USB devices | USB devices

Information about USB devices used for storing photos and music

- The USB ports on the TV support FAT16, FAT32, exFAT, and NTFS file systems.
- When connecting a Sony digital still camera to the TV with a USB cable, USB connection settings on your camera need to be set to “Auto” or “Mass Storage” mode.
- If your digital still camera does not work with your TV, try the following:
 - Set the USB connection settings on your camera to “Mass Storage”.
 - Copy the files from the camera to a USB flash drive, then connect the drive to the TV.
- Some photos and movies may be magnified, resulting in low picture quality. Depending on the size and aspect ratio, images may not be displayed in full screen.
- It may take a long time to display a photo, depending on the file or settings.
- In no event shall Sony be liable for recording failure or any damage or loss of recorded contents caused or associated with the TV’s malfunction, the USB device’s malfunction, or any other problem.

Related topics

- [Supported files and formats](#)

[65] USB devices | USB devices

Supported files and formats

[Photos](#)

[Music](#)

[Videos](#)

[Audio sampling rates \(for videos\)](#)

[External subtitles](#)

[66] Supported files and formats | Supported files and formats | Supported files and formats

Photos

Use case : USB / Home Network

File Format	Extension
JPEG	*.jpg / *.jpe / *.jpeg
ARW ^{*1}	*.arw

^{*1} ARW is only to be used for playing back files.

Other supported files and formats

- [Music](#)
- [Videos](#)
- [Audio sampling rates \(for videos\)](#)
- [External subtitles](#)

[67] Supported files and formats | Supported files and formats | Supported files and formats

Music

Use case : USB / Home Network

mp4

Extension: *.mp4 / *.m4a

Description	Sampling Rate
AAC-LC	16k / 22.05k / 24k / 32k / 44.1k / 48k
HE-AAC v1 / v2	24k / 32k / 44.1k / 48k

3gpp

Extension: *.3gp / *.3g2

Description	Sampling Rate
AAC-LC	16k / 22.05k / 24k / 32k / 44.1k / 48k
HE-AAC v1 / v2	24k / 32k / 44.1k / 48k

Asf

Extension: *.wma

Description	Sampling Rate
WMA9 Standard	8k / 11.025k / 16k / 22.05k / 32k / 44.1k / 48k

ogg

Extension: *.ogg

Description	Sampling Rate
Vorbis	8k / 11.025k / 16k / 22.05k / 32k / 44.1k / 48k

Other

Description	Sampling Rate
LPCM ^{*1}	32k / 44.1k / 48k

Extension: *.mp3

Description	Sampling Rate
MP1L1 / MP1L2 / MP1L3 / MP2L1 / MP2L2	32k / 44.1k / 48k
MP2L3	16k / 22.05k / 24k
MP2.5L3	8k / 11.025k / 12k

Extension: *.wav

Description	Sampling Rate
WAV ^{*2}	32k / 44.1k / 48k / 88.2k / 96k / 176.4k / 192k

Extension: *.flac

Description	Sampling Rate
FLAC	16k / 22.05k / 32k / 44.1k / 48k / 88.2k / 96k / 176.4k / 192k

Extension: *.aac

Description	Sampling Rate
AAC-LC	16k / 22.05k / 24k / 32k / 44.1k / 48k
HE-AAC v1 / v2	24k / 32k / 44.1k / 48k

*1 The use case of LPCM is Home Network only.

*2 The use case of WAV is 2ch only.

Other supported files and formats

- [Photos](#)
- [Videos](#)
- [Audio sampling rates \(for videos\)](#)
- [External subtitles](#)

[68] Supported files and formats | Supported files and formats | Supported files and formats

Videos

Use case : USB / Home Network

MPEG1 (*.mpg / *.mpe / *.mpeg)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
MPEG1	MPEG1L2	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps

MPEG2PS (*.mpg / *.mpe / *.mpeg)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
MPEG2 MP@HL, MP@H14L, MP@ML	MPEG1L1 / MPEG1L2 / LPCM / AC3	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps

MPEG2TS

Extension : *.m2t

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
MPEG2 MP@HL, MP@H14L, MP@ML	MPEG1L1 / MPEG1L2 / AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps

Extension : *.m2ts / *.mts

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
AVC / H.264 BP@L3, MP@L4.2, HP@L4.2	MPEG1L1 / MPEG1L2 / AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3	1920x1080 / QCIF (176x144)	1920x1080@60fps

MP4 (*.mp4)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
AVC / H.264 BP@L3, MP@L4.2, HP@L4.2	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / AC4 / MPEG1L1 / MPEG1L2	1920x1080 / QCIF (176x144)	1920x1080@120fps
MPEG4 SP@L6, ASP@L5, ACEP@L4	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / MPEG1L1 / MPEG1L2	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
AVC / H.264 BP@L5.2, MP@L5.2, HP@L5.2 ^{*1}	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / AC4 / LPCM	3840x2160 / QCIF (176x144)	3840x2160@60p / 1920x1080@120fps
HEVC / H.265 MP@L5.1, Main10@L5.1	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / AC4 / E-AC3	3840x2160 / QCIF (176x144)	3840x2160@60p / 1920x1080@120fps

^{*1} This line includes the XAVC S format use case. The maximum supported bitrate for XAVC S is 100 Mbps.

avi (*.avi)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
Xvid	MPEG1L1 / MPEG1L2 / MPEG1L3 / AC3 / E- AC3	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
Motion JPEG	μ-LAW / PCM (U8) / PCM (S16LE)	1280x720 / QCIF (176x144)	1280x720@30fps

Asf (*.asf / *.wmv)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
VC1 AP@L3, MP@HL, SP@ML	WMA9 Standard	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps

MKV (*.mkv)

Subtitle Type : Internal / External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
Xvid	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2 / MPEG1L1 / MPEG1L2 / Vorbis	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
AVC / H.264 BP@L3, MP@L4.2, HP@L4.2	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2 / MPEG1L1 / MPEG1L2 / Vorbis	1920x1080 / QCIF (176x144)	1920x1080@60fps

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
MPEG4 SP@L6, ASP@L5, ACEP@L4	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2 / MPEG1L1 / MPEG1L2 / Vorbis	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
VP8	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2 / MPEG1L1 / MPEG1L2 / Vorbis	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
VP9 Profile 0, Profile 2	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2 / MPEG1L1 / MPEG1L2 / Vorbis	3840x2160 / QCIF (176x144)	3840x2160@60fps
AVC / H.264 BP@L5.2, MP@L5.2, HP@L5.2	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2	3840x2160 / QCIF (176x144)	3840x2160@60p / 1920x1080@120fps
HEVC / H.265 MP@L5.1, Main10@L5.1	DTS core / AC3 / AAC- LC / E-AC3 / HE-AAC v1 / HE-AAC v2	3840x2160 / QCIF (176x144)	3840x2160@60p / 1920x1080@120fps

3gpp (*.3gp / *.3g2)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
----------------------------------------	--------------------	-----------------------------------	------------------------

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
MPEG4 SP@L6, ASP@L5, ACEP@L4	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / MPEG1L1 / MPEG1L2	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
AVC / H.264 BP@L3, MP@L4.2, HP@L4.2	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / MPEG1L1 / MPEG1L2	1920x1080 / QCIF (176x144)	1920x1080@60fps

MOV (*.mov)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
AVC / H.264 BP@L3, MP@L4.2, HP@L4.2	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / MPEG1L1 / MPEG1L2 / μ -LAW / PCM (U8) / PCM (S16BE) / PCM (S16LE)	1920x1080 / QCIF (176x144)	1920x1080@60fps
MPEG4 SP@L6, ASP@L5, ACEP@L4	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / MPEG1L1 / MPEG1L2 / μ -LAW / PCM (U8) / PCM (S16BE) / PCM (S16LE)	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
Motion JPEG	AAC-LC / HE-AAC v1 / HE-AAC v2 / AC3 / E- AC3 / MPEG1L1 / MPEG1L2 / μ -LAW / PCM (U8) / PCM (S16BE) / PCM (S16LE)	1280x720 / QCIF (176x144)	1280x720@30fps

WebM (*.webm)

Subtitle Type : External

Video Codec (Profile@Level)	Audio Codec	Max. / Min. Resolution	Max. Frame Rate
VP8	Vorbis	1920x1080 / QCIF (176x144)	1920x1080@30fps / 1280x720@60fps
VP9 Profile 0, Profile 2	Vorbis	3840x2160 / QCIF (176x144)	3840x2160@60fps

Other supported files and formats

- [Photos](#)
- [Music](#)
- [Audio sampling rates \(for videos\)](#)
- [External subtitles](#)

[69] Supported files and formats | Supported files and formats | Supported files and formats

Audio sampling rates (for videos)

Audio Codec	Sampling Rate
LPCM	44.1k / 48k
MPEG1L1 / MPEG1L2	32k / 44.1k / 48k
MPEG1L3	32k / 44.1k / 48k
AAC-LC	16k / 22.05k / 24k / 32k / 44.1k / 48k
HE-AAC v1 / v2	24k / 32k / 44.1k / 48k
AC3	32k / 44.1k / 48k
AC4	44.1k / 48k
E-AC3	32k / 44.1k / 48k
Vorbis	8k / 11.025k / 16k / 22.05k / 32k / 44.1k / 48k

Audio Codec	Sampling Rate
WMA9	8k / 11.025k / 16k / 22.05k / 32k / 44.1k / 48k
DTS core	32k / 44.1k / 48k
μ-LAW	8k
PCM (U8)	8k
PCM (S16LE)	11.025k / 16k / 44.1k
PCM (S16BE)	11.025k / 16k / 44.1k

Other supported files and formats

- [Photos](#)
- [Music](#)
- [Videos](#)
- [External subtitles](#)

[70] Supported files and formats | Supported files and formats | Supported files and formats

External subtitles

Use case : USB

File Format	Extension
SubStation Alpha	*.ass / *.ssa
SubRip	*.srt
MicroDVD	*.sub / *.txt
SubViewer	*.sub
SAMI	*.smi / *.sami
DVD Subtitle System	*.txt

Other supported files and formats

- [Photos](#)
- [Music](#)
- [Videos](#)
- [Audio sampling rates \(for videos\)](#)

[71] Using the TV with Other Devices

Blu-ray and DVD players

[Connecting a Blu-ray or DVD player](#)

[Watching Blu-ray and DVD discs](#)

[72] Blu-ray and DVD players | Blu-ray and DVD players

Connecting a Blu-ray or DVD player

Connect a Blu-ray/DVD player to the TV.

Use a connection method below based on the terminals available on your TV.

Note


- The available terminals depend your model/region/country.

Hint

- You can also connect a TV box in the same way as a Blu-ray/DVD player.

HDMI connection

For optimum picture quality, we recommend connecting your player to the TV using an HDMI cable. If your Blu-ray/DVD player has an HDMI jack (socket), connect it using an HDMI cable.

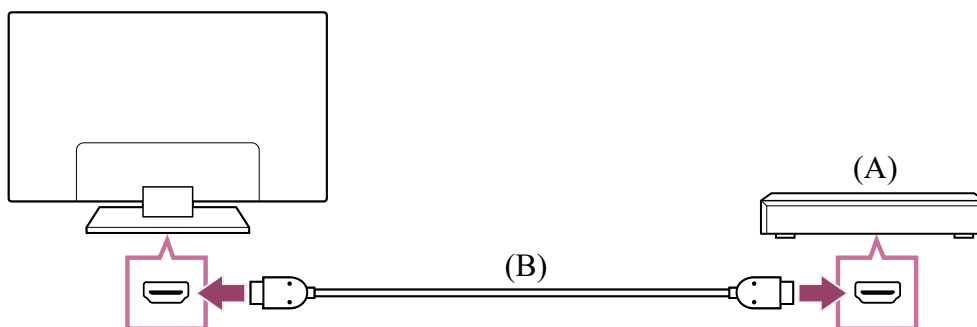


(A) Blu-ray/DVD player (same as connecting a TV box)

(B) HDMI cable (not supplied)*

* Be sure to use an authorised HIGH SPEED HDMI cable bearing the HDMI logo.

Composite connection

If your Blu-ray/DVD player has composite jacks (sockets), connect them using a composite video/audio cable.

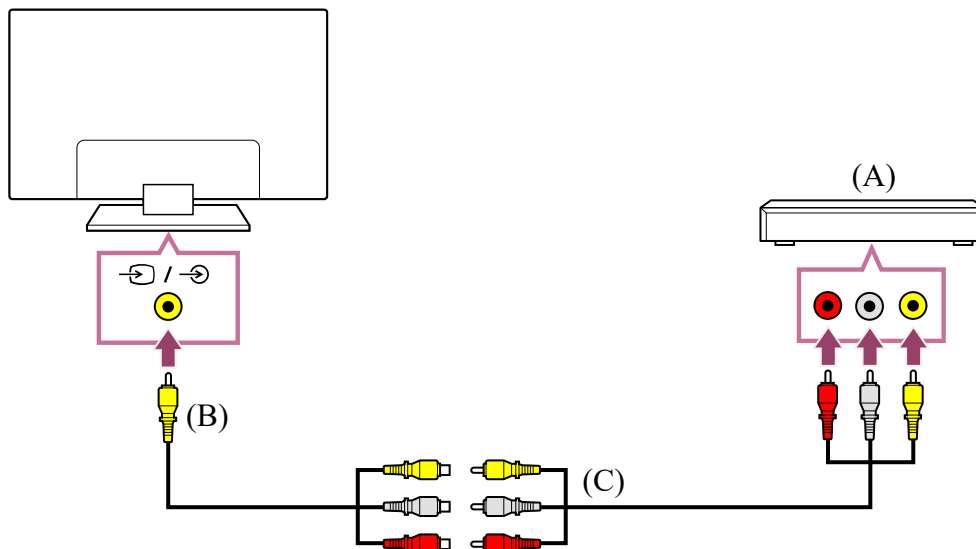

(A) Blu-ray/DVD player (same as connecting a TV box)


(B) Analogue Extension cable (supplied)*

(C) RCA Cable (not supplied)

* Whether the Analogue Extension cable is supplied depends on your model/region/country.

Cable that connects to the video input jack

The 3.5 mm jack of the Analogue Extension Cable has 4 poles.

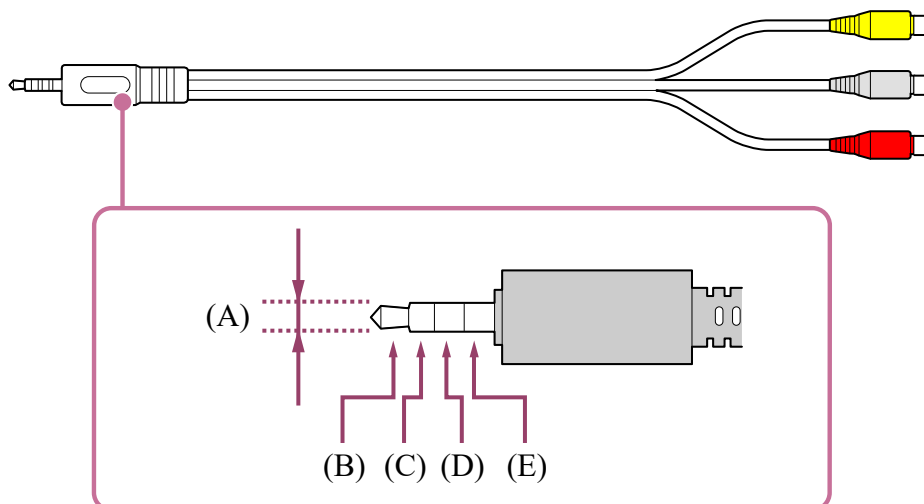

(A) 3.5 mm

(B) Left for Audio signal.

- (C) Video signal.
- (D) Ground.
- (E) Right for Audio signal.


Related topics

- [Watching Blu-ray and DVD discs](#)


[73] Blu-ray and DVD players | Blu-ray and DVD players

Watching Blu-ray and DVD discs

You can watch content from Blu-ray/DVD discs or other content supported by your player on the TV.

- 1 Turn on the connected Blu-ray/DVD player.**
- 2 Press the  (Input select) button repeatedly to select the connected Blu-ray/DVD player.**
- 3 Start playback on the connected Blu-ray/DVD player.**

Hint

- If you connect a BRAVIA Sync-compatible device with an HDMI connection, you can operate it by simply using the TV's remote control. You can also press the  (Info/Text reveal) button on the remote control while watching content from the HDMI input to display the operation menu and operate the BRAVIA Sync-connected device from the TV screen.

Related topics

- [Connecting a Blu-ray or DVD player](#)
- [BRAVIA Sync-compatible devices](#)

[74] Using the TV with Other Devices

TV box

[Connecting a TV box](#)

How to control the TV box using the TV remote control

[75] TV box | TV box

Connecting a TV box

Connect the TV box to the TV.

Connect it to the input on your TV.

For details, refer to the [Connecting a Blu-ray or DVD player](#) page.

[76] TV box | TV box

How to control the TV box using the TV remote control

TV box control compatible models have [TV box setup] in [Settings] — [Watching TV] — [External inputs].

Enabling [TV box control setup] in [TV box setup] allows you to operate a TV box using the TV's remote control.

- 1 Press the HOME button, then select [Settings] — [Watching TV] — [External inputs] — [TV box setup] — [TV box control setup].**
- 2 Follow the on-screen instructions.**

Note

- When operating the TV's remote control, point it at the TV box.
- Depending on the external devices, some buttons may not respond.
- If you press and hold a button on the remote control, the operation may not work. Instead, try pressing the button repeatedly.
- The availability of this function depends on your model/region/country.

Related topics


- [An external device \(such as a TV box\) cannot be controlled using the TV's remote control. \(TV box control compatible models only\).](#)
-

[77] Using the TV with Other Devices

Displaying the iPhone/smartphone or iPad/tablet app screen on the TV

Chromecast built-in™ or AirPlay allows you to display (cast) your favourite websites and app screens on your mobile device directly to the TV.

Using Chromecast built-in

- 1 **Connect a mobile device such as a smartphone or tablet to the same home network that the TV is connected to.**
- 2 **Launch a Chromecast supported app on the mobile device.**
- 3 **Select the  (cast) icon in the app.**
- 4 **Select the TV as the cast destination.**






The screen of the mobile device is displayed on the TV.

Note

- An Internet connection is required to use Chromecast built-in.



Using AirPlay

This TV supports AirPlay 2.

- 1 **If AirPlay has not been configured, press  (Input select) on the remote control, select  (AirPlay), and follow the on-screen instructions.**
- 2 **Make sure your Apple device is connected to the same network as your TV.**
- 3 **Tap  (AirPlay Video) to play video on your TV, tap  (AirPlay Audio) to listen to music on your TV, or tap  (Screen Mirroring) to mirror your device's screen on the TV.**
- 4 **Select the TV as the AirPlay destination.**

Hint

- The TV supports Apple HomeKit.

You can control the TV with a mobile device such as an iPhone or iPad by pressing the  (Input select) button on the remote control, selecting  (AirPlay), and following the on-screen instructions to setup Apple HomeKit.

Available operations vary depending on the version of the app and software.

Note

- An internet connection is required to use AirPlay.
- Operation of a mobile device such as iPhone or iPad varies depending on the OS version.
- iPhone, iPad, AirPlay and HomeKit are trademarks of Apple Inc., registered in the U.S. and other countries.

Related topics

- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)

[78] Using the TV with Other Devices

Computers, cameras, and camcorders

[Connecting a computer and viewing stored content](#)

[Connecting a camera or camcorder and viewing stored content](#)


[Computer video signal specifications](#)

[79] Computers, cameras, and camcorders | Computers, cameras, and camcorders

Connecting a computer and viewing stored content

To connect a computer

Use an HDMI cable to connect your computer to the TV.

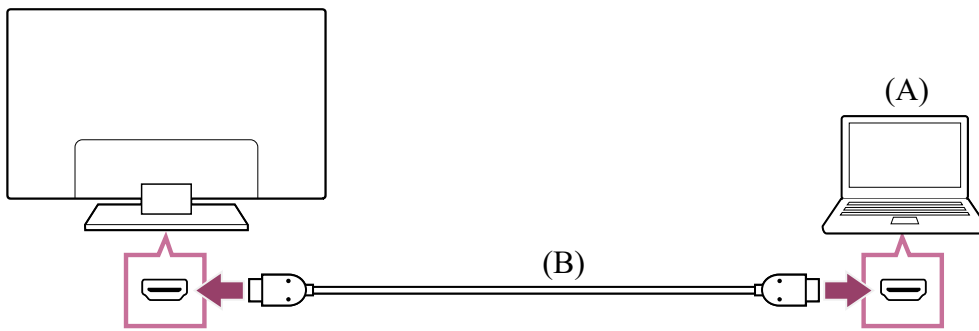

(A) Computer

(B) HDMI cable (not supplied)*

* Be sure to use an authorised HIGH SPEED HDMI cable bearing the HDMI logo.

To check the video signal specifications

- [Computer video signal specifications](#)

To view content stored on a computer

After connecting the computer, press the HOME button, then select the input the computer is connected to.

To check the supported file formats

- [Supported files and formats](#)

Note


- For optimum picture quality, we recommend that you set your computer to output video signals according to one of the settings listed in “Computer video signal specifications”.
- Depending on the connection status, the image may be blurred or smeared. In this case, change the computer’s settings and select another input signal from the “Computer video signal specifications” list.

[80] Computers, cameras, and camcorders | Computers, cameras, and camcorders

Connecting a camera or camcorder and viewing stored content

To connect a camera or camcorder

Connect your Sony digital still camera or camcorder using an HDMI cable. Use a cable that has an HDMI mini jack (socket) for the digital still camera/camcorder end, and a standard HDMI jack (socket) for the TV end.

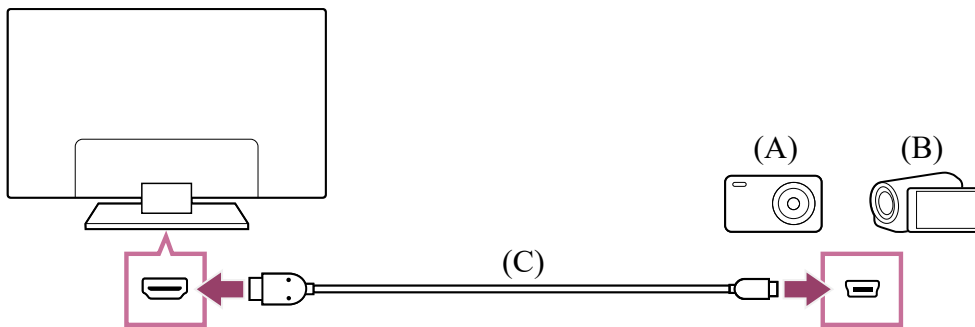


(A) Digital still camera

(B) Camcorder

(C) HDMI cable (not supplied)*

* Be sure to use an authorised HIGH SPEED HDMI cable bearing the HDMI logo.

To view content stored on a digital still camera/camcorder

- 1 After connecting the digital still camera/camcorder, turn it on.
- 2 Press the  (Input select) button repeatedly to select the connected digital still camera/camcorder.
- 3 Start playback on the connected digital still camera/camcorder.

To check the supported file formats

- [Supported files and formats](#)

Hint

- If you connect a BRAVIA Sync-compatible device, you can operate it by simply using the TV's remote control. Make sure that the device is BRAVIA Sync-compatible. Some devices may not be compatible with BRAVIA Sync even though they have an HDMI jack (socket).

Related topics

- [BRAVIA Sync-compatible devices](#)

Computer video signal specifications

(Resolution, Horizontal frequency/Vertical frequency)

- 640 x 480, 31.5 kHz/60 Hz
- 800 x 600, 37.9 kHz/60 Hz
- 1024 x 768, 48.4 kHz/60 Hz
- 1152 x 864, 67.5 kHz/75 Hz
- 1280 x 1024, 64.0 kHz/60 Hz
- 1600 x 900, 56.0 kHz/60 Hz
- 1680 x 1050, 65.3 kHz/60 Hz
- 1920 x 1080, 67.5 kHz/60 Hz *
- 3840 x 2160, 67.5 kHz/30 Hz
- 3840 x 2160, 135.0 kHz/60 Hz (8 bits)

* 1920 x 1080 timing, when applied to the HDMI input, will be treated as a video timing and not computer timing. This will affect the [Screen] settings in [Display & Sound]. To view computer content, set [Wide mode] to [Full], and [Display area] to [+1]. ([Display area] is configurable only when [Auto display area] is disabled.)

Note

- The picture may be blurry and may not be displayed correctly depending on your connection status. In this case, change the computer's settings and select a different input signal in "Supported computer input signals".

[82] Using the TV with Other Devices

Audio system (such as an AV receiver or sound bar)

[Outputting audio from an audio system](#)

[Connecting an audio system](#)

[Adjusting an audio system](#)

[Using the TV as a centre speaker \(only models with TV centre speaker mode\)](#)

[Pass-through audio formats supported with eARC](#)

[83] Audio system (such as an AV receiver or sound bar) | Audio system (such as an AV receiver or sound bar)

Outputting audio from an audio system

You can connect audio systems such as AV receivers or sound bars to the TV. Select a connection method below according to the specifications of the audio system you want to connect.

- Connecting with an HDMI cable (For details, carefully read “Connection using an HDMI cable” below.)
- Connecting with a digital optical cable

For connection methods, refer to the [Connecting an audio system](#) page.

Note

- Refer to the instruction manual of the device to be connected.

Connection using an HDMI cable

This TV supports Audio Return Channel (ARC) or Enhanced Audio Return Channel (eARC). You can use an HDMI cable to output audio from audio systems that support ARC and eARC.

On TVs that support eARC, you can output (pass-through) audio signals from external input devices connected to the TV to eARC supported audio systems by using the HDMI terminal bearing the text “ARC”.

For connection methods, refer to the [Connecting an audio system](#) page.

Note

- The location of the HDMI terminal that supports eARC/ARC varies depending on the model. Refer to the included Setup Guide.

Related topics

- [Pass-through audio formats supported with eARC](#)

[84] Audio system (such as an AV receiver or sound bar) | Audio system (such as an AV receiver or sound bar)

Connecting an audio system

See the illustrations below to connect an audio system such as an AV receiver or sound bar.


Note

- The available terminals depend your model/region/country.

HDMI connection (ARC supported)

1 Connect the TV and audio system with an HDMI cable.

Connect to the TV's HDMI input terminal bearing the text "ARC".

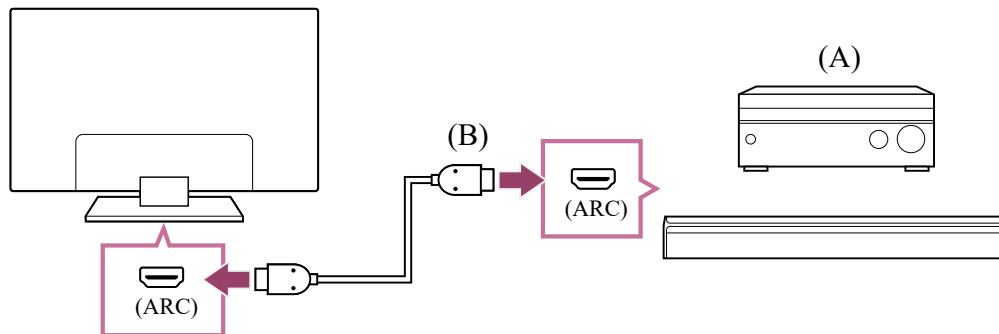

(A) AV receiver or sound bar

(B) HDMI cable (not supplied)*

* We recommend authorised Premium High Speed HDMI Cable(s) bearing the HDMI logo.

2 Adjusting an audio system


Note

- For ARC connections, voice recognition performance may degrade (only TVs with a built-in MIC).

HDMI connection (eARC supported)

1 Connect the external input device and TV with an HDMI cable. Connect the TV and audio system with another HDMI cable.

Connect the audio system to the TV's HDMI input terminal bearing the text "ARC".

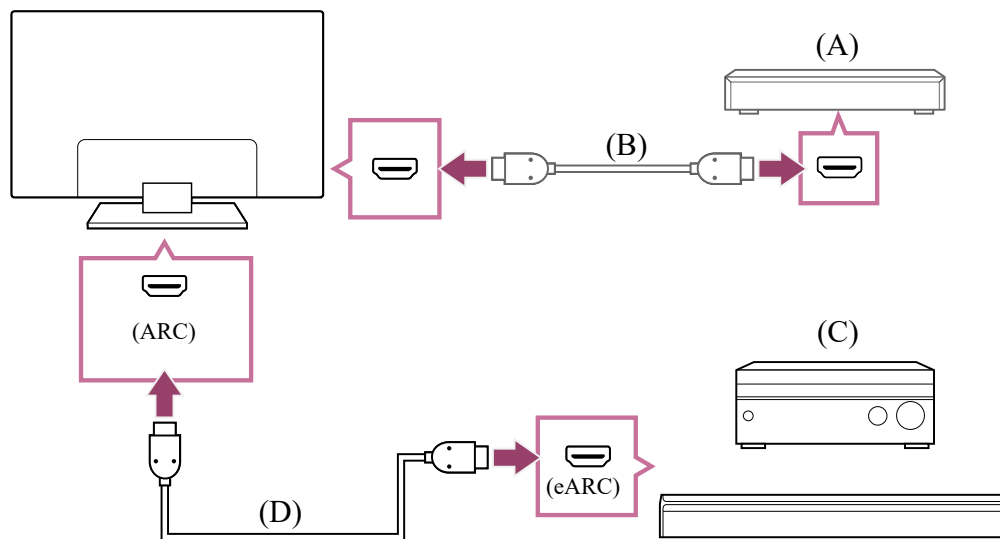

(A) External input device (such as a Blu-ray/DVD recorder)

(B) HDMI cable (not supplied)

(C) AV receiver or sound bar

(D) HDMI cable with Ethernet (not supplied)*

* We recommend authorised Premium High Speed HDMI Cable(s) bearing the HDMI logo.

- 2 **Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [eARC mode] — [Auto].**
- 3 **Select [Speakers] — [Audio system].**
- 4 **Enable the audio system's eARC feature.**
Refer to the instruction manual of the device.
- 5 **Adjusting an audio system**


Note

- You cannot select [eARC mode] if the text-to-speech function for on-screen text within the TV's accessibility features is enabled.
- If audio is being output from an eARC supported device while you are watching HDMI input, the TV operates as follows:
 - audio from system sounds and audio responses is not output, and
 - the voice recognition performance of the built-in MIC may degrade (only TVs with a built-in MIC).

Digital optical cable connection

1 Connect the TV and audio system with a digital optical cable.

Connect to the audio system's digital optical input terminal.

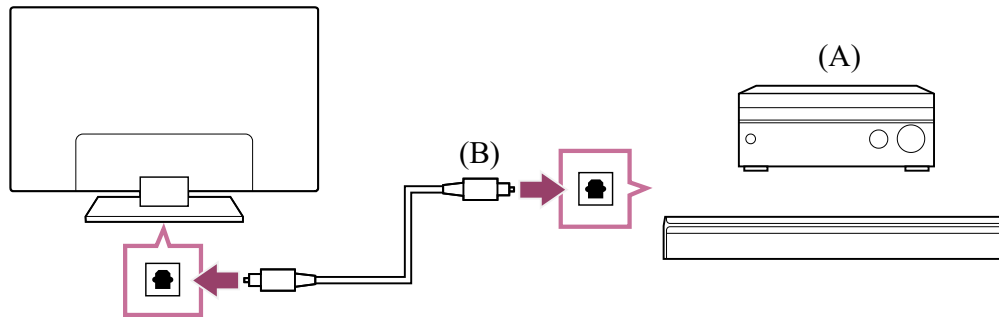

(A) AV receiver or Sound bar

(B) Optical audio cable (not supplied)

2 Adjusting an audio system

Hint

- For more information, please visit the Sony support website.

[Support Site](#)

Related topics

- [No sound but good picture.](#)
- [No audio or low audio with a home theatre system.](#)

[85] Audio system (such as an AV receiver or sound bar) | Audio system (such as an AV receiver or sound bar)

Adjusting an audio system

After connecting an audio system to the TV, adjust the TV's audio output from the audio system.

Adjusting an audio system connected with an HDMI cable or digital optical cable

- After connecting the TV to your audio system, press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [Speakers] — [Audio system].

- Turn on the connected audio system, then adjust the volume.

If you connect a BRAVIA Sync-compatible device with an HDMI connection, you

can operate it by simply using the TV's remote control.

Note

- You need to configure the [Digital audio out] settings according to your audio system. Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [Digital audio out].
- If the audio system is not compatible with Dolby Digital or DTS, set [Settings] — [Display & Sound] — [Audio output] — [Digital audio out] to [PCM].
- The [Digital audio out] settings are disabled when using audio signals that are passed through from the HDMI input and using eARC.

Hint

- If a specific audio system is connected with an HDMI cable, you can adjust the output timing of the picture and sound.
 - [Adjusting the AV sync setting](#)
- For details about supported models, refer to the support site.
- [Support Site](#)

Related topics

- [BRAVIA Sync-compatible devices](#)
- [Connecting an audio system](#)
- [No sound but good picture.](#)
- [No audio or low audio with a home theatre system.](#)


[86] Audio system (such as an AV receiver or sound bar) | Audio system (such as an AV receiver or sound bar)

Using the TV as a centre speaker (only models with TV centre speaker mode)

Models with TV centre speaker mode have CENTER SPEAKER IN terminals on the back of the TV.


If [Speakers] is set to [Audio system], you can use the TV speakers as a centre speaker for a home theatre simply by connecting an AV receiver to the CENTER SPEAKER IN terminal of the TV*.

*The TV and AV receiver must be connected by either an HDMI cable or digital optical cable.

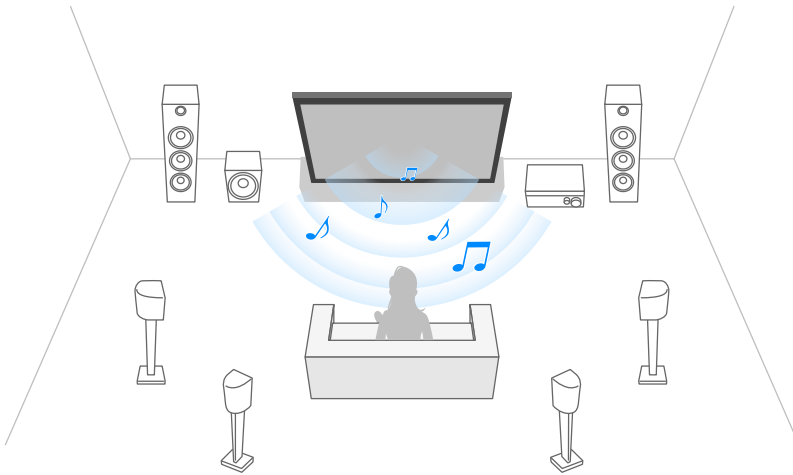

Speaker cable connection

Connect the TV and AV receiver with a speaker cable.

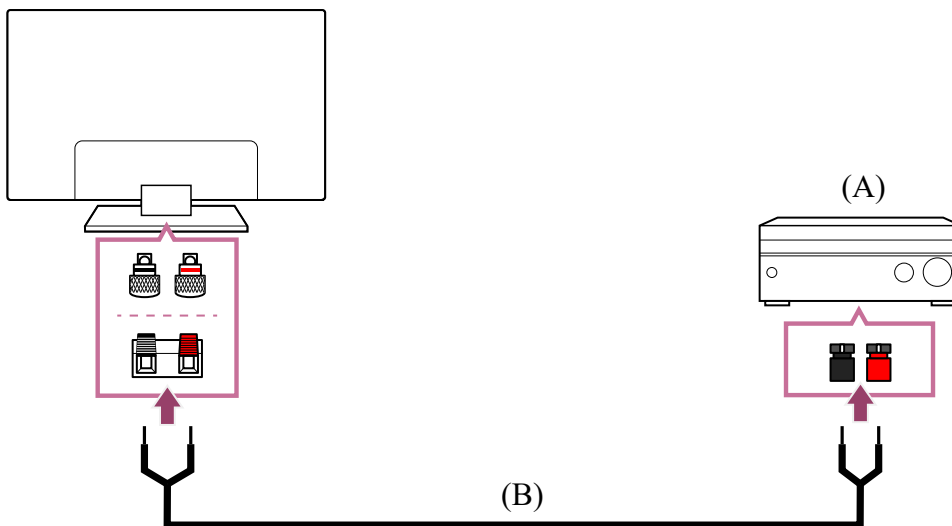


(A) AV receiver

(B) Speaker cable (not supplied)

Use a speaker cable (not supplied) to connect the AV receiver to the CENTER SPEAKER IN terminal of the TV.

When connecting, make sure to twist the ends of the speaker cable and insert them into the connection terminals of the TV and AV receiver.

The CENTER SPEAKER IN terminal varies depending on the model. Refer to the figures below when connecting the speaker cable.

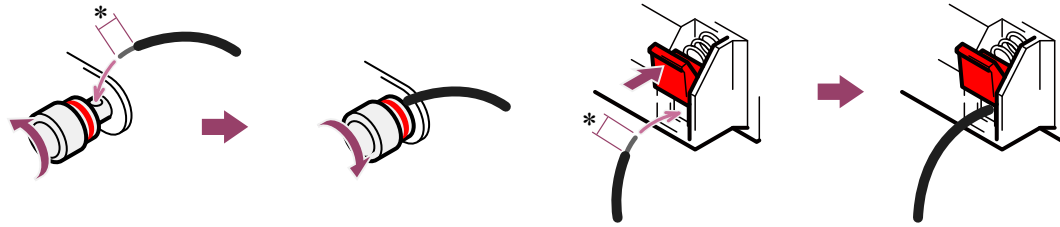

*Strip about 10 mm (13/32 inches) of insulation from the speaker cable at each end.

Note

- To prevent the wires of the speaker cable from touching each other, make sure not to strip too much of the speaker cable.
- Connect the speaker cable properly so that the polarities (+/-) between the TV and AV receiver match.

Related topics

- [Connecting an audio system](#)

[87] Audio system (such as an AV receiver or sound bar) | Audio system (such as an AV receiver or sound bar)

Pass-through audio formats supported with eARC

Confirm that you can pass-through the following audio formats.

- 7.1 channel linear PCM: 32/44.1/48 kHz 16 bits
- Dolby Digital
- Dolby Digital Plus
- DTS
- Dolby TrueHD
- DTS-HD MA
- Dolby Atmos
- DTS:X Master Audio
- MPEG2 - AAC/MPEG4 - AAC

For details, refer to the support page.

- [Support Site](#)

Related topics

- [Connecting an audio system](#)

[88] Using the TV with Other Devices

Bluetooth devices

[Connecting a Bluetooth device](#)

[Adjusting the AV sync setting](#)

[Supported Bluetooth profiles](#)

[89] Bluetooth devices | Bluetooth devices

Connecting a Bluetooth device

To pair the TV with a Bluetooth device

Only for Bluetooth A2DP-supported models that can use Bluetooth audio devices such as headphones or speakers.

Bluetooth A2DP-supported models that support Bluetooth audio devices have [A/V sync] in [Settings] — [Display & Sound] — [Audio output].

- 1 Turn the Bluetooth device on and put it in pairing mode.**
To put your Bluetooth device in pairing mode, refer to the instruction manual of the device.
- 2 Press the HOME button, then select [Settings] — [Remotes & Accessories] — [Bluetooth settings] — [Add device] to put the TV in pairing mode.**
A list of available Bluetooth devices will be displayed.
- 3 Select the desired device from the list, then follow the on-screen instructions.**
If you are prompted to enter a passcode, refer to the instruction manual of the device.
After pairing is completed, the device connects to the TV.

To connect to a paired Bluetooth device

- 1 Press the HOME button, then select [Settings] — [Remotes & Accessories] — [Bluetooth settings].
- 2 Select a paired but unconnected device from the list.
- 3 Select [Connect].

Related topics

- [Supported Bluetooth profiles](#)
- [Operation cuts out, or a device does not work.](#)
- [You want to output sound from both the headphones/Bluetooth audio device/audio system and the TV speakers.](#)

[90] Bluetooth devices | Bluetooth devices

Adjusting the AV sync setting

If a Bluetooth audio device is connected, there may be a delay between the picture and sound due to the properties of Bluetooth. You can adjust the delay between the picture and sound with the A/V sync setting. (Only for Bluetooth A2DP-supported models that can use Bluetooth audio devices.)

Bluetooth A2DP-supported models that support Bluetooth audio devices have [A/V sync] in [Settings] — [Display & Sound] — [Audio output].

- 1 Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [A/V sync] — the desired option.

Hint

- You can also adjust the output timing of the picture and sound if a specific audio system is connected with an HDMI cable. For details about supported models, refer to the support site.
 - [Support Site](#)

Note

- Depending on the connected Bluetooth audio device, the picture and sound may not match even when the [A/V sync] setting is set to [On] or [Auto].
- To prevent the TV from displaying a black screen immediately after turning it on when a sound bar is connected wirelessly (Bluetooth), set the [A/V sync] setting to

[On].

- If [Picture mode] is set to one of the options below, the output timing of the picture and sound is not adjusted even when the [A/V sync] setting is set to [Auto].
 - [Game]
 - [Graphics]
 - [Photo]

To adjust [A/V sync] when in any of these modes, select [On].

- The responsiveness of the TV while playing video games may feel slower due to the [A/V sync] setting adding a delay to the output timing of the picture. For games that are dependant on response time, we do not recommend you use a Bluetooth device and recommend that you use the TV speakers or a sound bar with a wired (HDMI cable/digital optical cable) connection instead.

[91] Bluetooth devices | Bluetooth devices

Supported Bluetooth profiles

The TV supports the following profiles:

- HID (Human Interface Device Profile)
- HOGP (HID over GATT Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVRCP (Audio/Video Remote Control Profile)
- SPP (Serial Port Profile)

Related topics

- [Connecting a Bluetooth device](#)

[92] Using the TV with Other Devices

BRAVIA Sync-compatible devices

[BRAVIA Sync overview](#)


[Using features available for BRAVIA Sync-compatible devices](#)

[Adjusting BRAVIA Sync settings](#)

[93] BRAVIA Sync-compatible devices | BRAVIA Sync-compatible devices

BRAVIA Sync overview

If a BRAVIA Sync-compatible device (e.g., Blu-ray player, AV receiver) is connected with an HDMI cable, you can operate the device with the TV's remote control.

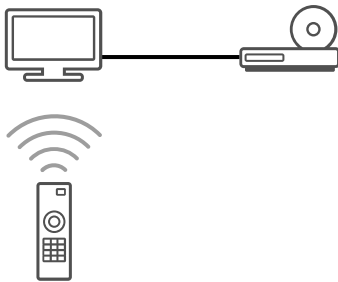

Related topics

- [Using features available for BRAVIA Sync-compatible devices](#)
- [Adjusting BRAVIA Sync settings](#)

[94] BRAVIA Sync-compatible devices | BRAVIA Sync-compatible devices





Using features available for BRAVIA Sync-compatible devices

The [Sync Menu] is primarily used to operate BRAVIA Sync-compatible devices from the TV.



Press the  (Quick Settings) button on the remote control, and select [Sync Menu].

If the [Sync Menu] is not displayed, change the items displayed in the [Quick Settings] screen and add the [Sync Menu]. For details, refer to the [Using the Quick Settings](#) page.





Blu-ray/DVD player

- Automatically turns the Blu-ray/DVD player on and switches the input to the Blu-ray/DVD player when you select it from the Home Menu or Sync Menu.
- Automatically turns the TV on and switches the input to the connected Blu-ray/DVD player when the Blu-ray/DVD player starts to play.
- Automatically turns the connected Blu-ray/DVD player off when you turn the TV off.
- Allows operations such as menu operation and playback with the  (Up) /  (Down) /  (Left) /  (Right) buttons on the TV remote control.

AV receiver

- Automatically turns the connected AV receiver on and switches the sound output from the TV speaker to the audio system when you turn the TV on. This function is only available if you have previously used the AV receiver to output the TV's sound.
- Automatically switches the sound output to the AV receiver by turning the AV receiver on when the TV is turned on.
- Automatically turns the connected AV receiver off when you turn the TV off.
- Adjusts the volume ( (Volume) +/- buttons) and mutes the sound ( (Mute) button) of the connected AV receiver through the TV's remote control.

Video camera

- Automatically turns the TV on and switches the input to the connected video camera when the camera is turned on.
- Automatically turns the connected video camera off when you turn the TV off.
- Allows operations such as menu operation and playback with the  (Up) /  (Down) /  (Left) /  (Right) buttons on the TV remote control.

Note

- "BRAVIA Sync control" (BRAVIA Sync) is only available for connected BRAVIA Sync-compatible devices that have the BRAVIA Sync logo.

Related topics

- [BRAVIA Sync overview](#)
- [Adjusting BRAVIA Sync settings](#)

[95] BRAVIA Sync-compatible devices | BRAVIA Sync-compatible devices

Adjusting BRAVIA Sync settings

- 1 Turn on the connected device.
- 2 To enable [BRAVIA Sync control], press the HOME button, then select [Settings] — [Watching TV] — [External inputs] — [BRAVIA Sync settings] — [BRAVIA Sync control].
- 3 Activate BRAVIA Sync on the connected device.
When a specific Sony BRAVIA Sync-compatible device is connected and powered on and [BRAVIA Sync control] is enabled, BRAVIA Sync is

automatically activated on that device. For details, refer to the instruction manual of the connected device.

Available options

Available options are shown below. (Options vary depending on your model/region/country.)

[Auto devices off]

If disabled, the connected device does not turn off automatically when the TV is turned off.

[Auto TV on]

If disabled, the TV does not turn on automatically when the connected device is turned on.

[BRAVIA Sync device list]

Displays the BRAVIA Sync device list.

[Device control keys]

Allows you to set buttons to control an HDMI connected device.

To use the Sync Menu

- 1 **Press the  (Quick Settings) button on the remote control, select the Sync Menu, and select the desired item in the Sync Menu.**

If the [Sync Menu] is not displayed, you will need to change the items displayed in the [Quick Settings] screen and add the [Sync Menu]. For details, refer to the [Using the Quick Settings](#) page.

Hint

- In the following cases, a message is displayed on the TV screen when you select the Sync Menu.
 - An HDMI device is not connected.
 - [BRAVIA Sync control] is disabled.

Related topics

- [BRAVIA Sync overview](#)
- [Using features available for BRAVIA Sync-compatible devices](#)

[96] Using the TV with Other Devices

Viewing pictures in 4K from compatible devices

Viewing pictures in 4K resolution


Settings for viewing pictures in 4K resolution with higher quality

[97] Viewing pictures in 4K from compatible devices | Viewing pictures in 4K from compatible devices

Viewing pictures in 4K resolution

You can connect a digital still camera/camcorder that supports HDMI 4K output to HDMI IN of the TV to display high resolution photos stored on the camera. You can also display high resolution photos stored in connected USB devices or your home network. A picture with a 4K or higher resolution can be displayed in 4K resolution (3840×2160).

The availability of this function depends on your region/country.

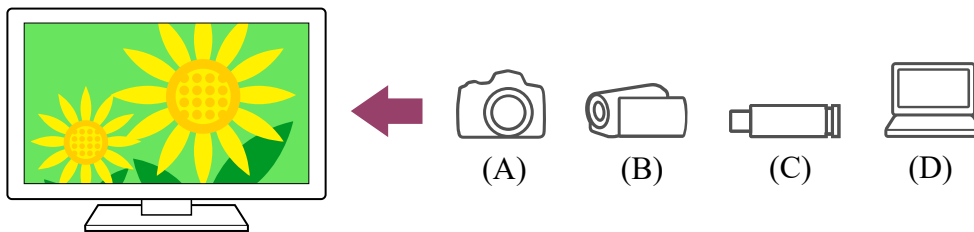


(A) Digital still camera

(B) Camcorder


(C) USB device

(D) Network device

To view pictures stored on a USB device or network device in 4K resolution

- 1 Connect the USB device or network device to the TV.**
- 2 Press the HOME button, select  (Apps icon) from the Home menu, then select [Media Player].**
If the supplied remote control has an APPS button, you can press the APPS button.
- 3 Select the USB device name or network device name.**
- 4 Select the folder, and then select the file to play.**

To view pictures stored on a digital still camera/camcorder

- 1 Connect a digital still camera or camcorder that supports HDMI output to the HDMI IN jack (socket) of the TV, using an HDMI cable.
- 2 Press the  (Input select) button repeatedly to select the connected device.
- 3 Set the connected device to 4K output.
- 4 Start playback on the connected device.

To check the supported file formats

- [Supported files and formats](#)

To view pictures in 4K resolution with higher quality

You can set the HDMI signal format to Enhanced format to view pictures in 4K resolution with higher quality.

For information about Enhanced format or changing the settings, refer to the [Settings for viewing pictures in 4K resolution with higher quality](#) page.

Note

- A 3D picture cannot be displayed.
- If you change the picture by pressing the ◀ (Left) / ▶ (Right) buttons, it may take a moment for the picture to be displayed.

Related topics

- [Computers, cameras, and camcorders](#)
- [USB devices](#)
- [Connecting to a Network](#)

[98] Viewing pictures in 4K from compatible devices | Viewing pictures in 4K from compatible devices

Settings for viewing pictures in 4K resolution with higher quality

When you display the High-Quality 4K format with the HDMI input, set [HDMI signal format] in [External inputs].

HDMI signal format

To change the HDMI signal format setting, press the HOME button, then select [Settings] — [Watching TV] — [External inputs] — [HDMI signal format] — the HDMI input you want to set.

Standard format

Standard HDMI format^{*1} for normal use.

Enhanced format

High-Quality HDMI format^{*1*2*3}. Only set when using capable devices.

Enhanced format (Dolby Vision)

HDMI format using Dolby Vision. Only set when using capable devices.

^{*1} HDR included.

^{*2} 4K 60p 4:2:0 10 bit, 4:4:4, 4:2:2 etc.

^{*3} 4K 120p, 4K 60p 4:2:0 10 bit, 4:4:4, 4:2:2 etc. (only HDMI IN that supports 4K 120 Hz)

HDMI IN that supports 4K 120 Hz has the following setting.

[Settings] — [Watching TV] — [External inputs] — [HDMI signal format] — [Enhanced format (Dolby Vision)]

Set to [Enhanced format] if you are using an HDMI device that supports 4K 120 Hz picture output.

Note

- The available HDMI signal formats depend on the HDMI IN used.
- When using Enhanced format, picture and sound may not be output correctly. In this case, connect the device to an HDMI IN that is in [Standard format], or change the HDMI signal format of HDMI IN to [Standard format].
- Only set to Enhanced format when using compatible devices.
- When you watch 4K picture with High-Quality, use a Premium High Speed HDMI Cable(s) that supports speeds of 18 Gbps. For details on a Premium High Speed HDMI Cable(s) that supports 18 Gbps, refer to the cable specifications.

Related topics

- [Viewing pictures in 4K resolution](#)

[99] Using the TV with Other Devices

BRAVIA Connectivity Guide

Descriptions about connecting devices to the TV are also available on the Sony support website. Refer to it as necessary.

- https://www.sony.net/tv_connectivity_guide/

[100]

Connecting to a Network

[Connecting to a network using a LAN cable](#)

[Connecting to a network using a wireless connection](#)

[Home network features](#)


[101] Connecting to a Network

Connecting to a network using a LAN cable

Connecting to a network using a LAN cable

A wired LAN connection allows you to access the Internet and your home network.

Make sure to connect to the Internet or home network via a router.

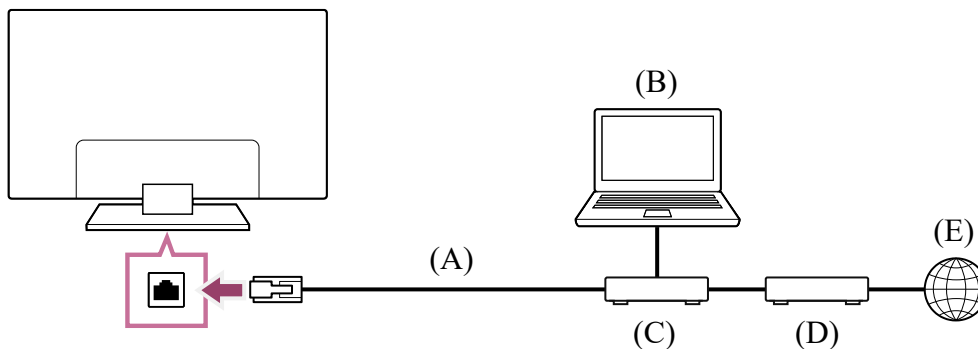

(A) LAN cable

(B) Computer

(C) Router

(D) Modem

(E) Internet

1 Set up your LAN router.

For details, refer to the instruction manual of your LAN router, or contact the person who set up the network (network administrator).

Note

- It is strongly recommended for security purposes to connect your TV to the Internet via a router/modem that includes router functionality. Direct connection of your TV to the Internet may expose your TV to a security threat such as extraction or tampering of content or personal information.

Contact your service provider or network administrator to confirm your network includes router functionality.

- The network-related settings that are required may vary depending on the Internet service provider or router. For details, refer to the instruction manuals provided by the Internet service provider or those supplied with the router. You can also contact the person who set up the network (network administrator).

Related topics

- [The TV cannot connect to the Internet/Network.](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)
- [Home network features](#)

[102] Connecting to a Network

Connecting to a network using a wireless connection


[Using Wi-Fi to connect the TV to the Internet/Network](#)

[Using Wi-Fi Direct to connect to the TV \(no wireless router required\)](#)

[103] Connecting to a network using a wireless connection | Connecting to a network using a wireless connection

Using Wi-Fi to connect the TV to the Internet/Network

The built-in wireless LAN device allows you to access the Internet and enjoy the benefits of networking in a cable-free environment.

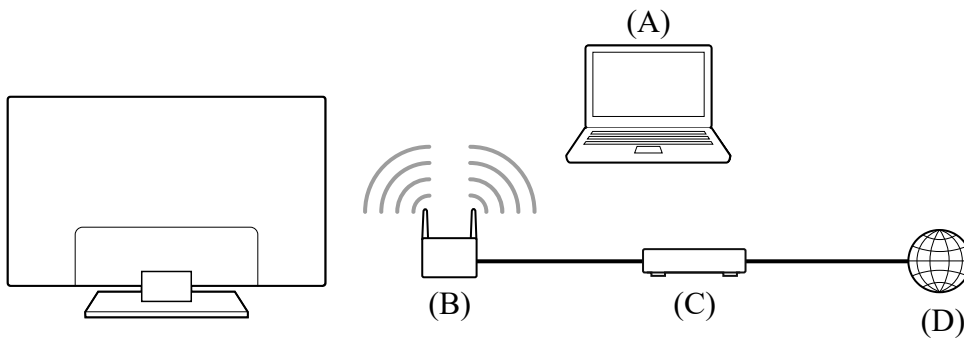

- (A) Computer
- (B) Wireless router
- (C) Modem
- (D) Internet

1 Set up your wireless router.

For details, refer to the instruction manual of your wireless router, or contact the person who set up the network (network administrator).

2 Press the HOME button, then select [Settings] — [Network & Internet].

3 Select a network you want to connect to and set the password.

If your TV can not connect to the Internet/Network, refer to [The TV cannot connect to the Internet/Network.](#) page.

To turn off the built-in wireless LAN

1 To disable [Wi-Fi], press the HOME button, then select [Settings] — [Network & Internet] — [Wi-Fi].

Hint

- For smooth video streaming:
 - Change the setting of your wireless router to a high-speed networking standard such as 802.11n if possible.
For details on how to change the setting, refer to the instruction manual of your wireless router, or contact the person who set up the network (network administrator).
 - If the above procedure does not deliver any improvement, change the setting of your wireless router to 5GHz, which may help improve the video streaming quality.
 - The 5GHz band may not be supported depending on your region/country. If the 5GHz band is not supported, the TV can only connect to a wireless router using the 2.4GHz band.

Note

- It is strongly recommended for security purposes to connect your TV to the Internet via a router/modem that includes router functionality. Direct connection of your TV to the Internet may expose your TV to a security threat such as extraction or tampering of content or personal information.

Contact your service provider or network administrator to confirm your network includes router functionality.

- The network-related settings that are required may vary depending on the Internet service provider or router. For details, refer to the instruction manuals provided by the Internet service provider or those supplied with the router. You can also contact the person who set up the network (network administrator).
- If you select the [Show password] option in the password entry screen, the exposed password may be seen by other individuals.


Related topics

- [Network \(Internet/home\)/apps](#)
- [The TV cannot connect to the Internet/Network.](#)
- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi Direct to connect to the TV \(no wireless router required\)](#)
- [Home network features](#)

[104] Connecting to a network using a wireless connection | Connecting to a network using a wireless connection

Using Wi-Fi Direct to connect to the TV (no wireless router required)

You can connect a device to the TV wirelessly, without using a wireless router, and then stream videos, photos, and music that is stored on your device directly to the TV.

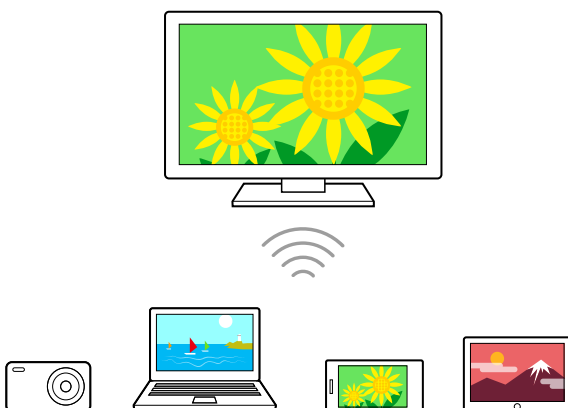

- 1 **Press the HOME button, then select [Settings] — [Network & Internet] — [Wi-Fi Direct] — [Wi-Fi Direct settings].**
- 2 **Select the TV name displayed on the TV screen with the Wi-Fi Direct device.**
If the device does not support Wi-Fi Direct, select the [Show Network (SSID)/Password].
- 3 **Operate the Wi-Fi Direct/Wi-Fi device to connect with the TV.**
- 4 **Send content from the Wi-Fi Direct/Wi-Fi device to the TV.**
For details, refer to the instruction manual of the device.

If connection is not successful

When the standby screen for the Wi-Fi Direct setting is displayed, select [Show Network (SSID)/Password] and follow the on-screen instructions to complete the set-up.

To connect another device

Follow the steps above to connect devices. Up to 10 devices can be connected at the same time. To connect another device when 10 devices are already connected, disconnect an unnecessary device, then connect the other device.

To change the name of the TV shown on the connected device

Press the HOME button, then select [Settings] — [Device Preferences] — [About] — [Device name].

To list connected devices/deregister devices

Press the HOME button, then select [Settings] — [Network & Internet] — [Wi-Fi Direct] — [Show device list/Delete].

To deregister a device, select the device in the list to delete, then press the \rightarrow (Enter) button. Then, select [Yes] on the confirmation screen.

To deregister all devices, select [Delete all] in the list, then [Yes] in the confirmation display.

[105] Connecting to a Network

Home network features

Adjusting home network settings

[Playing content from a computer](#)

[Playing content from a media server](#)

[106] Home network features | Home network features

Adjusting home network settings

You can adjust the following home network settings.

To check the server connection

Press the HOME button, then select [Settings] — [Network & Internet] — [Home network setup] — [Server diagnostics] — follow the on-screen instructions to perform diagnostics.

To use the renderer function

Press the HOME button, then select [Settings] — [Network & Internet] — [Home network setup] — [Renderer] — the desired option.

[Renderer function]

Enable the renderer function.

You can play photo/music/video files in a controller (e.g., digital still camera) on the TV screen by operating the device directly.

[Renderer access control]

- Select [Automatic access permission] to access the TV automatically when a controller accesses the TV for the first time.
- Select [Custom settings] to change the access permission settings of each controller.

To use the remote device

Press the HOME button, then select [Settings] — [Network & Internet] — [Remote device settings] — the desired option.

[Control remotely]

Enable operation of the TV from a registered device.


[Deregister remote device]

Deregister a device to disable operation of the TV from that device.

[107] Home network features | Home network features

Playing content from a computer

You can enjoy content (photo/music/video files) stored on a network device located in another room, if you connect the TV to a home network via a router.

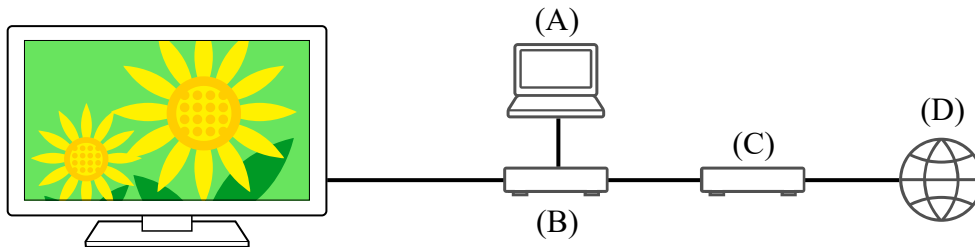


(A) Computer (Server)

(B) Router

(C) Modem

(D) Internet

- 1 **Connect the TV to your home network.**
- 2 **Press the HOME button, and select  (Apps icon) from the Home menu, then select [Media Player].**
If the supplied remote control has an APPS button, you can press the APPS button.
- 3 **Select the network device name.**
- 4 **Select the folder, and then select the file to play.**

To check the supported file formats

- [Supported files and formats](#)

Note

- Depending on the file, playback may not be possible even when using the supported formats.


Related topics

- [Adjusting home network settings](#)

[108] Home network features | Home network features

Playing content from a media server

You can play photo/music/video files in a controller (e.g., digital still camera) on the TV screen by operating the controller directly, if you connect the TV to a home network via a router. The controller should also be renderer-compatible.

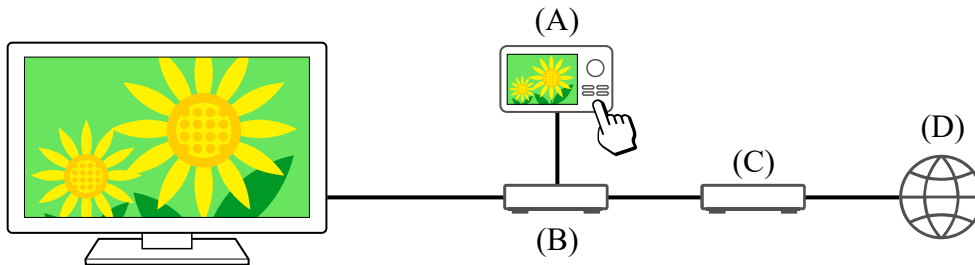

(A) Digital still camera (Controller)

(B) Router

(C) Modem

(D) Internet

- 1 **Connect the TV to your home network.**
- 2 **Operate the controller to start playing the content on the TV screen.**

Related topics

- [Adjusting home network settings](#)

[109]

Settings

The menus displayed in the TV settings vary depending on your model/region/country.

[Watching TV Channels, External inputs and Recording device setup, etc.](#)

[Display & Sound Picture, Screen, Sound and Audio output, etc.](#)

[Network & Internet](#)

[Accounts & Sign-In Google and Add account, etc.](#)

[Apps](#)

[Device Preferences Date & time, Language, Sound, Home screen, Accessibility, Parental controls, LED indicator and Power, etc.](#)

[Remotes & Accessories Remote control and Bluetooth settings, etc.](#)

[Timers On timer and Sleep timer, etc.](#)

[110] Settings

Watching TV

- 1 Press the HOME button, then select [Settings] — [Watching TV] — the desired option.

Available options

[Channels]

Configures the settings related to receiving broadcast programming. You can also configure the settings related to receiving satellite broadcast programming.

To tune digital channels

[Receiving digital broadcasts](#)

To tune your satellite

[Receiving satellite broadcasts](#)

To sort channels or edit the channel list

[Sorting or editing the channels](#)

[External inputs]

Configures the settings of the external inputs and BRAVIA Sync.

For details about BRAVIA Sync, refer to [BRAVIA Sync-compatible devices](#).

[Recording device setup]

Configures the settings of USB HDD devices for recording. (This option may not be available depending on your model/region/country.)

[111] Settings

Display & Sound

- 1 Press the HOME button, then select [Settings] — [Display & Sound] — the desired option.

Available options

[Picture]

Configures display settings that adjust the picture quality, such as screen brightness. To adjust the picture quality to your preferences, refer to the [Adjusting the picture quality](#) page.

[Screen]

Adjusts the screen size and position.

[Sound]

Configures settings that adjust the sound.

To adjust the sound quality to your preferences, refer to the [Adjusting the sound quality](#) page.

[Audio output]

Configures selection settings related to speakers.

[Expert panel settings](only models equipped with an OLED panel)

Use when setting [Pixel shift] or manually performing [Panel refresh].

For details, refer to [OLED panel \(only models equipped with an OLED panel\)](#).

[112] Settings

Network & Internet

Configures settings for such things as wireless LANs, wired LANs, and home networks.

[113] Settings

Accounts & Sign-In

- 1 Press the HOME button, then select [Settings] — [Accounts & Sign-In] — the desired option.**

Available options

[Google]

Syncs the registered Google account or removes the account.

[Add account]

Adds a Google account. You can add multiple Google accounts and switch between them depending on the app.

[114] Settings

Apps

Allows you to configure or uninstall apps, or clear the cache.

[115] Settings

Device Preferences

- 1 Press the HOME button, then select [Settings] — [Device Preferences] — the desired option.

Available options

[About]

Displays information about the TV.

[Date & time]

Adjusts the current time.

[Language]

Selects the menu language. The selected menu language will also set the voice recognition language.

[Keyboard]

Configures the settings of the on-screen keyboard.

[Sound]

Configures the [System sounds] setting.

[Storage]

Changes the settings related to data storage.

[Home screen]

Customises channels displayed in the [Home screen] and sorts apps.

[Google Assistant]

Configures the search and ["Ok Google" detection]* settings.

[Screen saver]

Configures the settings of the screen saver.

[Location]

Configures the location settings to obtain the user location.

[Security & restrictions]

Configures restrictions such as preventing children from using specific apps.

[Accessibility]

Configures the settings of accessibility features and services for helping users navigate their devices more easily.

[Reset]

Reverts the TV to the factory default settings.

[Parental controls]

Configures the parental lock settings for restricting usage of items such as [Channels & External inputs], [Apps] and [Screen time].

[LED indicator]

Configures the [Operational response] and [Built-in MIC LED]* settings. (The displayed menu varies depending on the model.)

[Power]

Changes the settings related to power consumption.

[Initial setup]

Sets up the basic features such as network and channels for first time use.

[Retail mode settings]

Enriches the display for shop front use by setting [Demo mode], etc.

* Only TVs with a built-in MIC

[116] Settings

Remotes & Accessories

- 1 Press the HOME button, then select [Settings] — [Remotes & Accessories] — the desired option.

Available options

[Bluetooth settings]

Setup for registering/deregistering Bluetooth devices.

[Remote control]

Setup for pairing the Voice Remote Control.

[117] Settings

Timers

To set the on timer

On timer automatically turns on the TV at a specific time, such as when a programme that you want to watch comes on. It also allows you to use the TV as an alarm clock.

- 1 Press the HOME button, and select ⌚ (Timers icon) — [On timer] — the desired option.

To set the sleep timer

Sleep timer automatically turns off the TV after a preset time.

- 1 Press the HOME button, and select ⌚ (Timers icon) — [Sleep timer] — the desired option.

Note

- When you turn off the TV and turn it on again, [Sleep timer] is reset to [Off].
-

[118]

Troubleshooting

[Start here Experiencing trouble? Start here.](#)

[Picture \(quality\)/screen](#)

[Keyboard](#)

[Broadcast reception](#)

[Sound](#)

[Network \(Internet/home\)/apps](#)

[Remote control/accessories](#)

[Power](#)

[Connected devices](#)

[USB HDD recording](#)

[LED](#)

[119] Troubleshooting

Start here

[Self diagnostics](#)

[Software updates](#)


[If a full reset \(restart\) of the TV is required](#)

[Frequently Asked Questions for Troubleshooting](#)

[120] Start here | Start here

Self diagnostics

Check if the TV is working properly.

- 1 Press the HOME button, select  (Apps icon) from the Home Menu, and select [Help] from the apps list.**
If the supplied remote control has a HELP button, press the HELP button.
- 2 Select [Status & Diagnostics] — [Self diagnostics].**

Hint

You can also check the following symptoms in [Status & Diagnostics].

- [Internet connectivity symptoms]
- [External device symptoms]
- [Picture/Sound symptoms]

If the problem persists, try the following.


- Reset (restart) the TV. For details, refer to [If a full reset \(restart\) of the TV is required](#).
 - Check and try [Software updates](#).
 - [Support Site](#)
-

[121] Start here | Start here

Software updates

Sony will provide software updates from time to time in order to enhance functionality and provide users with the latest TV experience. The easiest way to receive software updates is via an internet connection to the TV.

To check for software updates automatically

- 1 Press the HOME button, select  (Apps icon) from the Home Menu, and select [Help] from the apps list.**
If the supplied remote control has a HELP button, press the HELP button.
- 2 Enable [Automatically check for update] in [Status & Diagnostics] — [System software update].**

Hint

- To update the software manually, select [Software update].
- You can check the BRAVIA notifications or support website for list of changes made by the software update.

Note

- When [Automatically check for update] is disabled, the TV cannot receive notifications even when a software update is available.

Updating software via USB storage device

If you do not have a network connection, you can also update the software by using a USB storage device. Use your computer to download the latest software from the Sony support website onto a USB storage device. Insert the USB storage device to a USB port on the TV and the software update will start automatically.

If you will update the TV software by using a USB storage device, you should read the cautions for update by USB storage device on the website.

For more about the support site, please see the [Support Site](#) page.

Related topics

- [Connecting to a Network](#)

[122] Start here | Start here

If a full reset (restart) of the TV is required

If you have trouble such as the picture not displaying on the screen or the remote control not working, reset the TV with the following procedure. If the problem persists, try the factory reset procedure below.

If an external USB device is connected to the TV, disconnect the USB device from the TV before resetting.

Power Reset

1 Restart the TV with the remote control.

Press and continue holding the power button on the remote control for about 5 seconds until the TV restarts (a message shutting down will appear). (Depending on your model/region/country, you can also press and hold the power button on the remote control for about 2 seconds and then select [Restart] from the TV screen.) The TV will turn off and restart automatically after about one minute.

2 Unplug the AC power cord (mains lead).

If the problem persists after step 1, unplug the TV power cord (mains lead) from the electrical outlet. Then press the power button on the TV, and release it. Wait for 2 minutes, and plug the power cord (mains lead) back into the electrical outlet.

Hint

- TV models with 1 button on the TV (power button only) can also be restarted using the power button. Press the power button on the TV to display the operation menu, select [Restart] in the menu, and then press and hold the power button to restart the TV.
- Your personal settings and data will not be lost after the TV restarts.

Factory data reset

If the problem persists after a power reset, try a factory data reset.

Note

Performing a factory reset will delete all of the TV's data and settings (such as Wi-Fi and wired network setting information, Google account and other login information,

Google Play and other installed apps).

1 Press the HOME button, then select [Settings] — [Device Preferences] — [Reset] — [Factory data reset].

2 Select [Erase everything].

If you have set a PIN code on your TV, you will be prompted to input it when you select [Erase everything].

After the factory reset process completes successfully, the TV will start the Initial Setup wizard. You must agree to the Google Terms of Service and Google Privacy Policy.

[123] Start here | Start here

Frequently Asked Questions for Troubleshooting

For troubleshooting information, you can also refer to “Frequently Asked Questions” in our support site below.

- <http://www.sony.net/androidtv-faq/>

[124] Troubleshooting

Picture (quality)/screen

No colour/Dark picture/Colour is not correct/Picture is too bright.

Distorted picture./The screen flickers.

The screen suddenly changes to a video you do not recognise while watching TV.

There are banners/tickers at the top or bottom of the screen.

High resolution HDR pictures are not displayed.

A message about an app asking for permission to access a TV function is displayed.

OLED panel (only models equipped with an OLED panel)

[125] Picture (quality)/screen | Picture (quality)/screen

No colour/Dark picture/Colour is not correct/Picture is too bright.

- Check the antenna (aerial)/cable connection.
- Connect the TV to the AC power (mains), and press the power button on the TV or the remote control.
- Press the HOME button, and select [Settings] — [Display & Sound] — [Picture] to make adjustments.

For details, refer to [Adjusting the picture quality](#) page.

- If you set [Power saving] to [Low] or [High], the black level will be enhanced. Press the HOME button, then select [Settings] — [Device Preferences] — [Power] — [Power saving] to [Off] to brighten the screen.

Note

- Picture quality depends on the signal and content.
- The picture quality may improve if you change it in [Picture] under [Settings].
Press the HOME button, and select [Settings] — [Display & Sound] — [Picture] — [Brightness], and adjust [Brightness] or [Contrast].

Related topics

- [Display & Sound](#)

[126] Picture (quality)/screen | Picture (quality)/screen

Distorted picture./The screen flickers.

Check the connection and position of the antenna (aerial) and peripheral devices

- Check the antenna (aerial)/cable connection.
- Keep the antenna (aerial)/cable away from other connecting cables.
- When installing an optional device, leave some space between the device and the TV.
- Make sure that the antenna (aerial) is connected using a high quality 75-ohm coaxial cable.

Check the [Motion] setting

- Press the HOME button, and select [Settings] — [Display & Sound] — [Picture] — [Motion] — [Motionflow] — [Off].
- Change the current setting of [Film mode] to [Off].
Press the HOME button, and select [Settings] — [Display & Sound] — [Picture] —

[Motion] — [Film mode].

- Check the [Analogue] settings.

Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Manual tuning] — [Analogue].

- Disable [LNA] to improve picture reception. ([LNA] may not be available depending on your situation/region/country.)
- Perform [AFT] to improve picture for analogue reception.
(Availability of [Analogue] and its options may vary depending on the region/country/situation.)

Related topics

- [Ghosting or double images appear.](#)

[127] Picture (quality)/screen | Picture (quality)/screen

The screen suddenly changes to a video you do not recognise while watching TV.

In this case, the TV might be in demo mode. Try exiting demo mode.

- Press the HOME button on the remote control and select [Settings] — [Device Preferences] — [Retail mode settings]. Disable [Demo mode] and [Picture reset mode].

[128] Picture (quality)/screen | Picture (quality)/screen

There are banners/tickers at the top or bottom of the screen.

In this case, the TV might be in demo mode. Try exiting demo mode.

- Press the HOME button on the remote control and select [Settings] — [Device Preferences] — [Retail mode settings]. Disable [Demo mode] and [Picture reset mode].

[129] Picture (quality)/screen | Picture (quality)/screen

High resolution HDR pictures are not displayed.

The following are required to watch high resolution HDR pictures such as 4K (50p/60p)*.

- Connect the 4K (50p/60p)* playable device.
- Use a Premium High Speed HDMI Cable(s) that supports 18 Gbps.

- Set [HDMI signal format] to [Enhanced format] by selecting [Settings] — [Watching TV] — [External inputs] — [HDMI signal format] — the HDMI terminal you want to set.
- Check whether the connected device has the latest settings or firmware.

* Availability depends on your model/region/country.

[130] Picture (quality)/screen | Picture (quality)/screen

A message about an app asking for permission to access a TV function is displayed.

- Select whether to allow or deny the app access to the displayed function.
 - You can check the list of app permissions categorized by TV function and change permission settings for each app. Press the HOME button, select [Settings] — [Apps] — [App permissions] — the desired TV function.
-

[131] Picture (quality)/screen | Picture (quality)/screen

OLED panel (only models equipped with an OLED panel)

The screen becomes darker after a certain period of time. (only models equipped with an OLED panel).

The message [Panel refresh did not finish] is displayed. (only models equipped with an OLED panel).

You are concerned about an image retention. (only models equipped with an OLED panel).

A white line appears on the screen. (only models equipped with an OLED panel).

[132] OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel)

The screen becomes darker after a certain period of time. (only models equipped with an OLED panel)

- If the whole image or part of the image remains still, the screen will gradually become darker to reduce image retention. This is a feature to protect the panel, and is not a

malfunction.

[133] OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel)

The message [Panel refresh did not finish] is displayed. (only models equipped with an OLED panel)

If the TV is turned on, the AC power cord (mains lead) is unplugged, or the ambient temperature falls outside of the range between 10°C and 40°C during the panel refresh, the process will not complete and this message will appear. Start the procedure again from the beginning.

Hint

- The panel refresh process takes about an hour to finish.

[134] OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel)

You are concerned about an image retention. (only models equipped with an OLED panel)

If the same image is displayed repeatedly or for long periods of time, image retention may occur. This issue is not a malfunction.

The TV has two functions, [Pixel shift] and [Panel refresh], that are designed to reduce image retention.

You can perform a [Panel refresh] when necessary.

- 1 **Press the HOME button, then select [Settings] — [Display & Sound] — [Expert panel settings] — [Panel refresh].**

Hint

- [Pixel shift] is a feature that helps prevent image retention by automatically moving the image at fixed intervals. Under normal circumstances, keep this option enabled.

- To reduce image retention, we recommend that you turn off the TV on a daily basis for more than four hours using the remote control or the power button on the TV.

Note

- Manually perform panel refresh only when image retention is particularly noticeable. Avoid performing it more than once a year because it may affect the usable life of the panel.
- Images that include clocks and bright colours easily cause image retention. Avoid displaying these types of images for long periods of time, otherwise image retention may occur.

[135] OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel) | OLED panel (only models equipped with an OLED panel)

A white line appears on the screen. (only models equipped with an OLED panel)

- The panel refresh feature is running. A white line may be displayed on the screen during the panel refresh. This is not a malfunction of the TV.

Hint

- The panel refresh process takes about an hour to finish.
- A panel refresh can be performed when the room temperature is between 10°C and 40°C. If any of the following occurs during the panel refresh, the process will not finish and a message will be displayed.
 - The room temperature falls outside of this range.
 - The TV is turned on.
 - The power cord is disconnected.

If the message is displayed, check the temperature of the room, etc.

[136] Troubleshooting

Keyboard

You cannot operate the current screen after the on-screen keyboard is displayed.

- To return to operation of the screen behind the on-screen keyboard, press the BACK button on the remote control.

[137] Troubleshooting

Broadcast reception

Check these things first to troubleshoot your TV reception.

Block noise or an error message appears and you cannot watch broadcasts.

Ghosting or double images appear.

Only snow noise or a black picture appears on the screen.

There is picture or sound noise when viewing an analogue TV channel.

Some channels are blank.

Poor reception or poor picture quality with digital broadcasts.

You cannot view digital channels.

Not all analogue channels are tuned.

You cannot view satellite channels.

Some digital channels are missing.

You want to tune your satellite dish.

[138] Broadcast reception | Broadcast reception

Check these things first to troubleshoot your TV reception.

- Make sure that the antenna (aerial) cable is firmly connected to the TV.
 - Make sure that the antenna (aerial) cable is not loose or disconnected.
 - Make sure that the cable or cable connector of antenna (aerial) is not damaged.
- Select terrestrial/cable service by pressing TV on the remote control, and then select [Digital] if the broadcasting service is not displayed. (Except when watching YouView)
- A terrestrial signal might be suppressed if there is a strong signal nearby.
Disable the [LNA] (Except Single tuner models) setting in [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Advanced settings].
- After moving to a new house or trying to receive new services, select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Auto tuning], and follow the on-screen instructions to reconfigure the necessary settings.
- To watch streaming content, connect the TV to the Internet.

Hint

- For more information, please visit the Sony support website.

[Support Site](#)

Related topics

- [Using Wi-Fi to connect the TV to the Internet/Network](#)
- [Connecting to a network using a LAN cable](#)

[139] Broadcast reception | Broadcast reception

Block noise or an error message appears and you cannot watch broadcasts.

- Make sure that the antenna (aerial) cable is connected to the correct ports (at the TV/connected devices/wall).
- Make sure that the cable is not old or that the inside of the connector is not short-circuited.

[140] Broadcast reception | Broadcast reception

Ghosting or double images appear.

- Check cable or antenna (aerial) connections.
- Check the antenna (aerial) location and direction.
- Press the HOME button, and select [Settings] — [Display & Sound] — [Picture] — [Motion] — [Motionflow] — [Off].

Related topics

- [Distorted picture./The screen flickers.](#)
- [Check these things first to troubleshoot your TV reception.](#)

[141] Broadcast reception | Broadcast reception

Only snow noise or a black picture appears on the screen.

- Check if auto tuning is performed.

- Check if the antenna (aerial) is broken or bent.
- Check if the antenna (aerial) has reached the end of its serviceable life (3-5 years for normal use, 1-2 years at a seaside location).

Related topics

- [Check these things first to troubleshoot your TV reception.](#)

[142] Broadcast reception | Broadcast reception

There is picture or sound noise when viewing an analogue TV channel.

- Check the [Analogue] setting.

Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Manual tuning] — [Analogue].

- Perform [AFT] to obtain better picture and sound reception. (Option name differs depending on your region/country.)
- Set [Audio filter] to [Off], [Low] or [High] to improve sound for analogue reception.
- Disable [LNA] to improve picture reception. ([LNA] may not be available depending on your situation/region/country.)
- Make sure that the antenna (aerial) is connected using a high quality 75-ohm coaxial cable.
- Keep the antenna (aerial) cable away from other connecting cables.

Related topics

- [Check these things first to troubleshoot your TV reception.](#)

[143] Broadcast reception | Broadcast reception

Some channels are blank.

- The channel is for scrambled/subscription service only. Subscribe to a pay TV service.
- The channel is used only for data (no picture or sound).
- Contact the broadcaster for transmission details.

Related topics

- [Check these things first to troubleshoot your TV reception.](#)

[144] Broadcast reception | Broadcast reception

Poor reception or poor picture quality with digital broadcasts.

- Change the position, direction and angle of the terrestrial television antenna (aerial) to maximise the antenna (aerial) signal level. Make sure that the direction of the antenna (aerial) is not changed unintentionally (such as by wind).
- If you are using a TV signal booster, adjust its signal gain.
- If equipment (such as a TV signal distributor) is connected between the antenna (aerial) and the TV, it may affect the TV reception. Directly connect the antenna (aerial) and the TV to check if the reception is improved.
- Poor weather conditions can affect satellite broadcast systems. Wait for the weather to clear. (Satellite compatible models only)

Related topics

- [Check these things first to troubleshoot your TV reception.](#)

[145] Broadcast reception | Broadcast reception

You cannot view digital channels.

- Ask a local installer if digital transmissions are provided in your area.
- Upgrade to a higher gain antenna (aerial).

Related topics

- [Check these things first to troubleshoot your TV reception.](#)
- [Some digital channels are missing.](#)

[146] Broadcast reception | Broadcast reception

Not all analogue channels are tuned.

- Try to preset channels manually by configuring the settings. Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Manual tuning] — [Analogue]. (Availability of [Analogue] and its options may vary depending on your region/country/situation.)

Related topics

- [Some digital channels are missing.](#)

[147] Broadcast reception | Broadcast reception

You cannot view satellite channels.

- Ask a local installer if satellite services are provided in your area.
- Check the satellite cable connection.
- When [No signal. LNB overload detected. Please turn off your TV and check the satellite connection.] message is displayed, unplug the mains lead. Then, ensure the satellite cable is not damaged and the satellite signal line is not short-circuited in the satellite connector.
- Check your LNB device and settings.
- If your TV has both “MAIN” and “SUB” jacks (sockets), and is not set to satellite twin tuner , the jack (socket) labelled “SUB” cannot be used. In this case, connect your satellite antenna (aerial) to the jack (socket) labelled “MAIN.”

Related topics

- [You want to tune your satellite dish.](#)

[148] Broadcast reception | Broadcast reception

Some digital channels are missing.

To change the tuning range (available depending on your region/country)

Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Advanced settings] — [Tuning range].

[Normal]

Searches for available channels within your region/country.

[Extended]

Searches for available channels regardless of region/country.

To update digital services

You can run [Auto tuning] after moving to a new residence, changing service providers, or to search for newly launched channels.

Configuring automatic service updates

We recommend that [Auto service update] is enabled to allow new digital services to be added automatically as they become available.

- 1 To enable [Auto service update], press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Advanced settings] — [Auto service update].**

If disabled, you will be notified of new digital services by an on-screen message and the services will not be automatically added.

Hint

- The availability of this function depends on your region/country. If unavailable, perform [Auto tuning] to add new services.

Related topics

- [Check these things first to troubleshoot your TV reception.](#)
- [You cannot view digital channels.](#)

[149] Broadcast reception | Broadcast reception

You want to tune your satellite dish.

If you have a satellite dish installed, you can view satellite broadcasts and determine your type of installation by configuring the tuning settings.

To tune your satellite

- [Receiving satellite broadcasts](#)

Related topics

- [Check these things first to troubleshoot your TV reception.](#)

[150] Troubleshooting

Sound

[No sound but good picture.](#)

[Audio noise.](#)

[No audio or low audio with a home theatre system.](#)

[Distorted sound.](#)

[You want to output sound from both the headphones/Bluetooth audio device/audio system and the TV speakers.](#)

[You are concerned about a delay between the picture and sound.](#)

[No TV sounds such as operation sound or audio response.](#)




[You cannot establish an eARC connection.](#)

[You cannot use voice search with the built-in MIC \(only TVs with a built-in MIC\).](#)

[You can hear a slight noise from the TV speakers \(only models with TV centre speaker mode\).](#)

[151] Sound | Sound

No sound but good picture.

- Check the antenna (aerial)/cable connection.
- Connect the TV to the AC power (mains), and press the power button on the TV or the remote control.
- Check the volume control.
- Press  (Mute) or  (Volume) + button to cancel muting.
- Press the  (Quick Settings) button, then select [Speakers] — [TV speakers].
Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [Speakers] — [TV speakers].
- If headphones or Bluetooth audio devices are connected, sound is not output from the TV speakers or audio system connected via eARC/ARC. Remove the headphones or disconnect the Bluetooth audio device.

Related topics

- [No audio or low audio with a home theatre system.](#)

[152] Sound | Sound

Audio noise.

- Make sure that the antenna (aerial) is connected using a high quality 75-ohm coaxial cable.
- Keep the antenna (aerial) cable away from other connecting cables.
- To avoid TV interference, make sure to use an undamaged antenna (aerial) cable.

Related topics

- [Distorted sound.](#)

[153] Sound | Sound

No audio or low audio with a home theatre system.

- Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [Speakers] — [Audio system].
- If the audio system is not compatible with Dolby Digital or DTS, set [Settings] — [Display & Sound] — [Audio output] — [Digital audio out] to [PCM].
- If you select an analogue (RF) channel and pictures are not displayed correctly, you will need to change the TV broadcast system. Press the HOME button, then select [Settings] — [Watching TV] — [Channels] — [Channel setup] — [Manual tuning] — [Analogue] — [TV system]. (Availability of [Analogue] or option name differs depending on the region/country/situation.)
- Check if the [Digital audio out volume] setting of the TV is at maximum.

Press the HOME button, then select:

[Settings] — [Display & Sound] — [Audio output] — [Digital audio out volume]

- When using HDMI input with Super Audio CD or DVD-Audio, DIGITAL AUDIO OUT (OPTICAL) may not provide an audio signal.

Related topics

- [Audio noise.](#)
- [Connecting an audio system](#)

[154] Sound | Sound

Distorted sound.

- Check the antenna (aerial)/cable connection.
- Keep the antenna (aerial)/cable away from other connecting cables.
- Keep the TV away from electrical noise sources such as cars, hair-dryers, Wi-Fi units, mobile phones, or optical devices.
- When installing an optional device, leave some space between the device and TV.
- Perform [AFT] in [Manual tuning] — [Analogue] to improve sound for analogue reception.

(Availability of [Analogue] and its options may vary depending on the region/country/situation.)

- Set [Audio filter] to [Low] or [High] to improve sound for analogue reception. ([Audio filter] may not be available depending on your region/country.)

Related topics

- [Audio noise.](#)

[155] Sound | Sound

You want to output sound from both the headphones/Bluetooth audio device/audio system and the TV speakers.

To output sound from both the headphones/Bluetooth audio device and TV speakers

The TV cannot output sound from both the headphones or Bluetooth audio device and the TV speakers at the same time.

To output sound from both an audio system connected via eARC/ARC and TV speakers

Sound can be output from both an audio system connected to the TV and the TV speakers at the same time by satisfying the following conditions.

- Connecting the TV and audio system using a digital optical cable
- Setting [Digital audio out] to [PCM]

For details about digital optical cable connections, refer to the [Connecting an audio system](#) page.

[156] Sound | Sound

You are concerned about a delay between the picture and sound.

If a Bluetooth audio device is connected

The picture and sound do not match because the sound is delayed due to the properties of Bluetooth. You can adjust the output timing of the picture and sound with the A/V sync setting.

- 1 Set [A/V sync] to [Auto] or [On]. Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [A/V sync].

If a specific audio system is connected with an HDMI cable

You can adjust the output timing of the picture and sound. For details about supported models, refer to the support site.

- [Support Site](#)

Related topics

- [Adjusting the AV sync setting](#)
- [Adjusting an audio system](#)

[157] Sound | Sound

No TV sounds such as operation sound or audio response.

If the TV is connected via eARC or [Pass through mode] is set to [Auto], TV sounds such as those from remote control operation or voice responses are not output because audio

signals from the HDMI input are passed through to the eARC audio system. To output those sounds from the TV, try the following.

- Stop watching the HDMI input device.
- Set [eARC mode] to [Off].

Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [eARC mode] — [Off].

- Set [Pass through mode] to [Off].

Press the HOME button, then select [Settings] — [Display & Sound] — [Audio output] — [Pass through mode] — [Off].

[158] Sound | Sound

You cannot establish an eARC connection.

- [eARC mode] does not work when the text-to-speech function for on-screen text within the TV's accessibility features is enabled.
- Connect the audio system to an HDMI cable with Ethernet.
- Connect the audio system to the TV's HDMI input terminal bearing the text "ARC".
- Configure the settings as follows.
[Settings] — [Display & Sound] — [Audio output] — [eARC mode] — [Auto]
[Settings] — [Display & Sound] — [Audio output] — [Speakers] — [Audio system]
- Enable the audio system's eARC feature.

Related topics

- [Connecting an audio system](#)

[159] Sound | Sound

You cannot use voice search with the built-in MIC (only TVs with a built-in MIC).

The voice recognition performance of the built-in MIC may degrade in the following cases.

- When eARC features are enabled
- When a sound bar is connected
- When [Pass through mode] is set to [Auto]

[160] Sound | Sound

You can hear a slight noise from the TV speakers (only models with TV centre speaker mode).

Models with TV centre speaker mode have a CENTER SPEAKER IN terminal in the back.

If an AV receiver is not connected to the CENTER SPEAKER IN terminal on the TV, you may hear a slight noise from the TV speakers when [Speakers] is set to [Audio system].

If you are concerned about the noise, disable the following setting:

Press the HOME button, then select:

[Settings] — [TV centre speaker mode] in [Display & Sound] — [Audio output].

[161] Troubleshooting

Network (Internet/home)/apps

The TV cannot connect to the Internet/Network.

The picture and/or sound quality from streaming apps is poor.

Your TV cannot connect to the server.

You can connect to the Internet, but not to certain apps and services.

[162] Network (Internet/home)/apps | Network (Internet/home)/apps

The TV cannot connect to the Internet/Network.

If the wireless network does not connect or disconnects, try the following.

- Press the HOME button and check that the following setting is enabled.
[Settings] — [Network & Internet] — [Wi-Fi]
- Check the installation location of the TV and wireless router. Signal condition may be affected by the following:
 - Other wireless devices, microwaves, fluorescent lights, etc., are placed nearby.
 - There are floors or walls between the wireless router and TV.
- Turn the wireless router off and then on again.
- If the network name (SSID) of the wireless router to which you want to connect is not displayed, select [Add new network] to enter a network name (SSID).

If the problem is not resolved even after the procedures above or if you cannot connect even with a wired network, check the status of the network connection.

Checking the status of the network connection

- 1 Press the HOME button, then select [Settings] — [Network & Internet] — [Network status] — [Check Connection].

Check your network connections and/or server's instruction manual for connection information, or contact the person who set up the network (network administrator).

Hint

- The solution varies depending on the network status check. For solutions based on each issue, see "[Frequently Asked Questions](#)" on the Sony Support Site.

Note

- If the LAN cable is connected to an active server and the TV has acquired an IP address, check your server's connections and configurations.

Press the HOME button, then select [Settings] — [Network & Internet] — [Network status].

Related topics

- [Using Wi-Fi to connect the TV to the Internet/Network](#)
- [Connecting to a network using a LAN cable](#)

[163] Network (Internet/home)/apps | Network (Internet/home)/apps

The picture and/or sound quality from streaming apps is poor.

- Quality depends on the original video provided by the video content provider and your connection bandwidth.
- To enjoy watching Internet streaming videos, a network with a fast and stable line speed is necessary. In general, speeds that resemble the following are necessary:
 - Streaming standard definition (SD) Internet video: 2.5 Mbps
 - Streaming high definition (HD) Internet video: 10 Mbps
 - Streaming Ultra HD (4K) Internet video: 25 Mbps
- The wireless network connection quality varies depending on the distance or obstacles (e.g., wall) between the TV and the wireless router, environmental interference, and the

quality of the wireless router. In this case, use a wired connection for the Internet, or try the 5GHz band.

- The 5GHz band may not be supported depending on your region/country. If the 5GHz band is not supported, the TV can only connect to a wireless router using the 2.4GHz band.
- When using a wireless network, keep wireless devices close together or avoid obstacles.
- Keep devices that emit RF interference (such as microwaves) away from the TV and wireless router, or turn off such devices.
- Audio is not output for videos without audio.

Hint

- For more information, please visit the Sony support website.

[Support Site](#)

Related topics

- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)

[164] Network (Internet/home)/apps | Network (Internet/home)/apps

Your TV cannot connect to the server.

- Check the LAN cable or wireless connection to your server and your TV.
- Check if your network is properly configured on your TV.
- Check your LAN cable/wireless connection or your server. The TV may have lost connection with the server.
- Perform [Server diagnostics] to check if your media server is communicating properly with the TV. Press the HOME button, then select [Settings] — [Network & Internet] — [Home network setup] — [Server diagnostics].

Related topics

- [Home network features](#)
- [The TV cannot connect to the Internet/Network.](#)

[165] Network (Internet/home)/apps | Network (Internet/home)/apps

You can connect to the Internet, but not to certain apps and services.

- The date and time settings of this TV may be incorrect. Depending on certain apps and services, you may not be able to connect to those apps and services if the time is incorrect.

If the time is incorrect, press the HOME button, then select [Settings] — enable [Automatic date & time] in [Device Preferences] — [Date & time].

- Check that the LAN cable and AC power cord (mains lead) of the router/modem* has been properly connected.

* Your router/modem must first be setup to connect to the Internet. Contact your Internet service provider for router/modem settings.

- Try using apps later. The app content provider's server may be out of service.

Hint

- For more information, please visit the Sony support website.
[Support Site](#)

Related topics

- [Connecting to a network using a LAN cable](#)
- [Using Wi-Fi to connect the TV to the Internet/Network](#)

[166] Troubleshooting

Remote control/accessories

The remote control does not operate.

You want to disable the remote control backlight. (only remote controls that feature backlight).

[167] Remote control/accessories | Remote control/accessories


The remote control does not operate.

Check if the TV is working properly


- Press the power button on the TV to determine if the problem is with the remote control or not. For the location of the power button, refer to the Reference Guide supplied with the TV.
- If the TV is not working, try resetting it.
If a full reset (restart) of the TV is required

Check if the remote control is working properly

- Point the remote control at the remote control sensor located at the front of the TV.
- Keep the remote control sensor area clear from obstacles.
- Fluorescent light can interfere with remote control operation; try turning off any fluorescent light.
- Check that the orientation of each battery matches the positive (+) and negative (-) symbols in the battery compartment.
- Battery power may be low. Remove the remote control cover and replace the batteries with new ones.
 - **Sliding type**

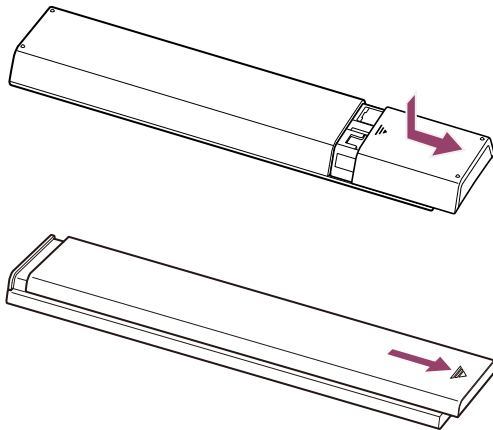

- **Push-release type**

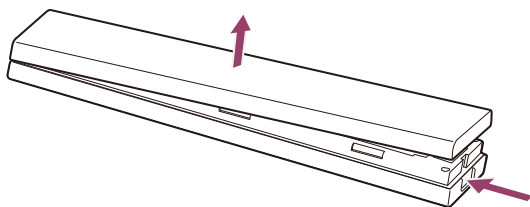

Note

- Remote controls with a MIC button are connected to the TV using Bluetooth. Radio interference may occur in the following situations and cause issues such as poor operation of microphone or remote control because Bluetooth radio waves use the same frequency as radio waves emitted from microwaves and wireless LANs (IEEE802.11b/g/n).

- There are people or obstacles (such as metal objects or walls) between the TV and remote control.
- A microwave is being used nearby
- There is a wireless LAN access point nearby
- The TV and remote control are unpaired

In these cases, try the following solutions.

- Use the remote control closer to the TV
- Remove obstacles between the TV and remote control
- Use the remote control when a microwave is not in use
- Turn off other Bluetooth devices
- Check the TV's Bluetooth setting and turn it on and off

Press the HOME button and select the following in order.

If [Settings] — [Remotes & Accessories] — [Bluetooth settings] — [Bluetooth] is disabled, enable it. If it is enabled, disable and then enable it again.

- Set wireless LAN access points and microwaves at least 10 m away from the TV
- If the 5 GHz band (IEEE802.11a) is available in the wireless LAN, connect to the 5 GHz band
- Pair the remote control again

Press the HOME button and select the following in order.

[Settings] — [Remotes & Accessories] — [Remote control] — [Connect via Bluetooth] —

[Connect a new remote] — follow the on-screen instructions to reconnect the remote control.

If you cannot operate the TV with the supplied remote control, select the above in order until [Connect a new remote] using another Sony TV's remote control, and then try connecting again with the supplied remote control.

- Depending on your model, a Bluetooth remote control is supplied and already paired with the TV. At the time of shipment, the supplied paired remote control cannot be used to operate other TVs. When checking remote control operation, use with the TV with which the remote control was supplied.

Reset the remote control

If the remote control does not operate correctly due to poor battery contact or static electricity, the problem may be resolved by resetting the remote control.

- 1 Remove the batteries from the remote control.**
- 2 Press the power button on the remote control for three seconds.**
- 3 Install new batteries into the remote control.**

If the problem persists, refer to [If a full reset \(restart\) of the TV is required](#) and [Frequently Asked Questions for Troubleshooting](#) pages.

Note

- When you unplug the TV and plug it in again, the TV may not be able to turn on for a while, even if you press the power button on the remote control or the TV. This is because it takes time to initialise the system. Wait for about 10 to 20 seconds, then try again.


Related topics

- [Using the remote control](#)
- [Using the remote control microphone](#)

[168] Remote control/accessories | Remote control/accessories

You want to disable the remote control backlight. (only remote controls that feature backlight)

You can turn off the remote control backlight.

- 1 **Press and hold the  (Volume) - button and HOME button on the remote control at the same time for 2 seconds.**

Release when the MIC LED on the remote control lights up twice.

To enable the remote control backlight again, perform the procedure above.

[169] Troubleshooting

Power

The TV cannot be turned off using the remote control.

The TV turns off automatically.

The TV turns on automatically.

After turning on the TV, it turns off immediately. (only models equipped with an OLED panel)

The TV does not turn on.

[170] Power | Power

The TV cannot be turned off using the remote control.


The batteries in the remote control may be depleted. Replace them with new ones or turn off the TV using the power button on the TV.

You can press and hold the power button on the TV to turn it off.

Note

- The location of the power button on the TV varies depending on your model/country/region. For the location of the button, refer to the Reference Guide (booklet) included with the TV.

Example of model with the power button under the LED

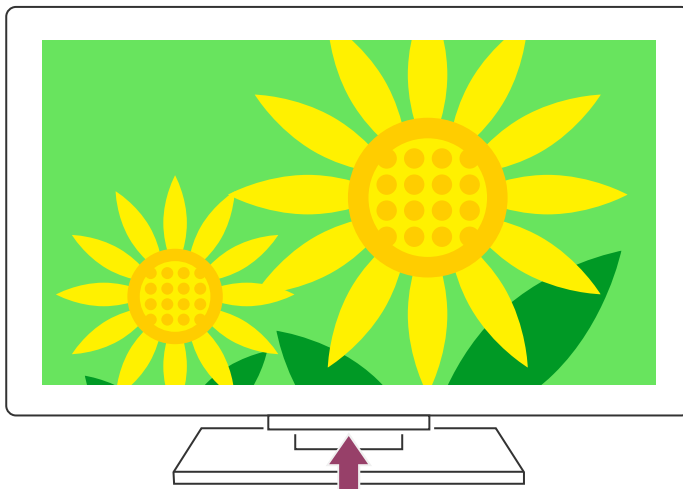

Hint

- For TV models with 1 button on the TV (power button only), you can press the power button on the TV to display the operation menu and adjust the volume or change channels.
- When the battery level of the remote control is low, you will see a notification on the HOME menu.

Related topics

- [The remote control does not operate.](#)
- [If a full reset \(restart\) of the TV is required](#)
- [Home menu](#)
- [Using the Quick Settings](#)

The TV turns off automatically.

- The screen may have been turned off due to [Sleep timer] settings.
- Check the [Duration] setting of [On timer].
- Check if [Idle TV standby] in [Power] is activated.
- The screen may have been turned off due to [Screen saver] settings.

Related topics

- [Timers](#)

[172] Power | Power

The TV turns on automatically.

- Check if the [On timer] is activated.
- Disable the [Auto TV on] setting in [BRAVIA Sync settings].

Related topics

- [BRAVIA Sync-compatible devices](#)
- [Timers](#)

[173] Power | Power

After turning on the TV, it turns off immediately. (only models equipped with an OLED panel)

In this case, the TV might be in picture reset mode. When picture reset mode is enabled, the TV turns off for about 10 minutes after it is turned on, and then turns on again to reduce image retention. This is not a malfunction of the TV.

Turn on the TV again using the remote control and disable picture reset mode.

- Press the HOME button on the remote control and select [Settings] — [Device Preferences] — [Retail mode settings]. Disable [Picture reset mode].

[174] Power | Power

The TV does not turn on.

Perform the procedures in the order below until the problem is solved.

1. Check if the TV turns on with the remote control.

Point the remote control at the sensor on the front of the TV and press the power button on the remote control.

Check if the TV turns on.

If the TV does not turn on, try resetting (restarting) the TV.

- If a full reset (restart) of the TV is required

2. Check if the TV turns on with the power button on the TV.

Press the power button on the TV and check if the TV turns on.

For the location of the power button, refer to the Reference Guide.

If the TV turns on with this procedure, there may be a problem with the remote control.

Refer to the following topic.

- The remote control does not operate.

3. Unplug the AC power cord (mains lead).

Unplug the TV power cord (mains lead) from the electrical outlet. Then press the power button on the TV and wait for 2 minutes, and plug the power cord (mains lead) back into the electrical outlet.

Hint

- When you unplug the TV and plug it in again, the TV may not be able to turn on for a while, even if you press the power button on the remote control or TV. This is because it takes time to initialise the system. Wait for about 10 to 20 seconds, then try again.

Related topics

- The remote control does not operate.
- If a full reset (restart) of the TV is required

[175] Troubleshooting

Connected devices

No picture from a connected device.

You cannot select a connected device in the Home Menu.

Certain programmes on digital sources display a loss of detail.

Photo images or folders take time to display.

You cannot find a connected BRAVIA Sync HDMI device.

You cannot turn off the TV box using the TV's remote control.

An external device (such as a TV box) cannot be controlled using the TV's remote control.
(TV box control compatible models only).


Some media files in the USB device or server are not displayed.

Operation cuts out, or a device does not work.

Some paid content cannot be played.

[176] Connected devices | Connected devices

No picture from a connected device.

- Turn the connected device on.
- Check the cable connection between the device and TV.
- Press the  (Input select) button to display the list of inputs, then select the desired input.
- Correctly insert the USB device.
- Make sure that the USB device has been properly formatted.
- Operation is not guaranteed for all USB devices. Also, operations differ depending on the USB device features or the video files being played.
- Change the HDMI signal format of the HDMI input that does not display a picture to standard format. Press the HOME button, then select [Settings] — [Watching TV] — [External inputs] — [HDMI signal format] — the HDMI input you want to set.

Related topics

- [Using the TV with Other Devices](#)

[177] Connected devices | Connected devices

You cannot select a connected device in the Home Menu.

- Check the cable connection.

Related topics

- [Using the TV with Other Devices](#)

[178] Connected devices | Connected devices

Certain programmes on digital sources display a loss of detail.

- Less detail than usual or artifacts (small blocks, dots or pixelation) may appear on the screen, due to the digital compression of the source content used by certain digital broadcasts and DVDs. The degree of visible artifacts depends on the clarity and resolution of the TV.

[179] Connected devices | Connected devices

Photo images or folders take time to display.

- Depending on the image dimension, file size, and number of files in a folder, some photo images or folders take time to display.
- Each time a USB device is connected to the TV, it may take up to a couple of minutes for the photos to display.

Related topics

- [No picture from a connected device.](#)

[180] Connected devices | Connected devices

You cannot find a connected BRAVIA Sync HDMI device.

- Check that your device is BRAVIA Sync-compatible.
- Make sure that [Control for HDMI] is set up on the BRAVIA Sync-compatible device and [BRAVIA Sync settings] — [BRAVIA Sync control] is set up on the TV.

Related topics

- [BRAVIA Sync-compatible devices](#)

[181] Connected devices | Connected devices

You cannot turn off the TV box using the TV's remote control.

TV box control compatible models have [TV box setup] in [Settings] — [Watching TV] — [External inputs].

- Press the TV button, then select [Remote control] — [Power (STB)].
-

[182] Connected devices | Connected devices

An external device (such as a TV box) cannot be controlled using the TV's remote control. (TV box control compatible models only)

TV box control compatible models have [TV box setup] in [Settings] — [Watching TV] — [External inputs].

- Make sure that your TV supports the external device.
- If you press and hold a button on the remote control, the operation may not work. Instead, try pressing the button repeatedly.
- Depending on the external devices, some buttons may not work.

Related topics

- [How to control the TV box using the TV remote control](#)

[183] Connected devices | Connected devices

Some media files in the USB device or server are not displayed.

- Unsupported files may not be displayed.
- All the folders/files may not be displayed depending on the system status.

Related topics

- [Supported files and formats](#)

[184] Connected devices | Connected devices

Operation cuts out, or a device does not work.

- Check if the device is turned on.
- Replace the batteries of the device.
- Re-register the device.
- Bluetooth devices use the 2.4GHz band, therefore communication speed may deteriorate or cut out occasionally due to wireless LAN interference.
If household electric appliances (e.g., microwaves or mobile devices) are placed nearby, radio wave interference is more likely to happen.
- The TV or device may not work on a metal rack due to wireless communication interference.
- For usable communication distances between the TV and other devices, refer to the instruction manuals of the devices.
- When multiple Bluetooth devices are connected to the TV, the quality of Bluetooth communication may deteriorate.

Related topics

- [Bluetooth devices](#)

[185] Connected devices | Connected devices

Some paid content cannot be played.

- The source device needs to meet HDCP (High-bandwidth Digital Content Protection) 2.0/2.1/2.2 standards.
Some pay contents may not be displayed via a source device which does not meet HDCP 2.0/2.1/2.2 standards.

[186] Troubleshooting

USB HDD recording

You cannot use a USB HDD device.

The USB HDD device cannot be registered.

Recording cannot be performed./Recording failed.

Recorded content disappeared.

You want to delete recorded content, but the delete icon is not displayed.

The USB HDD device operates even though it is not turned on.

[187] USB HDD recording | USB HDD recording

You cannot use a USB HDD device.

- Check that the USB HDD device is:

- connected properly.

Check that it is connected to the blue USB port labelled as “HDD REC”.

- turned on.
- registered to the TV.

To register the USB HDD device to the TV, press the HOME button, then select [Settings] — [Watching TV] — [Recording device setup] — [HDD registration].

- Connecting the USB HDD device via a USB hub is not supported.
- Perform [HDD performance check] to check that the USB HDD’s specifications meet the requirements.

Press the HOME button, then select [Settings] — [Watching TV] — [Recording device setup] — [HDD performance check].

Related topics

- [Information about using a USB HDD device for recording](#)

[188] USB HDD recording | USB HDD recording

The USB HDD device cannot be registered.

- Check if the USB HDD device is connected to the USB port (blue) indicated as “HDD REC”.
- If the USB HDD device is properly connected to the blue USB port, register it for recording again because it is already registered as a device for purposes other than recording (such as storage).

Note

- If there are devices connected to the USB1 and USB2 ports (only models with three USB ports), temporarily remove them while registering the USB HDD.

- 1 Press the HOME button, then select [Settings] — [Device Preferences] — [Storage].**
- 2 From [Device storage], select the USB HDD device you want to register for recording.**
- 3 Select [Register for recording].**
- 4 Follow the on-screen instructions to register the USB HDD device to the TV.**

- Use [HDD performance check] to check if the USB HDD device specifications meet the requirements.

To perform an [HDD performance check], press the HOME button, and then select [Settings] — [Watching TV] — [Recording device setup] — [HDD performance check].

[189] USB HDD recording | USB HDD recording

Recording cannot be performed./Recording failed.

- If the recording fails, the reason will be listed in [Recording error list]. Press the REC LIST button, then select [Recording error list] in [Timer list/Timer settings].
- Check the available space in the HDD. If very little space is left, delete unnecessary content.
- The following programmes cannot be recorded.
 - Copy-protected programmes
 - Analogue programmes
 - Programmes from external inputs (including programmes from a connected TV box)
 - Streaming content
- Timer recording may not be possible if the broadcasting time of the programmes is changed.

Related topics

- [Information about using a USB HDD device for recording](#)



[190] USB HDD recording | USB HDD recording

Recorded content disappeared.

- Recording cannot be performed if the AC power cord (mains lead) or connecting cables are disconnected while recording. Do not disconnect any cable while recording content. Otherwise, the content being recorded or all recorded content may be lost.

[191] USB HDD recording | USB HDD recording

You want to delete recorded content, but the delete icon is not displayed.

- If  (Delete icon) is not displayed for the recorded content, the recorded content is protected. You must disable protection before deleting the content.
To disable protection of the content, select the content whose protection you want to disable, and then select  (Unprotect icon).

Related topics

- [Watching/deleting recorded content](#)

[192] USB HDD recording | USB HDD recording

The USB HDD device operates even though it is not turned on.

- The connected USB HDD may spin or the device's LED indicator may light up while the TV obtains EPG data during standby/networked standby mode.

[193] Troubleshooting

LED

You want to disable the LED so that it does not light up or blink.

The Operational response LED blinks in red.

[194] LED | LED

You want to disable the LED so that it does not light up or blink.

You can use the settings below to turn off the LED.

To turn off the Operational response LED (white LED)

Press the HOME button, then select [Settings] — [Device Preferences] — [LED indicator] — disable [Operational response].

To turn off the Operational response LED (amber LED) (only TVs with a built-in MIC)

In [Settings] — [Device Preferences] — [LED indicator], disable [Built-in MIC LED].

Note

- The voice function LED that lights up and blinks when “Ok Google” is detected and communication with the server is in progress cannot be set so that it does not light up. (only TVs with a built-in MIC)

Related topics

- [How the LED lights up](#)

[195] LED | LED

The Operational response LED blinks in red.

Count how many times it flashes (interval time is three seconds).

Reboot the TV by disconnecting the AC power cord from the TV for two minutes, then turn on the TV.

If the problem persists, disconnect the AC power cord, and contact Sony Customer Support with the number of times the Operational response LED flashes.

[196]

Index

TV programmes

- [GUIDE](#)
- [Interactive broadcasts](#)
- [Satellite broadcasts](#)
- [Recording](#)
- [Channel setup](#)
- [Parental lock](#)

Picture/display

- [Picture-in-picture](#)
- [4K pictures](#)
- [HOME menu](#)
- [Picture](#)
- [Date & time](#)
- [Language](#)
- [Expert panel settings](#)
- [Pixel shift](#)
- [Panel refresh](#)

Sound/voice

- [Voice search, using](#)
- [Sound](#)

Remote control

- [Remote control, using](#)
- [Voice search](#)
- [HOME](#)
- [Quick Settings](#)
- [Inputs](#)
- [SYNC MENU](#)

Connections

- [Bluetooth](#)
- [Google Cast](#)
- [BRAVIA Sync](#)
- [Internet](#)

External devices

- [USB storage devices, recording with](#)
- [Blu-ray/DVD players, connecting](#)
- [USB memory devices, etc.](#)
- [Computers](#)
- [Digital cameras, camcorders](#)
- [Audio systems](#)

Apps

- [Moving to USB memory devices](#)
- [Google Play Store](#)
- [YouTube™](#)
- [Netflix](#)

File playback

- [Computers](#)
- [Supported files and formats](#)
- [Digital cameras, camcorders](#)

Other

- [Restart](#)
 - [System software update](#)
-